

**Sanyo**  
**Model# of Till:**

Conversion Instructions:

**ECR-325**

This till has a numeric printer and the number of the tax you have been using for GST is the number of the tax you will reprogram here.

**ECR-330****&****ECR-335****Verify where these buttons are on the keyboard:**

"GST Shift" (May also be labeled "Shift 1", "Shift 2" or "Shift 3")

"%1" (May also be labeled "% Disc" or %10 etc.

"#/NS" which is your no sale key

Insert a "P" key in the mode lock and turn the mode lock to "P".

Enter the key sequence below

00001000 "GST SHIFT" 060000 "%1" "#/NS"

Turn the mode key back to "R" and test.

*If you have add-on taxes and advertise tax included prices, you will have to change any pre-programmed prices also.*

**TEST Your Work:** Mode key in the "Reg" position.

Press 1000

Press a Dept button with GST or both taxes allocated to it.

If GST only, total with taxes should be \$10.60

If P&amp;G, total with taxes should be \$11.30

If all buttons are preset items, you should enter several sale items so that the total is \$10.00 or more and finalise the sale before voiding so that you have a receipt to check the GST calculation with a calculator.