Power Workholding

Power Workholding - Precision Vises - Zero Point Mounting - Assembly and Handling





OUR STORY

CARR LANE ROEMHELD MFG. CO.

In 1982 an independent joint venture was established to marry the proven product expertise of Roemheld with the marketing know-how and distribution network of Carr Lane Manufacturing. This partnership now offers to the American manufacturer the complete benefits of the finest in international power workholding combined with the best in local service and support.

After initial tests by many companies, both small and large, the word had spread confirming the quality and reliability obtained when using Roemheld Power Workholding products.

We invite you to review this catalog in depth and to call us with any questions about your applications. We at Carr Lane Roemheld welcome the opportunity to help you manufacture your quality product in the most productive way possible — with the world's most dependable workholding equipment.



Founded in 1952 in St. Louis, Missouri by Earl Walker to make standardized tooling components, Carr Lane Manufacturing has grown, through constant innovation, to become the foremost supplier to the American Machine Tool Industry. Now the most complete line available, Carr Lane Mfg. offers Jig and Fixture Components, Toggle Clamps, Hoist Rings, Alignment Pins, Drill Bushings, Spring Plungers, and Modular Fixturing. Setting the standard for American Tool Engineers, Carr Lane Manufacturing's catalog is recognized as the engineer's tooling reference.



Drawing upon a centuries-old tradition of German craftsmanship, metalworking was already well established in Laubach, Germany when the Roemheld family began to manage operations in 1870. Development of the hydraulic workholding components began in the early 1960's and soon grew to dominate the European market.

Today, Roemheld GmbH is by far the world leader in this productivity-enhancing technology, offering a tremendous range of types and sizes of superior design and the highest quality.






Fenton, MO 63026 (636) 386-8022

CARR LANE ROEMHELD MFG. CO.

Fittings & Accessories

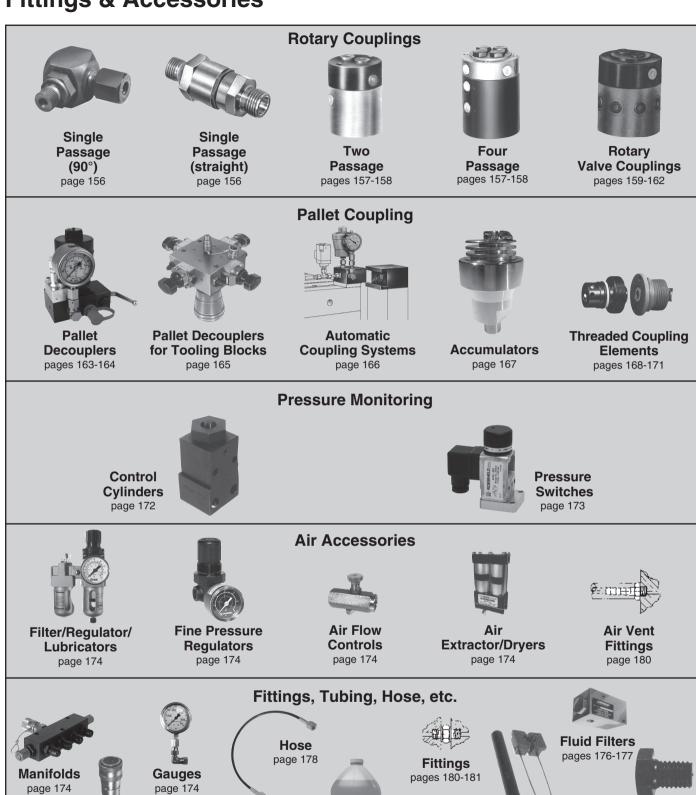



Quick

Disconnects

page 175

Tubing

page 178

CARR LANE ROEMHELD MFG. CO.

Tubing Installation

& Manifold Mounting

pages 179, 182-183

Sales — Phone (636) 386-8022 Fax (636) 386-8034 **Engineering** — Phone 1-800-827-2526 Web **www.clrh.com**

Contact

Bolts

page 184


Fluid

page 178

Rotary Couplings






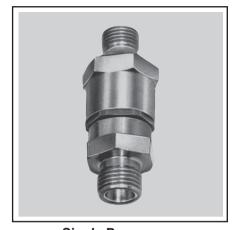



Single Passage — Straight

- Best choice for feeding fluid to rotating pallet changers, due to constant connection.
- · Ideal for rotary index tables.
- Also good for elbow connections that regularly swing through a small arc
- · Choice of elbow or straight version
- ** Do not use NPT fittings


MOUNTING: Mount at rotational center to prevent side loading. Screw into standard 1/4 BSPP port.

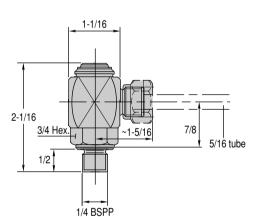


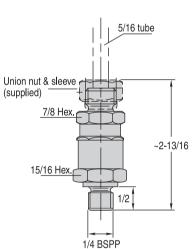

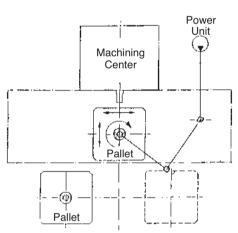

Machining-center pallet changer with continuous fluid feed using Rotary Couplings.

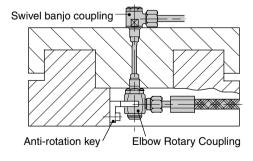

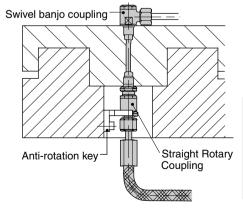

Number of passages	1
Operating pressure range (psi)	145 - 7250
Maximum rotational speed (RPM)	10
Max. seating torque (ft-lbs)	44
Starting torque at 7500 psi (ft-lbs)	1.0
Part No., Elbow	CLR-843-F
Part No., Straight	CLR-845-F



CARR LANE ROEMHELD MFG. CO.








Two Passage Symbol






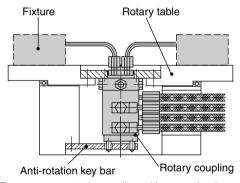

Four-passage rotary coupling with a reaction-bar to prevent stress on hose connections.

Two Passage

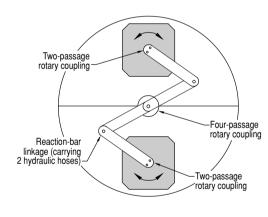

Number of passages

Max. flow rate (cu. in./min.)

Leakage rate (cu. in./hr.)

Weight (lbs)

Part No., 150-7250 psi

Rotary couplings are frequently used on horizontal machining centers with rotary pallet changers. A reaction-bar linkage holds the top portion of each two-passage coupling stationary while the bottom portion revolves freely. Couplings are not designed to carry load. Side load will cause excessive, uneven wear resulting in failure.

6

493

Four Passage Six Passage							
10-					1 1		
			<u> </u>				.80
		/	· c	ļ.,	-		
			Spee	4-			.60
Starting Torque 5					\Rightarrow		Max. Speed
(ft-lbs)		? {\	Torque				.40 (rpm)
		-باز:ا	怀、				
				7777		,	-20
	\vdash			\vdash			
0_							-0
0	1500		450 erating F		000 e (psi		0

HILMA = STARK

With Leakage Recirculation				
Weight (lbs)	6.1	12.1	15.9	
Part No., 150-7250 psi	CLR-9281-135	CLR-9284-135	CLR-9286-135	

Standard

2

493

.02

5.3

CLR-9281-136-F

CARR LANE ROEMHELD MFG. CO.

Sales — Phone (636) 386-8022 Fax (636) 386-8034 Engineering — Phone 1-800-827-2526 Web www.clrh.com

4

493

.04

10.1


CLR-9284-036

Rotary Couplings

- Best choice for feeding fluid to rotating pallet changers, due to constant connection.
- · Ideal for rotary index tables.
- Can also be used for double-acting clamps.
- Choice of two, four, or six independent passages.
- Specials are readily available. Please contact factory.

OPERATION: Each passage is supplied separately. This allows independent operation of two, four, or six (depending on model) sets of spring-return (single-acting) clamps.

MOUNTING: Either the top or bottom can be mounted by screws through the supplied holes. Do not hard mount both sides. Use antirotational key on one side. DESIGN CONSIDERATIONS: The fluid pressure in the rotary coupling will add to the table's starting torque requirement and affect the maximum table operating speed. Please check the graph on the previous page. Fluid must be clean (10 micron or better nominal filtration). Couplings can not be side-loaded. Any weight applied will shorten the life of the unit.

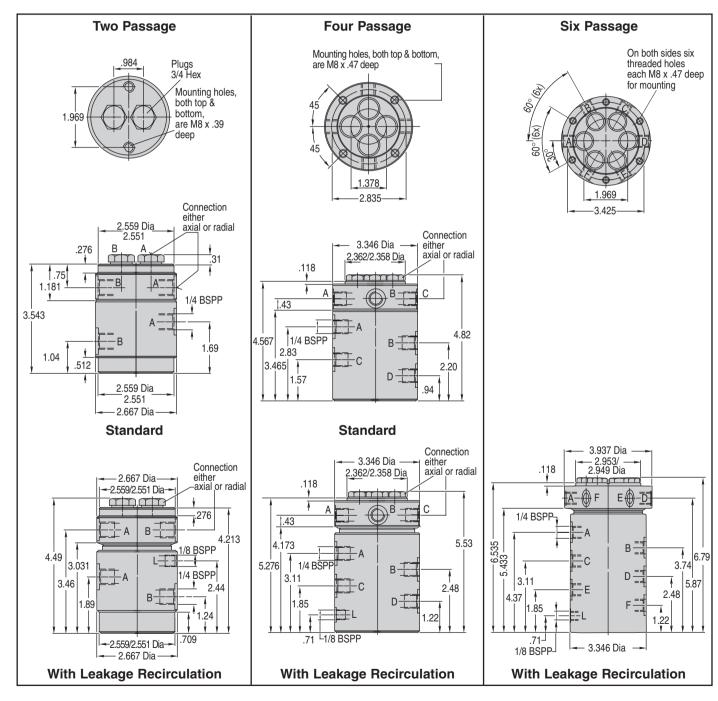




CARR LANE ROEMHELD MFG. CO.

Sales — Phone (636) 386-8022 **Engineering** — Phone 1-800-827-2526 Fax (636) 386-8034 Web **www.clrh.com**






Rotary Valve Couplings are also available for use with automatic coupling systems, for loading multi-sided tooling blocks. Please contact factory for information.

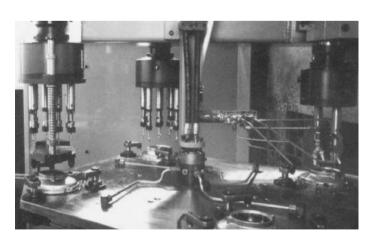

This application shows a multiple-spindle machine with four stations, for machining aluminum covers. An 8-station rotary valve coupling is at the center, with its four unused ports plugged.



 - For rotary index tables with an independent load/unload station
- Unload and reload while all other stations remain clamped
- Unclamps automatically at load station, or via a clamping valve
- Available from stock for rotary tables with 2 through 8 stations



OPERATION: One half of the Rotary Valve Coupling rotates with the index table, while the other half remains stationary. Each time the table and coupling index, a new station automatically becomes the load/unload station. The coupling supplies fluid to the loading station separately from all other stations. The loading station can be either unclamped and reclamped automatically as the coupling rotates, or controlled by a separate clamping valve.

CLAMPING MANUALLY: The loading station can be clamped and unclamped manually (or by a machine controller's electrical signal) using a 3-way valve mounted off the rotating table. This insures that a new workpiece will not move during indexing, before it is securely clamped. See valves section for hand-, cam- or air pilotoperated valves. Double-acting clamps require a 4 way valve.

CLAMPING AUTOMATICALLY: To automatically unclamp and reclamp the load station as the coupling rotates, connect the coupling's return line R directly to the power source's reservoir (no pressure). To avoid any pressure drop as the table indexes, the power source's fluid flow rate (cu.in./min.) should be at least 240 times the fluid required at any one clamping station (cu.in.). Otherwise an accumulator must be installed on the pressure line from the power source.

DESIGN CONSIDERATIONS:

- To use a standard Rotary Valve Coupling, the table must rotate through the same angle during each indexing movement.
- 2. Turning the coupling requires additional table-motor starting torque, especially when clamping automatically during indexing.
- 3. Maximum rotational speed is 10 RPM.
- Use only with the following hydraulic fluids: those listed in F&A section. To use any other hydraulic fluid, check with factory first. Fluid must be clean (10 micron or better nominal filtration).
- 5. Do not turn coupling while dry, even before installation. Fill unused ports with fluid before capping off (e.g. when using an 8-station coupling for 4 stations.
- 6.Use only 1/4 BSPP fittings. Fitting installation torque must be 28-35 ft.lbs.
- Couplings can not carry load. Especially side load which will cause excessive, uneven wear.
- With the load station unclamped, there is a small return-line leakage rate. Always install an accumulator, especially above 3000 psi.

MOUNTING: Firmly fasten either the top or bottom half of the coupling using the tapped mounting holes provided. Use a floating reaction bar to prevent the other half from rotating. Mount at the center of rotation, either above, below, or on the rotary table.

SPECIALS: For additional stations or special features, please contact factory.

Type of clamps	Single Acting	Double Acting
Max. operating pressure (psi)	7250	7250

Type 1 — Single Station for Load/Unload

Part No., 5 station	CLR-9295-001-V	CLR-9295-002-V
Part No., 6 Station (also 2 & 3)	CLR-9296-001-V	CLR-9296-002-V
Part No., 8 Station (also 4)	CLR-9298-001-V	CLR-9298-002-V
Part No., 10 Station	CLR-9290-001-V	CLR-9290-002-V

Type 2 — Two Stations for Load/Unload Commonly Controlled

Part No., 6 station (also 2 & 3)	CLR-9296-011-V	CLR-9296-012-V	
Part No., 8 Station (also 4)	CLR-9298-011-V	CLR-9298-012-V	
Part No., 10 Station (also 5)	CLR-9290-011-V	CLR-9290-012-V	

Type 3 — Two Stations for Load/Unload Separately Controlled

Part No., 6 station (also 2 & 3)	CLR-9296-101-V	CLR-9296-102-V
Part No., 8 Station (also 4)	CLR-9298-101-V	CLR-9298-102-V
Part No., 10 Station (also 5)	CLR-9290-101-V	CLR-9290-102-V


CARR LANE ROEMHELD MFG. CO.

Sales — Phone (636) 386-8022 **Engineering** — Phone 1-800-827-2526


Fax (636) 386-8034 Web www.clrh.com

Type 1 Single Station for Load/Unload Machining station Clamping fixture Rotary valve coupling


Loading and unloading station

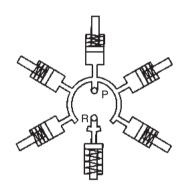


Circuit example - 6 stations

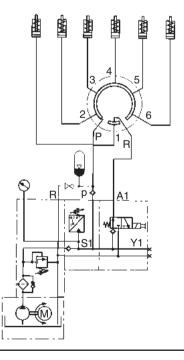


Type 2 Two Stations for Load/Unload **Commonly Controlled**

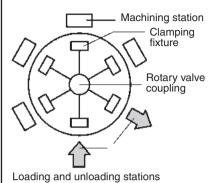


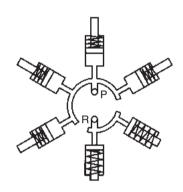


Circuit example - 6 stations

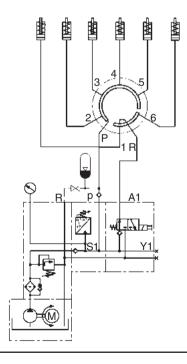


Type 3 Two Stations for Load/Unload **Separately Controlled**

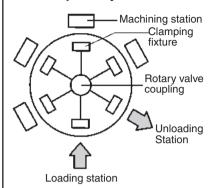

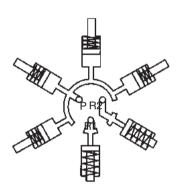


Circuit example - 6 stations

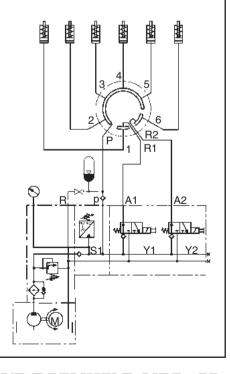



CARR LANE ROEMHELD MFG. CO.

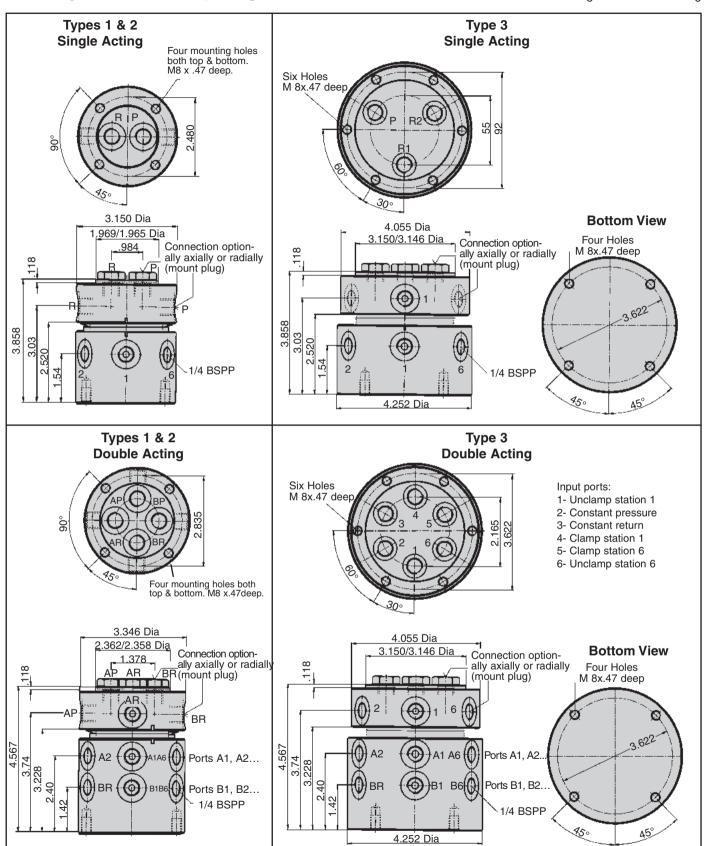



CARR LANE ROEMHELD MFG. CO.

Rotary Air Valve Couplings




Single Acting

Work Stations

Clamping Components


- For rotary index tables with an independent load/unload station
- Unload and reload while all other stations remain clamped
- Unclamps automatically at load station, or via a clamping valve
- Available from stock for rotary tables with 2 through 10 stations


OPERATION: One half of the Rotary Valve Coupling rotates with the index table, while the other half remains stationary. Each time the table and coupling index, a new station automatically becomes the load/ unload station. The coupling supplies loading station separately from all other stations. The loading station can be either unclamped and reclamped automatically as the coupling rotates, or controlled by a separate clamping valve.

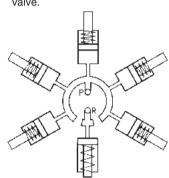


Single Acting

Load/Unload Station

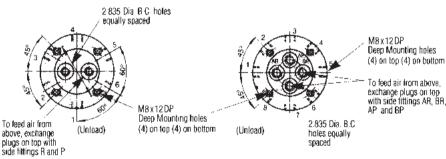


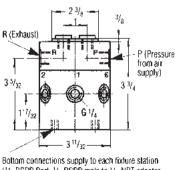

(1/4 BSPP Port, 1/4 BSPP male to 1/4 NPT adapter supplied. Ingestion of pipe dope or lefton tape may cause malfunction or damage to valve)

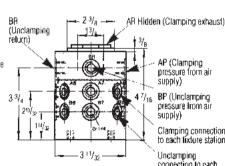

Double Acting

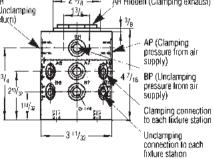

DESIGN CONSIDERATIONS:

- 1. To use a standard Rotary Valve Coupling, workpiece must be unloaded and reloaded at the same station. Also, the table must rotate through the same angle during each indexing movement.
- 2. Turning the coupling requires additional table-motor starting torque, especially when clamping automatically during indexing.
- Maximum rotational speed is 10 RPM.
- 4. Although couplings are well sealed, an external cover may be necessary to protect the coupling's siding surfaces against extreme dirt and grit.

CLAMPING BY CONTROL VALVE: The loading station can be clamped and unclamped manually (or by a machine controller's electrical signal) using a 3-way valve mounted off the rotating table. This insures that a new workpiece will not move during indexing, before it is securely clamped. Double-acting clamps require a 4-way valve.

MOUNTING: Firmly fasten either the top or bottom half of the coupling using the tapped mounting holes provided. Use a floating reaction bar to prevent the other half from rotating. Mount at the center of rotation, either above, below, or on the rotary table.

SPECIALS: For additional stations or special features, please contact factory. Possibilities include:

- 1. Any number of stations
- 2. Multiple load stations (2 or more)
- Controlled independently or together
- Side by side, opposite, or at any other orientation

Type Clamp	Single-Acting	Double-Acting
Max. Operating Pressure (psi)	145	145
Part No., 5 Station	CLR-9295-601-V	CLR-9295-602-V
Part No., 2, 3, 6 Station	CLR-9296-601-V	CLR-9296-602-V
Part No., 7 Station	CLR-9297-601-V	CLR-9297-602-V
Part No., 4, 8 Station	CLR-9298-601-V	CLR-9298-602-V



CARR LANE ROEMHELD MFG. CO.

Pallet Decouplers



Single Acting


- Allows disconnecting a single-acting fixture from its power source before machining
- Compact assembly mounts easily on fixture (lay gauge flat for an even lower profile)
- Ideal for pallets and rotating fixtures where a fluid feed line is impractical
- Decoupler includes shutoff valve, quick disconnect, accumulator, pressure gauge, and pressure-relief valve
- Do not use NPT fittings


POWER UNIT: Any standard single-acting power unit can be used with this pallet decoupler.


OPERATION:

- Remove protective cap from male quick disconnect on decoupler. Clean coupling components if necessary.
- 2. Connect hydraulic hose, with female quick disconnect, to the pallet decoupler. The power unit should be in unclamped mode (depressurized) before connection.
- 3. Open shutoff valve on decoupler to unclamp fixture.
- 4. After unloading and reloading fixture, actuate power unit to clamp.
- After pressure gauge shows proper clamping pressure, close shutoff valve on decoupler.
- 6. Switch power unit to unclamped mode.
- Disconnect hose and replace protective cap on male quick disconnect. Hose can be connected to optional safety support while not in use.


SAFETY FEATURES: Pallet decouplers include an accumulator to compensate for pressure changes due to temperature variations. Important: use pallet decouplers only with Roemheld components, because all system components must be zero leakage. These decouplers are equipped with a pressure-relief valve to protect the fixture and the accumulator from extreme temperature increases. An optional safety support with a limit switch can be used to hold the hydraulic hose after uncoupling, to ensure that the fixture is disconnected before moving.

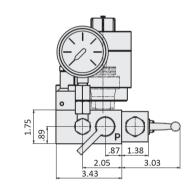

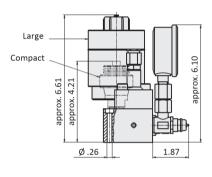

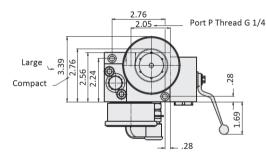



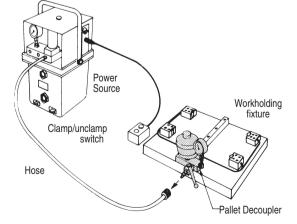


Accumulator Size	Compact	Large
Maximum operating pressure (psi)	7250	7250
Minimum operating pressure (psi)	1800	1800
Accumulator volume at 7250 psi (cu. in.)	0.6	3.4
Accumulator volume at 1800 psi (cu. in.)	0.16	0.9
Accumulator gas preload (psi)	1450	1450
Weight (lbs)	8.4	12.7
Part No., Decoupler	CLR-9425-012-PD	CLR-9425-011-PD
Part No., Female Disconnect	CLR-9384-106-F	
Part No., Safety Support	CLR-0942-001-PDA	




CARR LANE ROEMHELD MFG. CO.

FOR

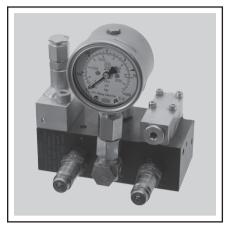



Single Acting or Double Acting with Automatic Shutoff

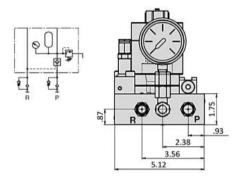

- Allows disconnecting a single-acting fixture, a double-acting fixture, or a fixture with several individual clamping valves from its power source before machining
- Automatic shutoff using a pilot-operated check valve...no manual shutoff valve required!
- Compact assembly mounts easily on fixture
- Ideal for pallets and rotating fixtures where a fluid feed line is impractical
- Decoupler includes pilot-operated check valve, quick disconnects, accumulator, pressure gauge, and pressure-relief valve


POWER UNIT: A double-acting power unit with a four-button control switch (B1, B2, B3, B4) is required to use this pallet decoupler for either a single-acting fixture or a double-acting fixture. The power unit provides automatic shutoff capability, via the decoupler's pilot-operated check valve, and allows depressurizing both pressure hoses simultaneously for uncoupling. See table below for power-unit part number. This pallet decoupler can also be used where clamping is controlled by individual clamping valves on the fixture (3-way valves for single acting or 4-way valves for double acting). In that application, one constant-pressure hose and one return hose are connected to the decoupler, so any standard single-acting power unit can be used.

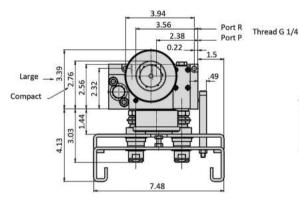

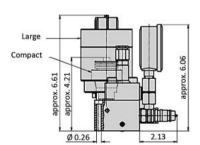

Female Disconnect Double Coupler

 (order separately)



OPERATING SEQUENCE UNCLAMPING/CLAMPING:

A) SINGLE-ACTING CYLINDERS

Operating sequence for **unclamping** with coupling for single-acting cylinders:

1) Remove dust cap and clean coupling parts,

- if necessary.

 Connect coupler of quick-disconnect coupling in depressurized mode.
- Open high-pressure shut-off valve.

Operating sequence for clamping coupling unit for double-acting cylinders

- Coupler of quick-disconnect coupling is coupled and high-pressure shut-off valve is opened.
- Actuate power unit until pressure gauge shows required clamping pressure. Shut high-pressure shut-off valve.
- Set pressure generator to unclamping
- position.

 Disconnect coupler of quick-disconnect if coupling and put into a safety support, if necessary.
- Attach dust cap to coupling nipple and coupler.

B) DOUBLE-ACTING CYLINDERS

Operating sequence for **unclamping** with coupling unit for double-acting cylinders:

1) Remove dust cap and clean coupling parts,

- if necessary.
- Connect multi-coupler in depressurized mode: For the purpose switch selector switch to "couple."
- Switch selector switch to "unclamp."

Operating sequence for **clamping** with coupling unit for double-acting cylinders.

1) Multi-coupler is coupled.
2) Switch selector switch to "**clamp.**" After

- pressure build up, the green lamp is sianaled
- Set multi-coupler to depressurized mode: For the purpose switch selector switch to "couple."
- Disconnect multi-coupler and put it into a safety support, if necessary.
- Attach dust cap to coupling nipple and coupler.

SAFETY FEATURES: Pallet decouplers include an accumulator to compensate for pressure changes due to temperature variations. Important: use pallet decouplers only with Roemheld components, because all system components must be zero leakage. These decouplers are equipped with pressure-relief valve to protect the fixture and the accumulator from extreme temperature increases. An optional safety support with a limit switch can be used to hold the double coupler after uncoupling, to ensure that the fixture is disconnected before moving.

Accumulator Size	Compact	Large
Maximum operating pressure (psi)	7250	7250
Minimum operating pressure (psi)	1800	1800
Accumulator volume at 7250 psi (cu. in.)	0.6	3.4
Accumulator volume at 1800 psi (cu. in.)	0.16	0.9
Accumulator gas preload (psi)	1450	1450
Weight (lbs)	9.6	13.5
Part No., Decoupler	CLR-9425-022-PD	CLR-9425-021-PD
Part No., Female Disconnect Double Coupler	CLR-9425	5-102-PDA
Part No., Safety Support	CLR-0942	2-002-PDA
Electric Power Unit, 7500 psi, 460V	CLR-939-EP	
Electric Power Unit, 7500 psi, 230V	CLR-839-EP	
Electric Power Unit, 5000 psi, 460V	CLR-940-EP	
Electric Power Unit, 5000 psi, 230V	CLR-840-EP	



CARR LANE ROEMHELD MFG. CO.

Tooling-Block Pallet Decouplers



Four-Sided

- Extremely convenient fluid supply for multi-face pallets. Requires only one connection!
- Controls each tooling-block face independently with a 3-way clamping valve
- Decouples easily for machining . . . no shutoff valve required!
- Complete with all valves, quick disconnect, and accumulator
- Specials available for more than four faces, and for VTL fixtures. Please contact factory.
- **Do not use NPT fittings

OPERATION: Requires only one fluid line from the power unit to the decoupler, due to internal hydraulic circuitry. Unload and reload using one of the two sequences below. The built-in accumulator stores fluid as the fixture is pressurized.


PROCEDURE TO UNLOAD ALL FACES THEN RELOAD ALL FACES (TWO TURNS):

- Connect hose from power unit to the decoupler's quick disconnect (with power unit in "unclamped" position).
- 2. To unload first face, turn its clamping valve to "unclamped" position, then remove part. Index and repeat for all faces.
- 3. Switch power unit to "clamped" position.
- 4. Load new part on first face, then turn its clamping valve to "clamped" position. Index and repeat for all faces.
- 5. Switch power unit to "unclamped" position.
- 6. Disconnect hose and begin machining.

MOUNTING: Mount on top of tooling block, at its rotational center. Fasten with four sockethead cap screws. Bore hole in center of block to provide clearance for accumulator. Locate power unit's push-button switch near the loading area.

DESIGN CONSIDERATIONS: Use the Pallet Decoupler only with Roemheld clamps, since all components must be leakfree. The accumulator compensates for temperature change only. We recommend installing a pressure gauge on each fixture face. Important: feed hydraulic hose from directly above pallet so that the hose cannot twist more than a few degrees, especially with short hoses. **INFO+:** If necessary, install a Rotary Coupling (pages 156-157) on the hose end opposite the pallet, carefully mounted to avoid strain. Use only heavy-duty hose (see F&A section). Fluid must be clean (10 micron or better nominal filtration).

Patent pending.

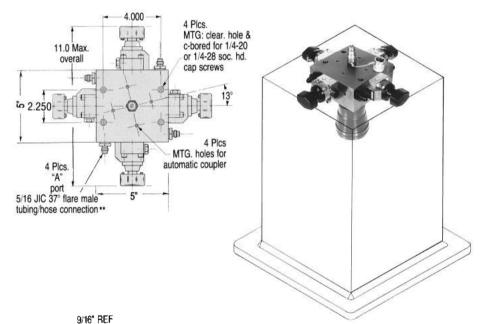

Four-sided tooling block with a Pallet Decoupler mounted on top. Clamping valves control each face independently.


	W 10 1-4-1
	Male Dust cap
	quick-disconnect 🚇 🤾
_1	1.94
7.8	2.25
	A
	Hand-operated clamping valve Accumulator 10.5
	6.0
	2,95 Dra.
	Cap .

Accumulator Size	Compact	Large
Maximum operating pressure (psi)	7250	7250
Minimum operating pressure (psi)	1800	1800
Accumulator volume at 7250 psi (cu. in.)	0.6	3.4
Accumulator volume at 1800 psi (cu. in.)	0.16	0.9
Accumulator gas preload (psi)	1450	1450
Weight (lbs.)	6.0	8.0
Part No., Decoupler - 4 sided	CLR-401-PD	CLR-402-PD
Part No., Decoupler - 2 sided	CLR-421-PD	CLR-422-PD
Part No., Female Disconnect	CLR-	202-F




CARR LANE ROEMHELD MFG. CO.


Automatic Coupling Systems ■ F9.426

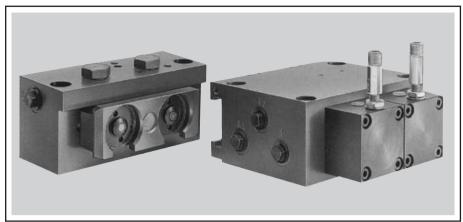



Pallet Unit and Base Unit

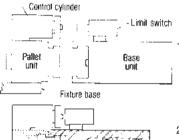

 1. Units before coupling (Separated during machining operation).

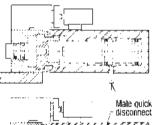



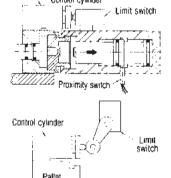

unit

- 2. Slide Pallet Unit into place, ready for coupling. White indicator light indicates pallet is present.
- 3. Press UNCLAMP button. Base unit extends male quick disconnect into female to make fluid connection. After connection, power unit automatically depressurizes fixture for unloading.
- 4. After loading, press CLAMP button so that power unit pressurizes fixture. Once fixture is fully pressurized (confirmed by control cylinder and external limit switch) base unit automatically retracts male quick disconnect. Internal proximity switch confirms full retraction and lights green indicator. Units are now ready to slide apart.
- 5. Once pallet is loaded on the machine table, a limit switch (or probe) mounted on the machine can monitor the fixture for full pressure using the control cylinder.



Units can also be mounted vertically.

- State-of-the-art turnkey automatic coupling for flexible manufacturing systems
- · System consists of a Pallet Unit for each pallet, a Base Unit, and a special Electric **Power Unit**
- · Unit couples under full pressure for unclamping

DESIGN CONSIDERATIONS: Unit automatically compensates axial misalignment within ± .028 inches. Pallet Unit and Base Unit must line up within this range. Since all components must be leakfree. use only with Roemheld clamps. Also, since the fixture's fluid lines are sealed after disconnection, fluid pressure will increase if fixture temperature increases (about 80 psi per 1°F). Be careful not to exceed 7250 psi at any time during the machining cycle.


SAFETY PRECAUTIONS: Mount a control cylinder on pallet unit, install a limit switch on the machine tool to check that the control cylinder's plunger is extended, indicating proper pressure. Regularly check palletized fixtures for leaks by disconnecting the accumulator or shutting it off with a shutoff valve (CLR-400-V).

MOUNTING: Align units, then dowel in place with the holes provided. Fasten with sockethead cap screws. Mount in any position, preferably horizontal.

Single Load Station

Two Load Stations

(shuttle)

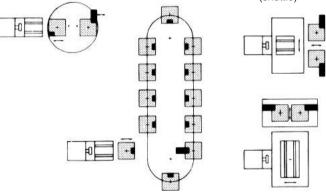

Part No., Control Cylinder (4350-7250 psi)	CLR-0974-000-CC
Part No., Control Cylinder (3200-5950 psi)	CLR-0974-002-CC
Part No., Control Cylinder (1400-2300 psi)	CLR-0974-003-CC
Part No., Limit Switch	CLR-0974-001-CBA

Maximum operating pressure (psi)	7250
Minimum operating pressure (psi)	1800
Part No., Pallet Unit, single acting	CLR-4606-135-CPU
Part No., Pallet Unit, double acting	CLR-4606-235-CPU
Part No., Base Unit, single acting	CLR-4606-131-CBU
Part No., Base Unit, double acting	CLR-4606-231-CBU
Part No., Electric Power Unit	See power sources section

Subject to change. For further details, including detailed dimensions and mounting instructions, visit www.clrh.com.



CARR LANE ROEMHELD MFG. CO.

Sales — Phone (636) 386-8022 Fax (636) 386-8034 Engineering — Phone 1-800-827-2526 Web www.clrh.com

Accumulators 7250 psi max



Ø 1.73



 
Compact Large


.866 Flat

Accessory

1/4 BSPP Standard port thread

Pressure gauge union G 1/4



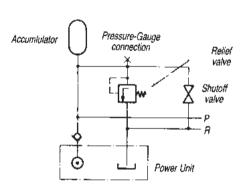

 Extremely compact accumulator, ideal for workholding applications
 Can also store fluid potential energy

Operates comfortably at up to 7250 psi
Choice of large or compact size

SPECIFICATIONS: Nitrogen-filled diaphragm type accumulator. Allowable operating temperature 15 to 175° F. Install in any

1. Use only with Roemheld components because all system components should be

2. Since a fixture's fluid lines are sealed after

disconnection from the power source, fluid pressure will actually increase if fixture temperature increases. This increase can be quite substantial: about 80 psi per 1°F. Be

careful not to exceed 7250 psi at any time during the machining cycle. Always install a pressure gauge in the closed system.

3. If the possibility of exceeding 7250 psi exists,

install a Relief Valve (see valves section) in

4. Shield accumulator if the possibility of

accidental damage exists.

between working cycles

**Do not use NPT fittings

position, horizontal or vertical. DESIGN CONSIDERATIONS:

leakfree.

the system.

Example: Accumulator circuit with all safety devices installed.

55		Protective Cover
.,	IA BI	
	2.95	-
	G 1/4	
19. 65		4
4 Threads Ø 1.97	₩8	Accessory Double connector

Size	Compact	Large
Maximum operating pressure (psi)	7250	7250
Minimum operating pressure (psi)	1800	1800
Accumulator volume at 7250 psi (cu. in.)	.60	3.4
Accumulator volume at 1800 psi (cu. in.)	.16	.9
Accumulator gas preload (psi)	1450	1450
Weight (lbs)	0.7	5.0
Part No.	CLR-9606-102-PDA	CLR-500-PDA



CARR LANE ROEMHELD MFG. CO.


Sales — Phone (636) 386-8022 Fax (636) 386-8034 **Engineering** — Phone 1-800-827-2526 Web **www.clrh.com**

Symbol

2.93

Coupling Elements - Built-in & Threaded-body - F9.428

Coupling Elements ■ Stainless Steel, Built-in Type and Threaded Body Type Max. Operating Pressure ■ 4351, 5076, or 7252 psi (300, 350, or 500 bar)

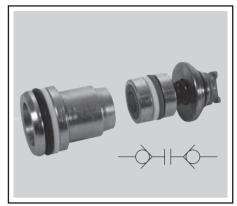

These stainless steel coupling elements allow

the transfer of liquids or gases while they

are coupled and are designed to maintain


pressure in the uncoupled state. Some

versions cannot be coupled under pressure



but there are versions available that allow coupling to occur under pressure. The built-in types are designed for mounting in between plates which allows for compact multi-coupling units like seen in data sheet F9.440. The


Coupling situation

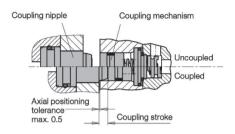

threaded-body types can be screwed directly into a fixture and fixture base, allowing fast and easy fixture changes.

Application example

Rotary indexing table - clamping fixture, hydraulically operated, with trunnion bearing and hydraulic positioning

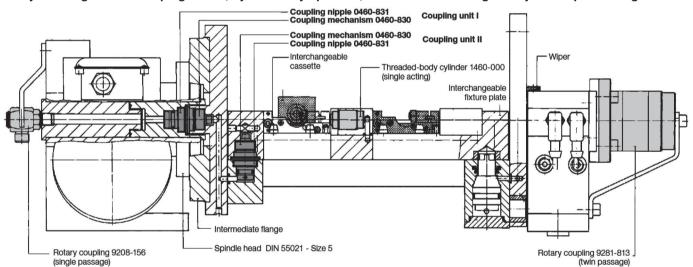

General technical characteristics

		Generalite	Cililical Cilaracteris	51105			
Туре	Threaded-body	Built-in	Threaded-body	Threaded-body with nozzle	Built-in	Threaded-body	Built-in
Nominal diameter (ND)	0.118	0.118	0.197	0.197	0.197	0.315	0.315
Max. operating pressure (psi)	5076	4351	7252	7252	4351	4351	4351
Max. flow rate (gpm)	2.11	2.11	3.17	3.17	3.17	9.25	9.25
Coupling stroke (in)	0.177	0.177	0.177	0.177	0.177	0.291	0.291
Axial coupling force at 0 psi (lbs.)	18.4	18.4	15.7	15.7	15.7	13.9	13.9
Axial positioning tolerance (in.)	0.020	0.020	0.020	0.020	0.020	0.020	0.020
Radial positioning tolerance (in.)	0.004	0.004	0.010	0.008	0.008	0.008	0.008
Radial positioning tolerance for CLR-0460-776/751 (in.)	-	-	0.020	-	-	-	-
Adm. Angular deviation (*)	1	1	1	1	1	1	1

Subject to change. For further details, including detailed dimensions and mounting instructions, visit www.clrh.com.




CARR LANE ROEMHELD MFG. CO.


Sales — Phone (636) 386-8022 Fax (636) 386-8034 **Engineering** — Phone 1-800-827-2526 Web **www.clrh.com**

168 8/16

Coupling Elements - Built-in & Threaded-body - F9.428

Coupling Elements ■ Built-in type and Threaded-body type Max. Operating Pressure ■ 4350, 5075, or 7250 psi (300, 350, or 500 bar)

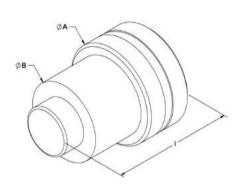

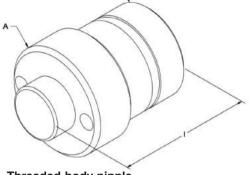


Built-in nipple


Threaded-body nipple

Coupling Nipples


ND	3				5				8	
Туре	Built-in	Threaded-body	Threaded-body with PV	Built-in	Built-in long	Threaded-body	Threaded-body with PV	Built-in	Threaded-body	
A	0.787	M20x1.5	M20x1.5	0.787	0.787	M24x1.5	M24x1.5	0.945	M32x1.5	
В	0.622	0.669	0.669	0.622	0.622	0.862	0.862	0.827	0.945	
1	1.020	1.043	1.260	1.020	1.500	1.220	1.260	1.236	1.236	

Part Number									
Coupling against pressure	CLR-0460-692	CLR-0460-836	-	CLR-0460-691	CLR-0460-814	CLR-0460-831	-	CLR-0460-714	CLR-0460-713
Only depressurized coupling	CLR-0460-743	CLR-0460-838	-	CLR-0460-682	CLR-0460-729	CLR-0460-751	-	CLR-0460-841	CLR-0460-772
With preloaded valve (PV)	-	-	CLR-0460-834	-	CLR-0460-837	-	CLR-0460-835	-	-
Screw-in tool	-	CLR-2010-905	CLR-2010-905	-		CLR-2010-904	CLR-2010-904	-	CLR-2010-903

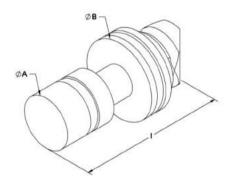

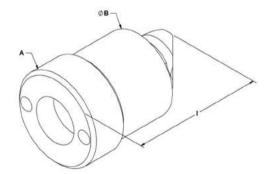

ND 5 threaded-body type also available with integrated nozzle for air blow off

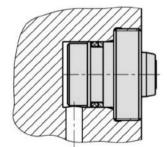

CLR-0460-703

Nipple

CLR-0460-703

Coupling Mechanism

Coupling Mechanism

ND		3		5	8	
Туре	Threaded-body	Built-in	Threaded-body	Built-in	Threaded-body	Built-in
A	M20x1.5	0.394	M24x1.5	0.551	M32x1.5	0.748
В	0.709	0.591	0.807	0.748	1.063	0.945
	1.150	1.150	1.150	1.150	1.732	1.732

Part Number

Dout Number

Coupling against pressure	CLR-0460-832	CLR-0460-818	CLR-0460-830	CLR-0460-656	CLR-0460-711	CLR-0460-712
Only depressurized coupling	CLR-0460-833	CLR-0460-819	CLR-0460-776	CLR-0460-659	CLR-0460-771	CLR-0460-839
Additional bushing for simple location hole	CLR-0460-884	-	CLR-0460-777	-	CLR-0460-847	-
Screw-in tool	CLR-2010-905	-	CLR-2010-904	-	CLR-2010-903	-
Sealing disk (spare part)	CLR-3001-997	CLR-3001-997	CLR-3001-999	CLR-3001-999	CLR-3001-998	CLR-3001-998
Installation tool for sealing disk			CLR-0460-873	CLR-0460-873	CLR-0460-914	CLR-0460-914

Subject to change. For further details, including detailed dimensions and mounting instructions, visit www.clrh.com.



CARR LANE ROEMHELD MFG. CO.

Sales — Phone (636) 386-8022 Fax (636) 386-8034 Engineering — Phone 1-800-827-2526 Web www.clrh.com

Threaded Coupling Elements



Manifold Mounted

Threaded nipple

- Very compact coupling units
- Flush mounting in uncoupled mode
- Ideal for pallet coupling with vertical quided connection
- · Optional return line relief
- Two sizes with and without coupling against pressure

Depending on the version, the coupling elements can either be coupled in energized mode, or de-energized mode only. The operating mode depends on the type of sealing elements which are used and can be taken from the table below.

The max. positioning tolerances in axial and radial direction are indicated in the table below.

The sealing areas at the side of the coupling elements have to be cleansed before coupling, to ensure the tightness in coupled mode. We recommend to wash the elements and finally clean them with compressed air. Dust caps should be used as far as possible.

APPLICATION: Compared to other coupling elements the threaded coupling elements are very compact devices.


If the slide movement of the workpiece carrier is to be used or if a fixture is to be used or if a fixture is to be connected to the base plate without lines, the threaded nipple and the coupling mechanisms can be directly screwed into the parts which are to be connected. The coupling mechanisms have the advantage that they are flush-faced in uncoupled mode.


Flange-type housings are available to simplify the manufacture of the fixture mounting hole contours. In cramped conditions it is possible to make and install the flange-type housing retrospectively.

The fixture bodies which are to take up the coupling parts have to be guided .125 in. parallel before they are coupled.

The axial forces which arise during the pressure build-up in coupled mode (see diagram) have to be absorbed outside the coupling parts.

The threaded nipples, which are installed into the tank lines, are equipped with a pre-loaded valve (VSV). The pre-loaded valve limits a possible pressure build-up in the return line, caused by internal leakage in the hydraulic clamping elements, to approx. 75 psi. In coupled mode the pre-loaded valve is not effective.

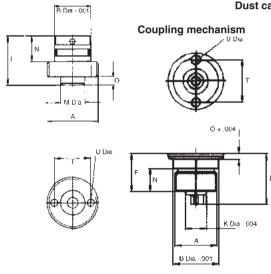

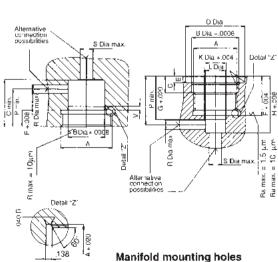

Element	Coupling mechanism	Threaded nipple	Threaded nipple with VSV	Coupling mechanism	Threaded nipple	Threaded nipple with VSV
Nominal ID		3mm			5mm	
p. max./min.	7250/450	7250/450	7250/450	7250/450	7250/450	7250/450
A	M20x1.5	M24x1.5	M24x1.5	M24x1.5	M28x1	M28x1
B Dia	.8661	.7874	.7874	1.0236	.7874	.7874
С	.138	1.063	1.181	.354	.945	1.181
D Dia	_	_	_	1.280	_	_
E	_	_	_	.138	_	_
F	.846	.394	.394	.846	.335	.335
G	.925	_	_	.925	_	_
Н	1.22	_	_	1.22	_	_
	1.15	1.16	1.34	1.15	1.06	1.280
K Dia	.472	_	_	.472	_	_
L Dia	.441	_	_	.441	_	_
M Dia	_	.59	.268	_	.531	.531
N	.73	.65	.65	.51	.55	.77
0	_	.177	.177	.126	.177	.177
Р	1.10	.827	.98	1.10	.81	.81
R Dia	.197	.197	.197	.197	.197	.197
S Dia	.276	.276	.276	.276	.276	.276
T	.630	.670	.670	.945	.787	.787
U Dia	.138	.138	.138	.197	.157	.157
V	_	2x15°	2x15°	1x15°	2x15°	2x15°
max. position tolerance (axial)	+.020	+.020	+.020	+.020	+.020	+.020
max. position tolerance (radial)	+/004	+/004	+/004	+/008	+/008	+/008

Can be coupled with or without pressure

Part No.	CLR-0460-725-TBC	CLR-0460-727-TBN	-	CLR-0460-735-TBC	CLR-0460-638-TBN	-

Can only be coupled without pressure

Part No. | CLR-0460-730-TBC | CLR-0460-731-TBN | CLR-0460-728-TBN | CLR-0460-736-TBC | CLR-0460-740-TBN | CLR-0460-637-TBN |



 
CARR LANE ROEMHELD MFG. CO.

Sales — Phone (636) 386-8022 Fax (636) 386-8034 **Engineering** — Phone 1-800-827-2526 Web **www.clrh.com**

170


Threaded Coupling Elements

Optional Housing for Coupling Mechanism






ф ф ф а

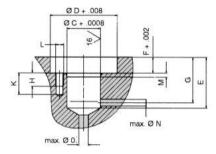

 $\Delta p\text{-}Q$ characteristic line for kinetic viscosity from $53x10^{\text{-}6}\text{m}^2\text{/s}$

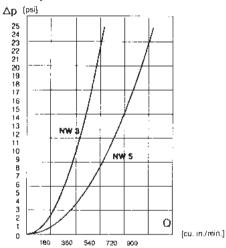

Mounting dimensions

If it is not required that the housing is flush-fitting with the pallet, the D dia. can be omitted.


The depth dimensions are then shortened by dimension F.


In cramped installation conditions the housing can be milled according to dimensions ${\sf R}$ and ${\sf S}$.

Housings for Coupling Mechanisms

riodolligo for Coupling inconditions								
Useable for	CLR-0460-725-TBC	CLR-0460-735-TBC						
А	1.181	1.693						
В	.787	.906						
C Dia	0.9843	1.2598						
D Dia	1.9685	2.5591						
Е	1.50	1.50						
F	0.472	0.591						
G min.	1.34	1.38						
Н	0.39	0.47						
K	0.63	0.71						
L	1/4-20	5/16-18						
М	0.12x15°	0.12x15°						
N Dia max.	0.197	0.24						
P Dia	0.28	0.28						
R	1.65	2.36						
S	1.26	1.57						
Part no.	CLR-0460-655-TBCH	CLR-0460-654-TBCH						

Coupling force

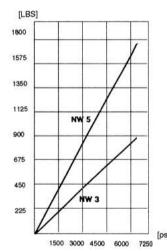

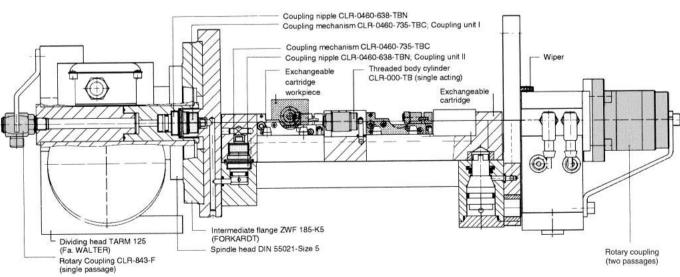




CARR LANE ROEMHELD MFG. CO.

Sales — Phone (636) 386-8022 Fax (636) 386-8034 **Engineering** — Phone 1-800-827-2526 Web **www.clrh.com**

Control Cylinders

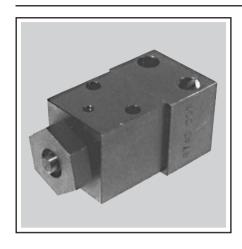


- Pressure-indicating cylinder for monitoring pressure on decoupled pallets
- Plunger extends only when you exceed the set pressure
- Choice of high, medium or low pressuremonitoring range
- Choice of standard fittings or manifold mounting


OPERATION: Unlike other clamps and cylinders, Control Cylinders do not extend immediately under low pressure. Their internal springs are calibrated to restrict plunger movement until a set pressure is reached. In fact, full plunger movement takes place entirely during a small 290 to 580 psi "switching range" (hysteresis) during which the plunger switches from fully in to fully out. By installing a limit switch fixed to the machine table, you can detect whether proper pressure is present or not.

SETTING: Select a Control Cylinder with setting range based on expected system operating pressure. Usually Control Cylinders can be set approximately 20% under full operating pressure, unless tighter control is required. For example, if maximum operating pressure will be 6000 psi, set Control Cylinder to finish retraction at 4800 psi (using either a high- or medium-range Control Cylinder). To set control pressure, turn front threaded bushing after loosening setscrew, then retighten setscrew.

 
MOUNTING: Fasten with two 1/4-20 socket-head cap screws. Dowel in place with two 6mm dowel pins. To manifold mount, order O-ring CLR-3000-347-SW, and counterbore mounting surface .531 / .535 dia x .057 / .061 deep under 3/16 dia passage.




Standard Fittings

 



Manifold Mounting

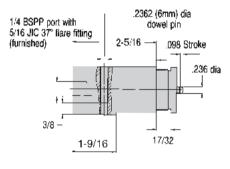


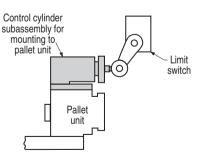

 Limit switch mounted on machine table monitors clamping pressure by sensing the extended position of the Control Cylinder's plunger. If system pressure somehow drops below the set level, the plunger would retract.

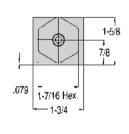

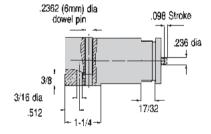




		1-5/8
.079	1-7/16 Hex. 	

Setting range (psi)	High	Medium	Low
Setting range (psi)	4350-7250	3200-5950	1400-2300
Max. operating pressure (psi)	7250	7250	7250
Switching range (psi)	290	440	580
Stroke	.098	.098	.098
Part No., standard fittings	CLR-9740-802-CC	CLR-9740-803-CC	CLR-9740-804-CC
Part No., manifold mounted	CLR-9740-025-CC	CLR-9740-026-CC	CLR-9740-027-CC
Control Cylinder Subassembly	CLR-0974-000-CC	CLR-0974-002-CC	CLR-0974-003-CC




CARR LANE ROEMHELD MFG. CO.


Pressure Switches ■ Hydra-electrical signal converter ■ Pressure adjustment ranges ■ 75-1885 psi, 725-5075 psi & 725-7975 psi (5-130 bar, 50-350 bar & 50-550 bar)

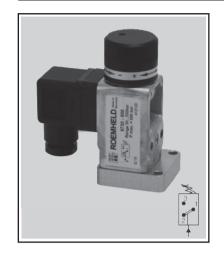


Hydra-electric pressure switches are devices which close or open electrical contacts under pressure. They are used to switch on or off pump motors, valves, machine tool interlocks or similar applications in power units, machines

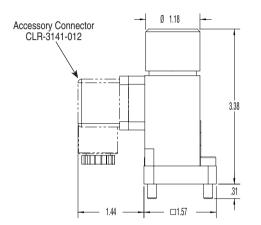

 
and installations. The switching point can be adjusted to the desired hydraulic pressure via a knurled knob. The knob can be looked in placed by tightening a set screw. The installed microswitch is a change-over switch which can be connected as break or make contact. The electrical connector can be index 4 x 90°.

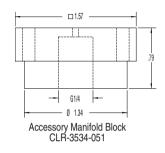





Contact Layout

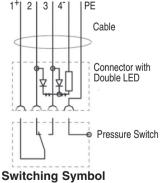

Connector with
Double LED
CLR-3141-802

Hydraulic characteristics

	Trydradile characteristics				
Pressure adjustment range		725 - 7975 psi	725 - 5075 psi	75 - 1885 psi	
Hysteresis		8 - 12% at 7250 - 3625 psi	8 - 12% at 4350 - 1450 psi	8 - 12% at 1450 - 435 psi	
Part No., (switch only)		CLR-9730-500	CLR-9730-501	CLR-9730-502	
	Part No., (switch + CLR-3141-012 DIN connector)	CLR-9730-500-PS	CLR-9730-501-PS	CLR-9730-502-PS	

Electrical characteristics

Connection DIN 43650 connector, form A		DIN 43650 connector, form A	
	Switching element	Change-over switch	
	Max. load	4A at 250VAC; max 3.0A at 28VDC; min. 5mA	
	Code class (ED 60529)	IP 65	

Technical characteristics

Operating fluid	Hydraulic oil HLP 22, 32 and 46
Fluid temperature	max. 176 °F
Fluid connection	Manifold mounting or G1/4 with manifold block
Enviromental temp.	-50 °F - 176 °F
Max. operating pressure	8700 psi
Vibration resistance	10 g (10 - 2000 Hz)
Shcok resistance	30 g
Material	Housing: zinc diecasting Adjusting knob: aluminum (powder coated)
Seals	FKM
Weight	0.72 lbs
Mounting position	Any

Accessories

Part No., Manifold block	CLR-3534-051
Part No., Connector DIN 43650, 4 x 90° indexable	CLR-3141-012
Part No., Connector with 1.97' cable	CLR-3141-928
Part No., Connector with 8.2' cable	CLR-3141-818
Part No., Connector with double LED and 9.84' cable	CLR-3141-802
Part No., Spare FKM O-ring	CLR-3001-147

Subject to change. For further details, including detailed dimensions and mounting instructions, visit www.clrh.com.




CARR LANE ROEMHELD MFG. CO.

Sales — Phone (636) 386-8022 Fax (636) 386-8034 **Engineering** — Phone 1-800-827-2526 Web **www.clrh.com**

100 psi air max **Accessories**

Air Filter/Regulator/Lubricator

1/4 NPT

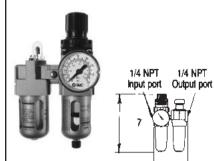


CLR-100-FRL

Recommended for all incoming air-pressure lines (included with air power unit). Filter removes solid contaminates and water from the air supply. Lubricator provides an oil mist to lubricate the system. Regulator is essential to control input air pressure, and thereby control output pressure.

Fine Air-Pressure Regulator




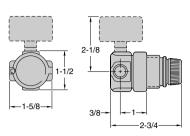

CLR-200-FR

Miniature regulator for adjusting air pressure between 1 and 10 psi (30 psi gauge). Use with airadvanced work supports to finely adjust contact force. 1/4 NPT ports.

Air Extractor/Dryer

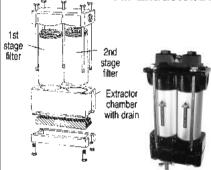

CLR-105F-AED

Effective extractor/dryer that removes air moisture and dirt to increase the life of air-powered components. Replace or clean 1st-stage filter yearly (part no. CLR-401-AEDA, black) Replace 2nd-stage filter every 4-6 months (part no. CLR-403-AEDÄ, red).

Air Flow-Control Valve




CLR-100-AFC

Simple valve to reduce air flow rates and reduce clamping speed. Release air pressure to adjust setting.

Fluid 6-Port Manifolds



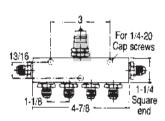

CLR-106-F

(6) Male 37° fittings (1) Male quick disconnect

CLR-107-F


(7) Male 37° fittings

CLR-106-BP

(7) 1/4 BSPP ports, without fittings

 Fluid 4-Port Manifolds





CLR-104-F

(4) Male 37° fittings (1) Male quick disconnect


CLR-105-F

 
(5) Male 37° fittings

CLR-104-BP

(5) 1/4 BSPP ports, without fittings

Fluid Pressure Gauges

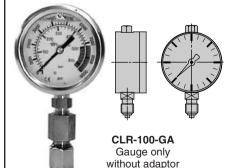



CLR-808-F Female gauge adaptor Compression type



CLR-9208-041-F Male gauge adaptor Compression type



CLR-101-GA Gauge with Female 37° fitting




CLR-102-GA Gauge with Elbow Female 37° fitting



CARR LANE ROEMHELD MFG. CO.

Quick Disconnects

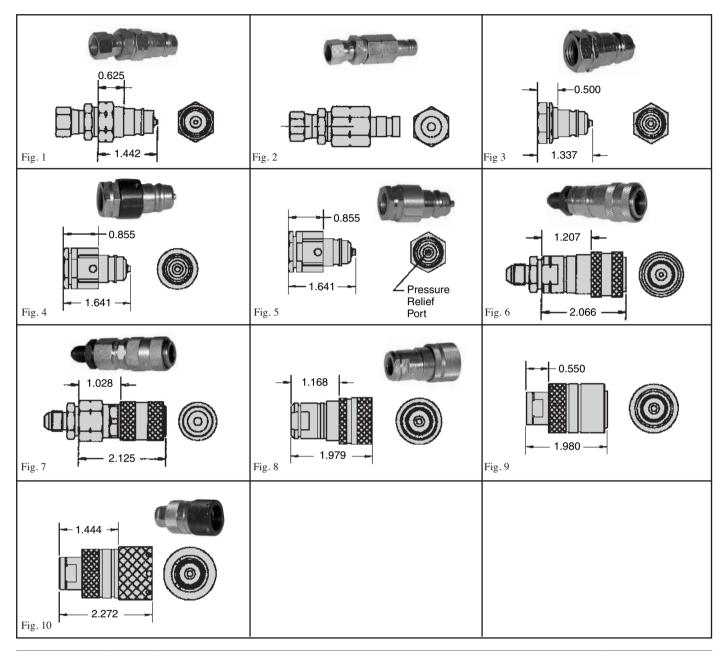

Part No.	Figure	Comments	Compatability
CLR-200-F	Fig #1	Standard Nipple	Fig #6
CLR-202-F	Fig #6	Pull Coupler Sleeve Back Insert On Nipple and Release. Reverse Action To Uncouple.	Fig #1
CLR-220-F	Fig #2	Non-Spill Nipple	Fig #7
CLR-222-F	Fig #7	Coupling - Hold Stem of Coupler and Push, To Uncouple Pull Back Sleeve.	Fig #2
CLR-9384-206-F	Fig #3	Heavy Duty Nipple	Fig #9
CLR-9384-100-F	Fig #8	Pull Coupler Sleeve Back Insert on Nipple and Release. Reverse Action To Uncouple.	Fig #3
CLR-9384-106-F	Fig #9	Push Coupler Sleeve on Nipple and Release. Reverse Action To Uncouple.	Fig #3
CLR-9384-7x7-F	Fig #4	* Color Coded Nipple with Alignment Pin Slots	Fig #10
CLR-9384-7x6-F	Fig #10	* Match Color and Alignment Pins. Pull Coupler Sleeve Back Insert on Nipple & Release. Reverse Action to Uncouple.	Fig #4 & 5
CLR-9384-727-F	Fig #5	White Coded Nipple with Alignment Pin Slots & VSV Valve	Fig #10


^{*} Reference "X" in part number: 1 = Black, 2 = White, 3 = Red, 4 = Yellow, 5 = Green, 6 = Blue



CARR LANE ROEMHELD MFG. CO.

High Pressure Inline Filters



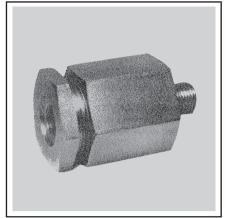






CLR-000-V


CLR-100-V

 CLR-3887-087



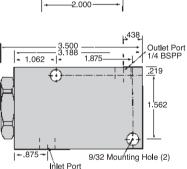

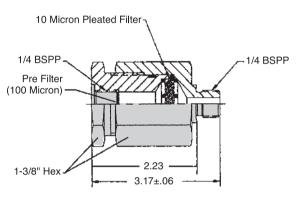

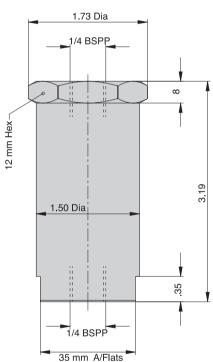

- · Replaceable filter elements
- Simple and compact in design
- Easy to install on any new or existing system
- · Do not use NPT fittings

OPERATION: Install the filter in the output line of the pump to provide filtration of the oil entering the system. The oil passes through the filter assembly from inlet port to outlet port.

 
CAUTION: Do not attempt to replace filter element with pressure in system.

Recommended mouting position is with filter body vertical, plug on the bottom. This mounting position allows contaminated filter elements to be changed without removing existing piping or tubing. Simply remove the end plug, spring, and spring retainer to get at the filter element.

CAUTION: Mounting position other than as recommended...remove entire filter assembly for servicing.



Pre Filter (100 micron)



Max. Oper. Pressure (psi)	7250	7250	5000
Filter Rating (Nom. Filtration)	10 microns	10 microns	10 microns
Typical Flow Rate (cu. in./min.)	120*	230	120
Direction of Flow	Either direction	Either direction	Either direction
Material (Body)	Steel	Steel	Steel
Weight (lbs)	3	.75	1
Part No.	CLR-000-V	CLR-100-V	CLR-3887-087
Part No. of Filter Element	CLR-001-FIL	CLR-100-FIL	CLR-3887-061-FIL
Part No. of Pre-Filter	_	CLR-3887-009-FIL	_

^{*}AP 35 psi across filter




CARR LANE ROEMHELD MFG. CO.

Sales — Phone (636) 386-8022 **Engineering** — Phone 1-800-827-2526

Fax (636) 386-8034 Web **www.clrh.com**

Filters - High Pressure Filter - F9.500


Hydraulic Filters ■ Stainless steel and steel Max. Operating Pressure ■ 5075 psi (350 bar) and 7250 psi (500 bar)

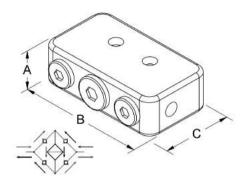

- · Suitable for large flow rates
- Filter insert can be cleaned
- Insert removal without dismantle
- Connections: fitting or manifold mount
- Flow direction variable
- Unique rectifier function, allows oil to be filtered going to and from pump in a single direction

Technical characteristic with rectifier function

Max. operating pressure	5075 psi
Filter Capacity	10 μ
Filter material	Stainless steel
Body material	Stainless steel
A (in.)	1.18
B (in.)	4.21
C (in.)	2.36
Part No.	CLR-3887-086

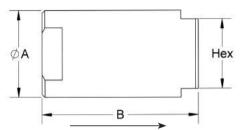


Flow Direction

- · Suitable for large flow rates
- Filter insert can be cleaned
- Water option
- Replacement filter inserts available

Technical characteristic cartridge style filters


Max. operating pressure	5075 psi
Filter Capacity	10 μ
Filter material	Stainless steel
Body material	Stainless steel
Hex (in.)	0.94
Ø A (in.)	1.18
B (in.)	2.13
Part No.	CLR-3887-067
Part No., Compact	CLR-3887-087

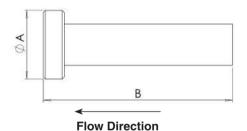

- · Minimal dimensions
- For installation in drilled channels and plates, thereby direct protection of the hydraulic components

Technical characteristic of plug in filters

Max. operating pressure	5075 psi
Filter Capacity	10 μ
Filter material	Stainless steel
Body material	Stainless steel
Ø A (in.)	0.26
B (in.)	0.71
Part No.	CLR-3887-066
Part No.	CLR-3887-071

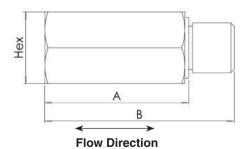


- For installation in front of couplings
- · Protection against swarf
- Up to 7250 psi operating pressure
- Flow direction variable

Technical characteristic high pressure filters

Part No.	CLR-3887-030
B (in.)	1.97
A (in.)	1.50
Hex (in.)	0.75
Body material	Steel, galvanized
Filter material	Steel
Filter Capacity	100 μ
Max. operating pressure	7250 psi



 

Switching example with passage and filtering in one direction

Subject to change. For further details, including detailed dimensions and mounting instructions, visit www.clrh.com.



CARR LANE ROEMHELD MFG. CO.

Sales — Phone (636) 386-8022 Fax (636) 386-8034 **Engineering** — Phone 1-800-827-2526 Web **www.clrh.com**

Fixture Hose




Small-Diameter high-pressure hose perfect for workholding applications. Abrasion and chemical resistant outer cover with seamless nylon inner sleeve reinforced with synthetic yarn. Other lengths and diameters available upon request.

Nominal ID	0.156 in	
Nominal OD	0.34 in	
Min. bend radius	1.6 in	
Burst pressure	25,520 psi	
Temperature range	-40 to +150°F	

	1		
Length	End Type		
	#5 JIC		
Part No., 9 inch	CLR-HH-156-009-5J5J		
Part No., 12 inch	CLR-HH-156-012-5J5J		
Part No., 15 inch	CLR-HH-156-015-5J5J		
Part No., 18 inch	CLR-HH-156-018-5J5J		
Part No., 24 inch	CLR-HH-156-024-5J5J		

 Tubing Heavy-Duty Hose Hydraulic Fluid



60" CLR-60-T

High-pressure hydraulic hose. 1/4" inside diameter. Reinforced with four plies of hightensile wire, for remarkably little expansion under pressure. Fluid required due to expansion is only .066 cu. in. per foot at 7500 psi. 5" minimum bend radius. Two female ends, 5/16 JIC 37° flare, or straight tube ends for use with compression fittings.

NOTE! 10'-0" MAXIMUM RECOMMENDED LENGTH

	JIC 37° flare	Compression Type
18"	CLR-18-H	CLR-18-H-CC
24"	CLR-24-H	CLR-24-H-CC
30"	CLR-30-H	CLR-30-H-CC
36"	CLR-36-H	CLR-36-H-CC
42"	CLR-42-H	CLR-42-H-CC
48"	CLR-48-H	CLR-48-H-CC
60"	CLR-60-H	CLR-60-H-CC
72"	CLR-72-H	CLR-72-H-CC

(Special lengths available)



As per DIN 51524, HLP. Contains special additives for proper lubrication and corrosion protection. Use only SWIFTSURE fluid or an exact equivalent HLP 22: Shell Tellus® 22, Mobil DTE 22, or Chevron Hydraulic Oil AW ISO 22. Fluid must be clean (10 micron or better nominal filtration) See also high pressure in-line filters.

2 gal. CLR-2-FL



CARR LANE ROEMHELD MFG. CO.

Tubing Installation



CLR-100-TL Tubing Cutter

Cutting

- 1. Use only steel tubing as specified on the previous page.
- Cut tubing with a tubing cutter or hacksaw.
- File or sand tubing end square. End must be square to achieve a proper flare



CLR-200-TL Deburring Tool

Deburring and Cleaning

- 1. Deburr both ID and OD with deburring tool.
- Clean with solvent to remove chips, dirt and rust-preventative coating. Blow clean with an air line.




Bending

Tools required:


- Tube bender (3/4" radius)
- Vise

The **Roemheld** tube bender shown is a simple, effective bender we highly recommend. When bending tubing carefully avoid wrinkling, flattening or kinking the tube. Please note: complete flaring before bending.

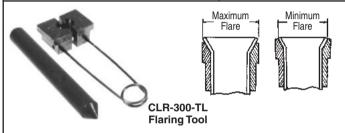


Flaring

- 1. Place nut and sleeve over tube before flaring.
- 2. Place tube in flaring tool, approximately 1/8" above top of block.
- 3. Clamp assembled block in vise.
- 4. Center pin guide of flaring tool in tube.
- Strike flaring tool 3-4 times with sharp hammer blow. Remove from block
- 6. Inspect flare so that their outside diameters extend beyond the inner lip of the sleeve, but not beyond the sleeve's OD.

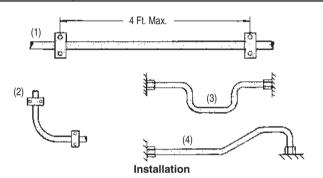

We recommend using tubing clamps as this will increase the life of the installation. Tubing clamps should be less than four feet apart (Figure 1) and bends should be supported also (Figure 2). Use bends as shown in Figures 3 and 4 instead of straight-line connections to prevent stressing the tubing.


Important: Never use tubing lines as handles to lift fixtures.

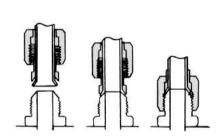

Assembly

- 1. Slide nut and sleeve on to flared tubing end and finger tighten.
- 2. Finish tightening with a wrench, 1/4 to 1/2 turn.


Note: Do not over torque.

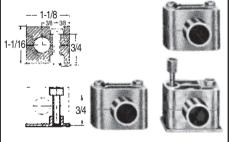

Single Tube Regular and Stack Mounting

CLR-3300-892-TA Single clamp CLR-3300-600-TA Single mounting plate CLR-3300-225-TA Mounting screw CLR-3300-604-TA Stack-mounting screw CLR-3300-335-TA Stack-mounting clip

Subject to change. For further details, including detailed dimensions and mounting instructions, visit www.clrh.com.

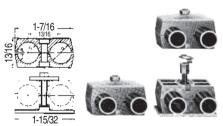

Twin Tubes Regular and Stack Mounting

CLR-3300-891-TA Twin clamp CLR-3300-607-TA Twin mounting plate

CLR-3300-609-TA Washer

CLR-3300-225-TA Mounting screw

CLR-3300-613-TA Stack-mounting screw CLR-3300-615-TA Stack-mounting clip



CARR LANE ROEMHELD MFG. CO.

Sales — Phone (636) 386-8022 Fax (636) 386-8034 **Engineering** — Phone 1-800-827-2526 Web **www.clrh.com**

Fittings

	Hydraulic Compression Fittings (7250 psi static)						
Port Fitting - Male Banjo Elbow				Branch Tee		Union	
	G 1/4 CLR-802-F						
5/16 Tubing	3 1/8 CLR-805-F	-/	0.44	-/	0.111		
	G 1/4 CLR-806-F G 1/8 CLR-826-F		G 1/4 CLR-803-F G 1/4 CLR-823-F**	5/16 Tubing 1/4 Tubing	G 1/4 CLR-804-F G 1/4 CLR-824-F	5/16 Tubing 1/4 Tubing	CLR-701-F CLR-721-F
	lbow		Tee		Cross		Pipe Union
	CLR-702-F	540 T Live				0	
5/16 Tubing 1/4 Tubing	CLR-702-F*	5/16 Tubing 1/4 Tubing	CLR-703-F CLR-723-F*	5/16 Tubing 1/4 Tubing	CLR-704-F CLR-724-F*	5/16 Tubing G 1	/4 CLR-9208-018-F
Nut Sleeve		Tube Adaptor			Reducer		
5/16 Tubing 1/4 Tubing	CLR-800-F CLR-820-F	5/16 Tube 1/4 Tube	CLR-801-F CLR-821-F	1/4 tube to 5/16 tube	CLR-606-F	G1/4 to G1/8 G1/2 to G1/4	CLR-3613-003-F CLR-3613-015-F
g			Air-Vent	Fitting	gs		
Barbed for 3/16 ID Hose		Barbed for 1/4 ID Hose		Vent Fitting		0	g - Metal Filter
M5 Port CLR-805-AF		M5 Port G1/8 Port	CLR-3890-091-AF CLR-806-AF			G1/8 Port G1/4 Port	CLR-0361-012-F CLR-0361-000-F
IVIOIOIL	CLR-815-AF	G1/4 Port	CLR-3890-093-AF	G1/4 Port	CLR-817-AF	G1/2 Port	OFU-0301-000-L

^{*}Max 6600 psi *

^{**}Max 6000 psi



CARR LANE ROEMHELD MFG. CO.

Fittings


Hydraulic 37° Flare Fittings (7250 psi static)						
Tube End	Nut Elbow	Branch Tee	Run Tee			
5/16 Tubing CLR-400-F 1/4 Tubing CLR-420-F	5/16 Tubing	5/16 Tubing CLR-403-F 1/4 Tubing CLR-423-F	5/16 Tubing CLR-404-F 1/4 Tubing CLR-424-F			
Union Male Female (1.75 in. Flare to Flare) 5/16 Tubing Male CLR-301-F 1/4 Tubing Male CLR-321-F	Elbow	Tee	Cross			
5/16 Tubing Female CLR-401-F 1/4 Tubing Female CLR-421-F	5/16 Tubing CLR-302-F 1/4 Tubing CLR-322-F	5/16 Tubing CLR-303-F 1/4 Tubing CLR-323-F	5/16 Tubing CLR-304-F 1/4 Tubing CLR-324-F			
Cap Port Fitting Fer		Tube Plug	Nut 45			
5/16 Tubing CLR-501-F 1/4 Tubing CLR-521-F	5/16 Tubing CLR-813-F* 1/4 Tubing CLR-815-F*	5/16 Tubing CLR-502-F 1/4 Tubing CLR-522-F	5/16 Tubing CLR-406-F 1/4 Tubing CLR-426-F			
Banjo Elbow	Port Fitting Male	Port Plug	Double Port			
	5/16 Tubing G 1/4 CLR-807-F	G 1/8 Port CLR-3610-263 G 1/4 Port CLR-810-F				
5/16 Tubing CLR-814-F	5/16 Tubing G 1/8 CLR-903-F 1/4 Tubing G 1/4 CLR-816-F*	G 1/4 Port CLR-810-F G 1/2 Port CLR-3610-000-F	G 1/4 Port CLR-809-F			

^{*}Max. 6600 psi.



Manifold Mounting

 
Benefits



- · Eliminates tubing or hoses from working
- · Very close mounting of clamps
- · Only one fluid feed line
- · No traps for chips due to "clean" design
- · Do not use NPT fittings

Many Roemheld components can be manifold mounted... powered directly through fluid passages drilled in a fixture. This unique mounting capability eliminates tubing and hoses in the working area, for clean fixtures without chip traps. Even fluid passages longer than your drilling capacity are possible by drilling shorter passages in separate blocks, then connecting them using connecting inserts.

Perhaps most important, manifold mounting lets you put clamps and work supports closer together and in tighter spots (often letting you place more

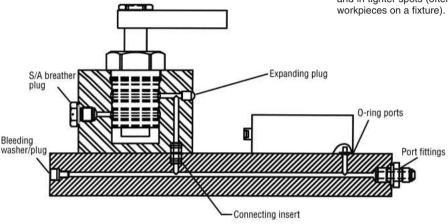

Installation Steps

For easiest installation, we recommend the following procedure (Step 1 through 6). For proper sealing, the tapped hole's bottom must be flat, with a surface finish 125 RMS or better, and perpendicular to the hole's axis. A small drill-point is allowable (see component's catalog page for dimensions). A delrin sealing washer for the hole bottom is furnished with each component. Do not use sealing compound or teflon tape. Part numbers to order bottoming taps:

1-1/4 - 16 CLR-512-TL

1-1/2 — 16 CLR-515-TL

1-7/8 - 16 CLR-518-TL

Installing Threaded Body Components



Step 1 Drill fluid passage



Step 2 Pilot drill to desired Drill connecting Tap drill for installation depth (less than max. drill point dia.)



Step 3 fluid passage



Step 4

 


Step 5 Counterbore body thread hole to produce



Step 6 Tap body thread

Installing Components with O-Ring Ports



Mounting surface should be ground flat with a 32 RMS or better surface finish, so that the 0-ring seals properly. Torque mounting screws evenly. Do not use sealing compound or teflon tape.

Order Extending Clamps, Swing Clamps, and Sequence Valves by a different part number for manifold mounting (O-rings are included, and no port plugs are needed). Edge Clamps and Block Work Supports are easily converted to manifold mounting (order o-ring CLR-3000-343-SW and CLR-810-F port plug)

 
Port Fittings



Standard port fitting found in virtually all Roemheld components. To use for custom manifolds, order special bottoming tap for installation, part number CLR-514-TL. Drill, tap (5/8-inch minimum depth) and spotface. Do not use sealing compound or teflon tape.

CLR-902-F

1/2-20 Port Fitting
Port fitting for custom manifolds. Install using a standard 1/2-20 tap. Drill, tap (5/8inch minimum depth) and spotface. Do not use sealing compound or teflon tape.



1/4 BSPP THDS - 5/8 Deep



CARR LANE ROEMHELD MFG. CO.

Sales — Phone (636) 386-8022 Fax (636) 386-8034 Engineering — Phone 1-800-827-2526 Web www.clrh.com

 
Manifold Mounting


Benefits



Connecting Plates Together

Connecting Inserts are used to provide a leak-free connection when a fluid passage goes through two separate sections of a fixture. The insert has two O-ring seals to provide leak-free sealing. Choice of two insert lengths: short (for flush connections) and long (for connections with a gap of up to .197"). Do not use sealing compound or teflon tape. Made from steel, with FKM O-rings. For removable plates consider flush faced coupling elements CLR-0460-735-TBC and CLR-0460-638-TBN.



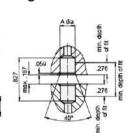





Type	Short	Long-Metric	Long-USA
Max. operating pressure	7250 psi	7250 psi	7250 psi
A dia.	.3937/.3943	.3937/.3943	.3750/.3756
Insert length	.551	.748	.748
Max. misalignment of holes	.002	.004	.004
Part No.	CLR-9210-132	CLR-9210-127-F	CLR-901-F

Plugging Drilled Passages



  Expanding Plugs are used to plug the end of an oil channel. Each plug consists of a ball mounted into a sleeve which, when installed, expands and seals to the inner bore of the hole. Installation consists of preparing the hole, inserting the plug, and striking the ball to expand the sleeve. Do not use sealing compound or tape. Please consider using bleed screws instead of expanding plugs in some holes. This allows bleeding of the drilled channels.






	Size	1	2	3
	D1	.236	.315	.394
	D2 +0.004, -0.0	.236	.315	.394
ř.	D3 max.	.208	.291	.37
÷	L1	.256	.335	.433
	L2	.339	.461	.598
	L3 min.	.248	.327	.425
	X +/-0.008	.016	.012	.016
	Part No.	CLR-916-F	CLR-906-F	CLR-926-F
	Installation Tool for Expanding Plug	CLR-HT-MBM-060	CLR-HT-MBM-080	CLR-HT-MBM-100

Hydraulic Bleeding



Some drilled oil passages should have the ability to be opened for fixture bleeding. By using a sealing washer and plug, air in oil passages can be released. This is only recommended for small holes. Larger holes should be prepared to accept larger threaded plugs like CLR-810-F.

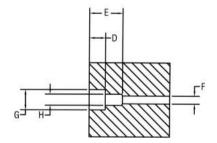

Size	1	2
D	.197	.276
E	.404	.67
F	.16	.24
G	.325	.441
Н	M4	M6
Part No., Washer	CLR-3001-713-F	CLR-3000-779
Part No., Bolt	CLR-3300-357-F	CLR-3300-223-F

Air Venting - Single Acting Elements



When using Single Acting cylinders or work supports, it is important to vent the spring volume to a clean environment. If this is not done, coolant and chips can be sucked into the element during the return

Port size	G 1/8	G 1/4	G 1/2	
Part No., Filter Plug	CLR-0361-012-F	CLR-0361-000-F	CLR-0361-006-F	




CARR LANE ROEMHELD MFG. CO.


Sales — Phone (636) 386-8022 Fax (636) 386-8034


Engineering — Phone 1-800-827-2526 Web www.clrh.com


Contact Bolts

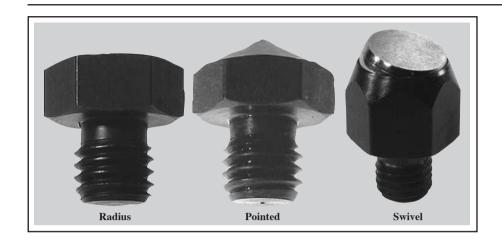


  
- Radius contact bolt for most applications
- Pointed contact bolt for clamping in holes, and point clamping
- Swivel contact bolt distributes clamping force to prevent marring
- 1144 steel, hardened 50-60 RC



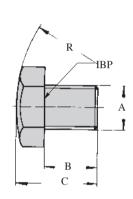



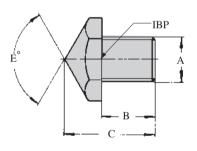

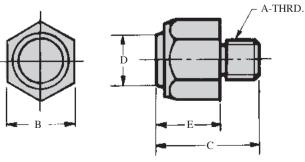

\Box	ROEMHELD
	HILMA = STARK

Radius						
Part No.	Α	В	С	D Hex	R Radius	
CLR-401-CB	1/4-20	1/4	3/8	7/16	05/00	
CLR-400-CB	1/4-20	3/8	25/32	//10	25/32	
CLR-404-CB	5/16-18	5/16	1/2	1/2	1	
CLR-402-CB	3/10-16	3/8	25/32	1/2	25/32	
CLR-403-CB	3/8-16	1/2	7/8	9/16	1-3/8	
CLR-405-CB	1/2-13	1/2	7/8	3/4	1-3/4	
CLR-406-CB	5/8-11	25/32	1-3/16	15/16	2-3/8	
CLR-408-CB	3/4-10	1	1-3/8	1-1/8	2-3/8	
CLR-409-CB	1-8	1-3/16	1-27/32	1-1/2	3-15/16	
CLR-3614-027-CB	M5	.35	.75	8mm	.79	
CLR-3614-039-CB*	M6	.24	.37	10mm	.79	
CLR-3614-016-CB	IVIO	.39	.79	TOTTITI	.79	
CLR-3614-038-CB*	M8	.31	.51	13mm	.98	
CLR-3614-001-CB	IVIO	.39	.79	11mm	.79	
CLR-3614-002-CB	M10	.47	.87	17mm	1.38	
CLR-3614-028-CB	M12	.47	.87	19mm	1.77	
CLR-3614-015-CB	M20	.98	1.38	30mm	2.36	
CLR-3614-018-CB	M30	1.38	2.13	46mm	3.94	
CLR-3614-019-CB	M42	1.77	2.80	65mm	5.51	
CLR-3614-020-CB	M48	2.36	3.54	75mm	9.84	


* These sizes are not heat treated.

Pointed						
Part No.	Α	В	С	D Hex	E°	
CLR-413-CB	1/4-20	1/4	3/4	7/16	90	
CLR-414-CB	3/8-16	1/2	1-1/16	9/16	90	
CLR-415-CB	1/2-13	1/2	1	3/4	120	
CLR-416-CB	5/8-11	25/32	1-3/8	15/16	120	
CLR-417-CB	3/4-10	1	1-9/16	1-1/8	120	
CLR-418-CB	1-8	1-3/16	1-31/32	1-1/2	120	
CLR-3614-033-CB	M5	.35	.63	8mm	120°	
CLR-3614-068-CB	M6	.24	.71	10mm	90°	
CLR-3614-032-CB	IVIO	.39	.87	TOMM	90°	
CLR-3614-069-CB	M8	.31	.87	13mm	90°	
CLR-3614-021-CB	M10	.47	1.06	17mm	90°	

Swivel					
Part No.	A Dia	B Hex	С	D Dia	E
CLR-420-CB	5/16-18	9/16	.82	13/32	1/2
CLR-421-CB	3/8-16	13/16	1.29	19/32	13/16
CLR-422-CB	1/2-13	7/8	1.23	5/8	13/16
CLR-423-CB	5/8-11	1-1/16	1.61	13/16	1
CLR-3614-228-CB	M6	11mm	21mm	7.2mm	13mm
CLR-3614-072-CB	M8	11mm	21mm	7.2mm	13mm
CLR-3614-073-CB	M10	17mm	28mm	10,5mm	18mm
CLR-3614-074-CB	M12	17mm	30mm	10.5mm	18mm

CARR LANE ROEMHELD MFG. CO.

Application Example

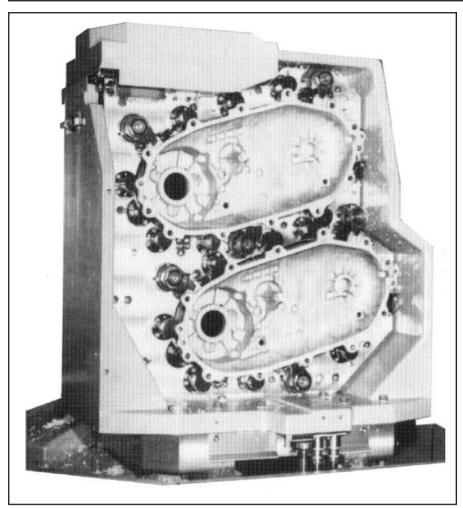

Two-sided Palletized Fixture for Machining Both Sides of an Aluminum Housing




Cartridge/Manifold-Mounted **Swing Clamps** (See Swing Clamps section)



Fluid Advanced Work Supports (See Work Supports section)

Palletized fixture holds two aluminum castings, allowing complete machining of both sides with only one setup. The fixture uses manifoldmounted Swing Clamps and Work Supports. Fluid is supplied through passages in the vertical fixture plate, so the fixture is free of tubing lines.



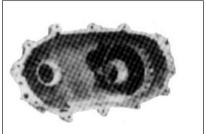

Both faces of the workpiece (above) are machined with one setup. Vertical fixture plate has cutouts (see photo at right) to allow access from both sides. Product designers integrated special clamping areas into the casting for easier fixturing.





CARR LANE ROEMHELD MFG. CO.

Sales — Phone (636) 386-8022 Fax (636) 386-8034 Engineering — Phone 1-800-827-2526

Web www.clrh.com

PRECISION MACHINE VISES INCREASE PRODUCTIVITY

Use in Conjunction with the Zero Point Mounting System for Faster, More Accurate Fixture Set Ups







For Machine Vises, See Pages 94-111

REDUCE SET-UP AND DOWNTIME!

Zero Point Mounting System for Quick **Change Fixturing**

This comprehensive system utilizes clamping components and insertion nipples, which provide an immediate zero point orientation.

- Reduce set up time by as much as 90% with zero point mounting
- Existing fixtures can be easily adapted
- Highly accurate positioning and repeatability
- Increased productivity
- Fast payback
- Set-up times slashed
- Fixture life extended

For Zero Point Mounting, See Pages 114-116



Fenton, MO 63026 (636) 386-8022

CARR LANE ROEMHELD MFG. CO.





CARR LANE ROEMHELD MFG. CO.

927 Horan Drive Fenton, MO 63026 Phone (636) 386-8022 Fax (636) 386-8034 Free Engineering Support 1-800-827-2526 www.carrlaneroemheld.com

Connect with us: **f** • in • You • •







