

## Selection Guide: Printer Consumables

Model No	Description	Ribbon Code	Paper Roll
050, 053	Omron 050, 053	ERC03	
100DP series	Citizen 107DP, 124DP, 128DP, 129DP	RS1335	PR5763
1000 series	Datac 1000 series	ERC09	PR5763
1000 series	Sharp 1000	RS1330	
1000	Citizen 1000	RS1330	
1010	Canon	RS1330	
110	Omron CAT 110 Payment Terminal	ERC09	
120P series	Alder 120P, 121P, 121PD	ERC02	
1200 series	Canon 1200, 1212MP, 1217, 1218	RS1330	
1228PD	Alder 1228PD	ERC02	
140	DTS 140	RS1330	
140PP	Citizen 140PP	RS1335	PR5763
1410	Casio 1410	ERC02	
150	CiToh	ERC05	
1500 series	Sharp 1500, 1550, 1560, 1564, 1565	RS1330	
200, 250	Kingtron 200, 250	ERC03	
200, 300	Casio ECR 200, 300	ERC03	
2000 series	DTS 2000, 3100, 2200	ERC03	
2000 series	Sharp 2000, 2050, 2350, 2351, 2360, 2363, 2500, 2510	RS1330	
204SR/208SR	Casio ECR 204SR, 208SR, 300	ERC03	
2061	NCR 2061 printer	ERC03	
210, 220, 240	Seiko printer mechanism	ERC03	
2200 series	Casio ECR 2200, 2202, 2204	ERC03	
2400	Unisys 2400	RS1330	
2500	Sharp 2500 ECR	ERC03	
2531	Omron 2531	ERC03	
2700	Micro 2700 slip printer	ERC27	
2800	Hugin 2800	ERC03	
2800 series	Sharp 2850, 2855, 2860, 2875	ERC03	
3000	Citizen 3000	RS1330	
3100	Sharp 3100 ECR	ERC18	
320DP series	Citizen 320DP, 325DP, 330DP, 335DP	RS1335	PR5763
3200 series	Casio ECR 3202, 3205, 3207	ERC03	
3210	Sharp 3210 ECR	ERC23	
3300	Sharp 3300 ECR	ERC18	
3456	Sharp 3456 ECR	ERC03	
3500 series	Sharp 3502, 3522, 3532	ERC02	
3500 series	Sharp 3500, 3510, 3520, 3521, 3535, 3575	RS1330	
3600 series	Casio ECR 3600, 3604, 3608	ERC03	
3700 series	Casio ECR 3701, 3702, 3708	ERC03	
3762	IBM 3762	RS1330	
3800 series	Casio ECR 3800, 3804, 3808	ERC03	
3908ER	Casio ECR 3908ER	ERC03	
4000	Casio ECR 4000	ERC03	
4000	Sharp 4000	RS1330	
4000 series	Unisys 4000, 4600	ERC02	

Model No	Description	Ribbon Code	Paper Roll
4100SR	Casio 4100SR	ERC18	
4200CR	Sharp 4200CR	ERC03	
4600 series	Casio ECR 4600, 4612	ERC03	
4800 series	Casio ECR 4800, 4812, 4830, 4920	ECR03	
4920ER	Casio ECR 4920ER	ERC03	
52SP	Sharp	ERC11	
5200, 5210	Sharp 5200, 5210	ERC11	
5430	Sharp 5340	ERC03	
5600 series	Sharp 5600, 5605, 5615, 5625, 5640, 5645	ERC03	
580	Omron 580	ERC03	
580	Sanyo 580 ECR	ERC03	
5820, 5835	Sharp 5820, 5835	ERC03	
590	Unisys 590	RS1330	
590, 595	Sanyo 590, 595 ECR	ERC23	
6100	Sharp 6100	RS1330	
690, 691, 692	Sanyo 690, 691, 692 ECR	ERC03	
7000 series	Casio ECR 7000, 7100, 7200, 7300, 7500, 7700	ERC03	
7000, 7100	Sharp ECR 7000, 7100	ERC11	
81	Omron 81	ERC03	
8100	Casio ECR 8100	ERC03	
A-20, 2000	Anker Data System 20	ERC03	
BE-2500-6500	Sharp 2500 - 6500	ERC03	
BE-81PR	Sharp BE 81PR	ERC02	
CASHCART	Olivetti Cashcart	ERC03	
CAT-110	Omron CAT 110 Payment Terminal	ERC09	
CE-4530	Casio CE4530	ERC18	
CBM-210	Citizen CBM 210 thermal printer		PR11250T
CBM-231	Citizen CBM 231 thermal printer		PR8080T
CBM-530	Citizen CBM 530 receipt printer	RS1330	PR7060P1
CBM-531	Citizen CBM 531 POS printer	RS1330	PR7060P2
CBM-710	Citizen CBM 710 POS printer	RC700	PR7676
CBM-720	Citizen CBM 720 POS printer	RC700	PR7676
CBM-730	Citizen CBM 730 sprocket feed printer	RC700	PL7025X1
CBM-750	Citizen CBM 750 printer	RC700	PR7676
CBM-810	Citizen CBM 810 Slip printer	RC810	
CE-4530	Casio CE 4530	ERC18	
CL series	Kingron CL series	ERC23	
CP-1200 series	Canon CP1200, 1212	ERC02	
CP-2323D	Canon CP2323D	ERC02	
CS series	Sharp CS 1055, 1165, 1181, 1191, 1601, 1602, 1604, 1606, 1608, 1680, 1800, 2046, 2053, 2054, 2061, 2062, 2063, 2068, 2137, 2156, 2157, 2165, 2182, 2187, 2606, 2610, 2664, 4166, 4266, 4287, 4608, 4610, 4800, 4801	RS1330	
CS-2050 series	Sharp CS 2050, 2053	ERC02	
CS-2050	Unisys CS 2050	RS1330	
DP-8340	Star DP 8340 receipt printer	RS1330	PR11580
DPU-10	Seiko-Epson thermal printer		PR37XXT
DPU-20	Seiko-Epson thermal printer		PR57XXT
DPU-40	Seiko-Epson thermal printer		PR79XXT
EC-1500	Catey Ergociser		PR5745T
ECR-380, 480, 580	Sanyo ECR 380, 480, 580	ERC03	

Model No	Description	Ribbon Code	Paper Roll
ECR-400SP	Casio ECR 400SP	ERC03	
ECR-70, 710, 720	Sanyo ECR 70, 710, 720	ERC03	
EHT-7	Epson EHT-7 printer unit	ERC05	
EL series	Sharp EL 1050, 1051, 1056, 1057, 1058, 1095, 11151, 1152, 1153, 1154, 1191, 6300,	RS1335	
EL7000	Sharp EL 7000	ERC05	
ER-2580	Sharp ER 2580	ERC03	
ER-2970	Facit ER 2970 printer	ERC03	
ER-3100	Sharp ER 3100	ERC18	
ER-3210	Sharp ER 3210	ERC23	
ER-3230-3241	Sharp ER 3230 - 3241	ERC03	
ER-3712-4320	Sharp ER 3712 - 4320	ERC03	
ERC-1000	Citizen ERC 1000 cash register	RS1335	PR5763
ERC-1500	Citizen ERC 1500 cash register	RS1335	PR5763
ERC-2000	Citizen ERC 2500, 2500, 2800 cash reg.	RS1335	PR5763
ERC-3000	Citizen ERC 3000 cash register	RS1335	PR2870
ERC-3100	Sharp ERC 3100 cash register	ERC18	PR7676
ERC-4000	Citizen ERC 4000, 4500 cash register	RS1335	PR3770
ERC-580/720	Sanyo ERC 580, 690, 700, 710, 720	ERC03	
ERC-590, 595	Sanyo ERC 590, 595	ERC23	
ERC-6000	Citizen ERC 6000	RS1335	RS4070
ERC-7000/7100	Sharp ERC 7000, 7100	ERC11	
FCR-4230	Sharp FCR 4230	ERC03	
FX series	Kingtron FX series	ERC03	
GP-8908	TEC GP 8909	ERC03	
GS-800	Fujitsu GS 800 Slip printer	ERC27	
GS-8190	Intelligent printer	ERC09	PR5830
H-409A	Epson PX-4 cartridge printer	ERC09	PR5822
H-50	Hugin Cash Register		PR4450P1
HX-20	Epson HX-20	ERC09	
IDP-3110	Citizen IDP 3110 POS printer	RC3110	PR5730P1
IDP-3530	Citizen IDP 3530 40 Col printer	RC700	PR7676
IDP-3540	Citizen IDP 3540 40 Col printer	RC700	PR7676
IDP-3541	Citizen IDP 3541 40 Col printer	RC700	PR7676
IDP-560	Citizen IDP 560 receipt printer	RS1335	PR7060
IDP-562	Citizen IDP 562 receipt printer	RC562	PR7060
IDP-570	Citizen IDP 570 40 Col printer	RS1335	PR7060
IR-01	Citizen printer ribbon	RS1335	
IR-51	Citizen printer ribbon	RC562	
IR-606	Citizen printer ribbon	RC700	
IR-61	Citizen printer ribbon	RC700	
JX-64	Kingtron JX 64	ERC18	
L-50, 58	Sharp L 50, 58 ECR	ERC03	
LTP-251	Seiko-Epson thermal printer mechanism		PR57XXT
LTP-451	Seiko-Epson thermal printer mechanism		PR112XXT
LTP-452	Seiko-Epson thermal printer mechanism		PR112XXT
LX-700, 720	Sanyo LX 700,720	ERC03	
M-150II	Epson M150 printer mechanism	ERC05	
M-160	Epson M160 printer mechanism	ERC09	PR5830
M-163	Epson M163 printer mechanism	ERC09	PR5830

Model No	Description	Ribbon Code	Paper Roll
M-164	Epson M164 printer mechanism	ERC15	PR5830
M-170	Epson M170 printer mechanism	ERC15	PR7060
M-180	Epson M180 printer mechanism	ERC09	PR5830
M-181	Epson M181 printer mechanism	ERC09	PR5830
M-182	Epson M182 printer mechanism	ERC09	PR5830
M-183	Epson M183 printer mechanism	ERC09	PR5830
M-185	Epson M185 printer mechanism	ERC09	
M-186	Epson M186 printer mechanism	ERC24	
M-210	Epson M210 printer mechanism	ERC02	PR7676
M-220	Epson M220 printer mechanism	ERC03	
M-240	Epson M240 printer mechanism	ERC03	
M-250	Epson M250 printer mechanism	ERC23	PR7676
M-255	Epson M255 printer mechanism	ERC23	PR7676
M-260	Epson M260 printer mechanism	ERC23	PR7676
M-265	Epson M265 printer mechanism	ERC23	PR7676
M-280	Epson M280 printer mechanism	ERC23	
M-280A	Epson M280A printer mechanism	ERC23	
M-280V	Epson M280V printer mechanism	ERC23	
M-290	Epson M290 slip printer mechanism	ERC27	
M-512G	Epson M12G printer mechanism	RS1350	PR8979
M-522G	Epson M522G printer mechanism	RS1350	PR8979
M-542G	Epson M542G slip printer mechanism	RS1335	
M-2640	Epson M2640 printer mechanism	ERC18	
M-2661	Epson M2661 printer mechanism	ERC18	
M-2728	Epson M2728 printer mechanism	ERC21	
M-2748	Epson M2748 printer mechanism	ERC21	
M&S	M&S Taxi Meter	ERC05	
MERCATOR	Olivetti Mercator 50	ERC03	
METRO	Metro Taxi Meter	ERC05	
MTP-102	Seiko-Epson thermal printer mechanism		PR37XXT
MTP-201	Seiko-Epson thermal printer mechanism		PR57XXT
MTP-401	Seiko-Epson thermal printer mechanism		PR79XXT
MZ-80	Sharp MZ 80	ERC03	
ND-6901	Siemens Nixdorf ND6901 POS printer	RC40-010	PR7676P1
P-40	Epson P-40 thermal printer		PR11230T
QS series	Sharp QS 1072, 1073, 1074, 1155, 1156, 1402, 1602, 1604, 2156, 2157, 2166, 2184, 2186, 2602, 4164	RS1330	
QS-2000 series	Sharp QS 2053, 2156, 2660	ERC02	
PX-16	Epson PX-16 printer unit	ERC09	PR5883
PX-4	Epson PX-4 cartridge printer	ERC09	PR5822
RC-03	Ribbon cassette	ERC03	
RC-11	Ribbon cassette	ERC11	
RC-18	Ribbon cassette	ERC18	
RC-22	Ribbon cassette	ERC22	
RC-23	Ribbon cassette	ERC23	
RS-2500 series	Omron RS 2500 series printer	ERC03	
RS-3010, 3410	Omron RS 3010, 3410	ERC03	
RS-31, 40	Omron RS 31	ERC03	
RS-4043, 4210	Omron RS 4043, 4210	ERC03	
RS-5510, 5541	Omron RS 5510, 5541	ERC18	
RS-80 series	Omron RS 80, 8010, 8020, 8025, 8030, 8040	ERC03	

Model No	Description	Ribbon Code	Paper Roll
RS-8500	Omron RS 8500	ERC18	
RS series	Kingtron RS series ECR	ERC03	
RX-64	Kingtron RX 64	ERC18	
S-600, 690	Unisys S 600, 690, 6460	ERC02	
SA-2000	Casio SA 2000	ERC18	
SA-2100	Casio SA 2100	ERC21	
SMP-301,302	Sanyo SMP 301, 302	ERC03	
SP-200 series	Casio SP 200, 300	ERC03	
SP-212	Star POS printer	RC200	PR7676
SP-312, 342	Star SP 312/342 POS Printer	RC300	PR7676
SP-321, 322, 323	Star SP 300 series sprocket printers	RC300	
SP-349	Star SP 349 kitchen/POS printer	RC300	PR7676
SP-80	Omron SP 80 slip printer	ERC03	
SP-85	Omron SP 85	ERC18	
STP-211	Seiko-Epson thermal printer mechanism		PR57XXT
STP-411	Seiko-Epson thermal printer mechanism		PR112XXT
SX-720	Sanyo SX 720 ECR	ERC03	
TCR-15	Gilbarco TCR 15	ERC18	
TK-2000	Casio TK 2000	ERC03	
TK-2100	Casio TK 2100	ERC18	
TK-4000	Casio TK 4000	ERC18	
TR series	Kingtron TR series ECR	ERC03	
TM-210A	Epson TM 210A ticket printer	ERC02	PR7676
TM-215S	Epson TM 215S sprocket POS printer	ERC02	
TM-267	Epson TM 267 ticket/journal printers	ERC23	PR7676
TM-270	Epson TM 270 2.5 station printer	ERC23	
TM-290	Epson TM 290 slip printer	ERC27	
TM-300	Epson TM 300 POS printer	ERC34	PR7676
TM-545GB	Epson TM 545 slip printer	ERC11	
TM-930	Epson TM 930 3 station printer	ERC31	PR7070P1
TM-T60	Epson TM-T60 thermal printer		PR6080T
TM-T80	Epson TM-T80 thermal printer		PR8080T
TSP-312/342	Star TSP-312, 342 thermal printer		PR8280T
TSP-342	Star TSP-342 thermal printer (labels) (Paper Labels)		PL8030T PL8063T PL8080T
VX series	Sharp VX 1174, 1184, 1612, 2612	RS1330	
XE series	Sharp XE 1050, 1051, 2050,	RS1330	
ZL series	Sharp ZL 5200, 5300, 5400, 6000, 6100	RS1330	

## Original Ribbon Codes Cross Reference

Original Brand	Original Ribbon Code	UMD Code
	23B/BR	RS1330
	24B/BR	RS1335
Citizen	IR-01	RS1335
Citizen	IR-51	RC562
Citizen	IR-606	RC700
Citizen	IR-61	RC700
Epson	26001P	ERC18
Epson	29001P	ERC27
Epson	5051	ERC11
Epson	ERC-02	ERC02
Epson	ERC-03	ERC03
Epson	ERC-05	ERC05
Epson	ERC-09	ERC09
Epson	ERC-11	ERC11
Epson	ERC-15	ERC15
Epson	ERC-18	ERC18
Epson	ERC-21	ERC21
Epson	ERC-23	ERC23
Epson	ERC-27	ERC27
Epson	ERC-32	ERC31
Unisys	19-2813-558	ERC02

### Notes:

- (1) Items are listed in model number order.
- (2) This list is not exhaustive, please contact UMD for items not listed.
- (3) Indicative paper type is shown, both paper roll diameter and either 1 ply (P1) or 2 ply (P2) need to be specified. Refer to UMD price list for full *Order Code*.
- (4) Ribbon codes do not indicate colour, please refer to price list for details of colours available and full *Order Code*.
- (5) E. & O. E.