

# OMRON

## V430-F Series Autofocus Multicode Reader

### User Manual for Communication Settings



Z407-E1-03

84-9350024-02 Rev B

**NOTE**

- All rights reserved.
- No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form, or by any means, mechanical, electronic, photocopying, recording, or otherwise, without the prior written permission of OMRON.
- No patent liability is assumed with respect to the use of the information contained herein. Moreover, because OMRON is constantly striving to improve its high-quality products, the information contained in this manual is subject to change without notice. Every precaution has been taken in the preparation of this manual. Nevertheless, OMRON assumes no responsibility for errors or omissions.

Neither is any liability assumed for damages resulting from the use of the information contained in this publication.

**Trademarks**

- Sysmac and SYSMAC are trademarks or registered trademarks of OMRON Corporation in Japan and other countries for OMRON factory automation products.
- Microsoft, Windows, Windows Vista, Excel, and Visual Basic are either registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.
- ODVA, CIP, CompoNet, DeviceNet, and EtherNet/IP are trademarks of ODVA.
- QR Code is a registered trademark of DENSO WAVE INCORPORATED.

Other company names and product names in this document are the trademarks or registered trademarks of their respective companies.

**Copyrights**

Microsoft product screen shots reprinted with permission from Microsoft Corporation.

# Introduction

---

Thank you for purchasing this code reader product.

This manual contains information that is necessary for using V430-F Series.

Please read this manual and make sure you understand the functions and capabilities before you attempt to use it in a control system.

Keep this manual in a safe place where it will be available for reference during operation.

## Intended Audience

This manual is intended for the following personnel, who must also have knowledge of electrical systems (an electrical engineer or the equivalent).

- Personnel in charge of introducing barcoding systems.
- Personnel in charge of designing barcoding systems.
- Personnel in charge of installing and maintaining barcoding systems.
- Personnel in charge of managing barcoding systems and facilities.

## Applicable Products

This manual covers the following products.


- V430-F Series

Parts of the specifications and restrictions for each product may be listed in other manuals. Please refer to on *Related Manuals* on page 11.

# Manual Structure

## Page Structure

The following page structure is used in this manual.

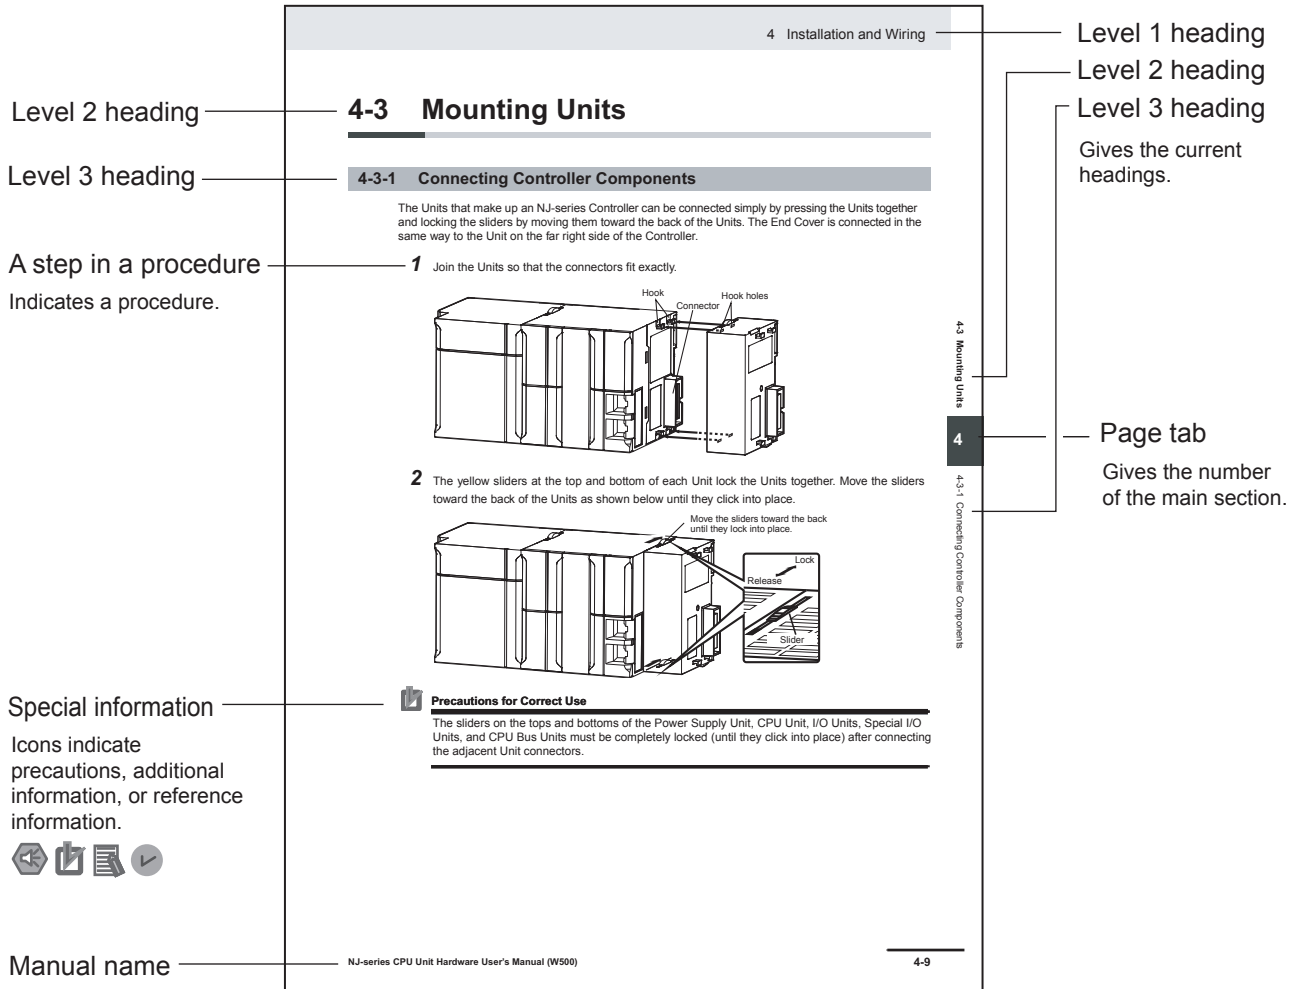

Note This page is a sample for the purpose of describing the page structure. It differs in its actual content.

## Icons

The icons used in this manual have the following meanings.



---

### **Precautions for Safe Use**

Precautions on what to do and what to avoid doing to ensure the safe use of the product.



---

### **Precautions for Correct Use**

Precautions on what to do and what to avoid doing to ensure proper operation and performance.



---

### **Additional Information**

Additional information to read as required.  
This information is provided to increase understanding or make operation easier.



# CONTENTS

---

<b>Introduction</b> .....	<b>1</b>
Intended Audience .....	1
Applicable Products .....	1
<b>Manual Structure</b> .....	<b>2</b>
Page Structure .....	2
Icons .....	3
<b>Safety Precautions</b> .....	<b>7</b>
<b>Precautions for Safe Use</b> .....	<b>8</b>
<b>Precautions for Correct Use</b> .....	<b>9</b>
<b>Regulations and Standards</b> .....	<b>10</b>
<b>Related Manuals</b> .....	<b>11</b>
<b>Revision History</b> .....	<b>12</b>

## Section 1 Communication Specifications Overview

---

<b>1-1 Confirming the System Configuration</b> .....	<b>1 - 2</b>
1-1-1 V430-F Series System Configuration .....	1 - 2
<b>1-2 Communicating with an External Device</b> .....	<b>1 - 4</b>
1-2-1 Basic Control Operations of the Code Reader .....	1 - 4
1-2-2 Applicable Communications Protocols for the V430-F Series .....	1 - 5

## Section 2 Controlling Operation and Data Output with Parallel I/O

---

<b>2-1 Controlling Operation and Data Output with Parallel I/O</b> .....	<b>2 - 2</b>
2-1-1 Basic Operation with a Parallel I/O Connection .....	2 - 2
2-1-2 Wiring and Electrical Specifications for Parallel I/O .....	2 - 3
2-1-3 Change the Behavior of Operation .....	2 - 5
2-1-4 Change the Type of Trigger .....	2 - 6
2-1-5 Timing Charts for each Trigger Mode .....	2 - 7
2-1-6 Sample Ladder Program .....	2 - 8
2-1-7 Change the Assignments for the Output Signal (Output 1 to 3) ON Condition .....	2 - 9
2-1-8 Change the ON/OFF timing of the Output Signal (Output 1 to 3) .....	2 - 17
2-1-9 Change the Polarity of Output Signal (Output 1 to 3) .....	2 - 20
2-1-10 Controlling Operation with Signals from an External Device .....	2 - 21

## Section 3 Controlling Operation and Data Output with Ethernet

---

<b>3-1 Controlling Operation and Data Output with EtherNet/IP</b> .....	<b>3 - 2</b>
3-1-1 EtherNet/IP Overview .....	3 - 2
3-1-2 Communication with the Code Reader over EtherNet/IP Connection .....	3 - 4
3-1-3 Communication Flow Between PLC and Code Reader .....	3 - 5
3-1-4 Communication Settings (EtherNet/IP) .....	3 - 6
3-1-5 Tag Data Link Setting Methods .....	3 - 8
3-1-6 Status and Control Signals for Each Input and Output Assembly .....	3 - 11

3-1-7	Timing Charts by Assembly Type .....	3 - 12
3-1-8	Sample Ladder Program .....	3 - 14
3-1-9	Accessing the NJ-series Controller Communication Areas using Variables .....	3 - 15
3-1-10	Communicating with the Code Reader with EtherNet/IP Message .....	3 - 28
<b>3-2</b>	<b>Controlling Operation and Data Output with Serial (TCP) .....</b>	<b>3 - 30</b>
3-2-1	Serial (TCP) Overview .....	3 - 30
3-2-2	Communications Processing Flow .....	3 - 30
3-2-3	Communication Settings (Serial (TCP)) .....	3 - 31
3-2-4	Setting the Data to Output after a Read .....	3 - 33
3-2-5	Controlling Operation from an External Device .....	3 - 38
3-2-6	Serial Command List .....	3 - 42

## Section 4 Controlling Operation and Data Output with PROFINET

---

<b>4-1</b>	<b>Overview of PROFINET .....</b>	<b>4 - 2</b>
4-1-1	Types of PROFINET .....	4 - 3
<b>4-2</b>	<b>V430-F Communications for PROFINET Connections .....</b>	<b>4 - 6</b>
4-2-1	Types of Communication Areas .....	4 - 6
<b>4-3</b>	<b>Setting Up PROFINET Communications .....</b>	<b>4 - 7</b>
4-3-1	Configuring Network Settings in the V430-F .....	4 - 7
4-3-2	Timing Charts by Module Type .....	4 - 10

## Section 5 Controlling Operation and Data Output with RS-232C

---

<b>5-1</b>	<b>Controlling Operation and Data Output with RS-232C .....</b>	<b>5 - 2</b>
5-1-1	Communications Processing Flow .....	5 - 2
5-1-2	RS-232C Wiring .....	5 - 2
5-1-3	Communication Settings (Serial (RS-232C)) .....	5 - 4
5-1-4	Setting Data to be Output after Reading a Code (Serial (RS-232C)) .....	5 - 7
5-1-5	Additional Symbol Information that can be Appended (Serial (RS-232C)) .....	5 - 7
5-1-6	Controlling Operation with Serial (RS-232C) from an External Device .....	5 - 7
5-1-7	Serial Command List (RS-232C) .....	5 - 7

## Appendices

---

<b>A</b>	<b>Command List and EtherNet/IP Specifications .....</b>	<b>A - 1</b>
<b>B</b>	<b>V430 Input and Output Modules .....</b>	<b>B - 1</b>



# Safety Precautions

---

For details on Safety Precautions, please refer to the following manual.

*Autofocus Multicode Reader V430-F Series User Manual (Z407) - Safety Precautions.*

# Precautions for Safe Use

---

For details on Precautions for Safe Use, please refer to the following manual.

*Autofocus Multicode Reader V430-F Series User Manual (Z407) - Precautions for Safe Use.*

# Precautions for Correct Use

---

For detailed precautions on the correct use of the product, please refer to *Autofocus Multicode Reader V430-F Series User Manual (Z407) - Precautions for Correct Use*.

# Regulations and Standards

---

For details on Regulations and Standards, please refer to the following manual.

*Autofocus Multicode Reader V430-F Series User Manual (Z407) - Regulations and Standards.*

# Related Manuals


The followings are the manuals related to this manual. Use these manuals for reference.

Name of Manual	Cat. No.	Model	Usage	Description
V430-F Series Autofocus Multicode Reader User manual	Z392	V430-F Series	When you want to know the product specifications and basic settings for using the V430-F Autofocus Multicode Reader Series	V430-F Series specifications, getting started, explanation of settings, command parameters.
V430-F Series Autofocus Multicode Reader User manual for Communications Settings	Z407		When you want to operate the V430-F Series Autofocus Multicode Reader from an external device.	It describes the system configuration, control methods, I/O specifications, supported network types and communication setting for using the V430-F Series.

# Revision History

---

The manual revision symbol is a number or letter appended at the end of the manual number found in the bottom lefthand corner of the front or back cover.

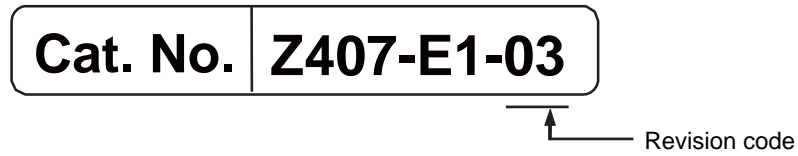

Revision Code	Revision Date	Reason for Revision and Revised Page
01	Dec. 2018	First publication.
02	April 2019	Addition of PROFINET content.
03	October 2020	General improvements.

# 1

## Communication Specifications Overview

This section provides a basic overview of the communications specifications and methods for controlling the code reader. This information is required before performing communications between the V430-F Series and an external device.

---

<b>1-1</b>	<b>Confirming the System Configuration .....</b>	<b>1 - 2</b>
1-1-1	V430-F Series System Configuration .....	1 - 2
<b>1-2</b>	<b>Communicating with an External Device .....</b>	<b>1 - 4</b>
1-2-1	Basic Control Operations of the Code Reader .....	1 - 4
1-2-2	Applicable Communications Protocols for the V430-F Series .....	1 - 5

# 1-1 Confirming the System Configuration

This product is a multi-code reader that captures images of 1D symbols (barcodes) and 2D Symbols and reads and processes their embedded data.


In a system configuration in which it is connected to a PLC, PC, or other external device, serial commands can be received from, and code reading results can be output to the external device.

## 1-1-1 V430-F Series System Configuration

The V430-F can be used in the following types of system configurations.

### Connection using Parallel I/O Interface


Trigger inputs and OK/NG Judgement result outputs are received and sent over I/O cable.

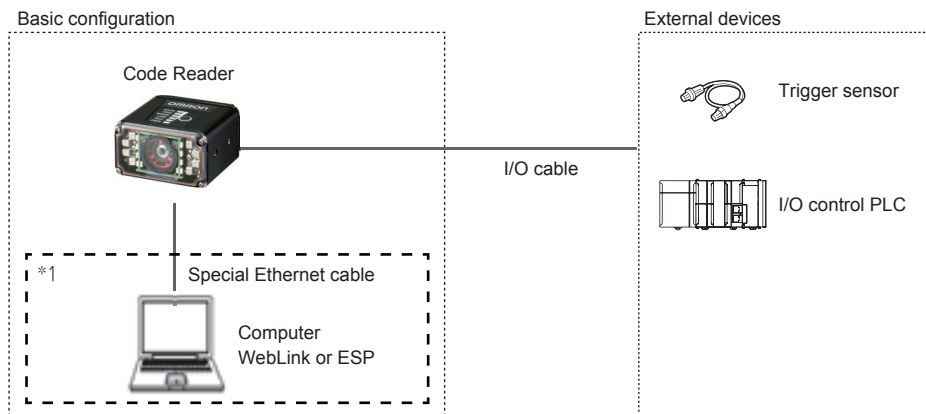

\*1 If monitor display is not required, it is not necessary to connect with a PC during operation.

### Connecting over Ethernet (EtherNet/IP, Serial (TCP), PROFINET)

Establish network connections via an Ethernet cable to input triggers and communication commands and to output reading results (Judgment results and decoded content). Triggers can also be input over parallel I/O. Using the data link function for each network (excluding Serial), data transfer can be done periodically between the code reader and the external device.

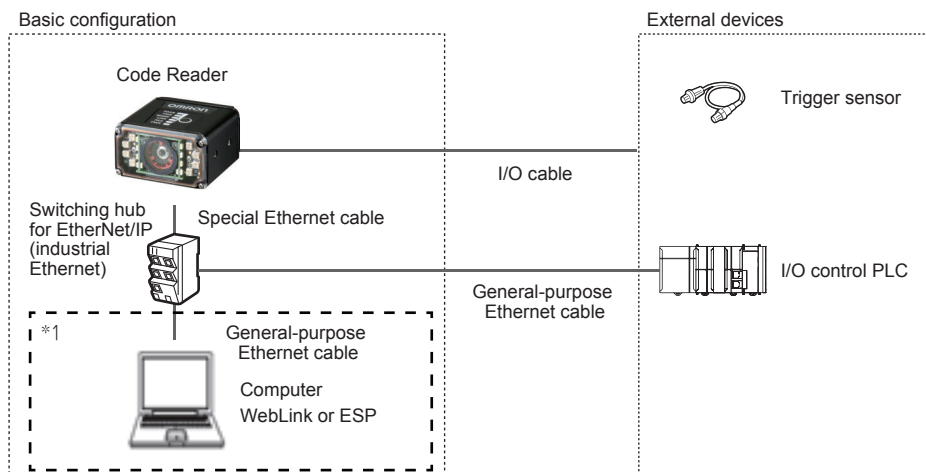




\*1 If monitor display is not required, it is not necessary to connect with a PC during operation.

## Connecting by Serial (RS-232)

Triggers and Serial command input, as well as Read result judgement and Read string content data output is transmitted over RS-232C cable. Triggers can also be input over parallel I/O.

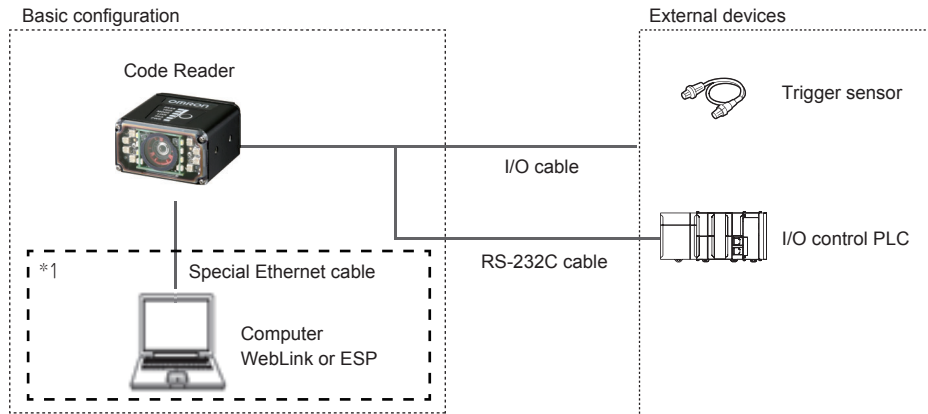

\*1 If monitor display is not required, it is not necessary to connect with a PC during operation.



### Additional Information

The cable to use for Serial (RS-232C) communication is RS-232C- I/O 2-way cable (V430-W2-3M) specifically for the V430-F. Please use this cable when connecting to a PC by RS-232C. For wiring different from that of IBM compatible PC, either make your own converter cable, or use the discrete wire cable type (V430-W8□ Series) with its RxD signal and TxD signal converted.

# 1-2 Communicating with an External Device

This section gives the communications specifications, describes the control methods that you can use for communications, and describes the settings that are required before starting communications with an external device.

## 1-2-1 Basic Control Operations of the Code Reader

The following figure shows basic communications between an external device and the code reader and the flow of signals and data.



The following methods can be used to exchange data between an external device and the code reader.

- Commands that can be input to the code reader from an external device

Type		Description
Control commands	Control Signals (Input Signals)	Reading is executed when a trigger (TRIG signal: ON) is input.
	Communication Command Input	Various commands can be executed, such as a Read commands (trigger) and commands to change settings. The communication commands differ depending on the communications protocol that you use.


- Data output from the code reader to an external device

Type	Description
Status signals	When the code reader confirms the input of a control signal or communication command and starts the reading process, it notifies the external device of its status (by signals such as InReadCycle, etc.) and its judgement with the OK/NG Judgment signal.
Read character string output	You can output the character string read from barcodes, or 2D Codes
Additional information	Additional data such as print quality grade and code position coordinates can be output. For these items to be appended to the output, they must be setup in advance in the detailed settings menu.

## 1-2-2 Applicable Communications Protocols for the V430-F Series

The V430-F Series can be controlled from a PLC, computer, or other external device using various communication protocols.

The following types of communication protocols can be used for controlling the V430-F series from an external device.

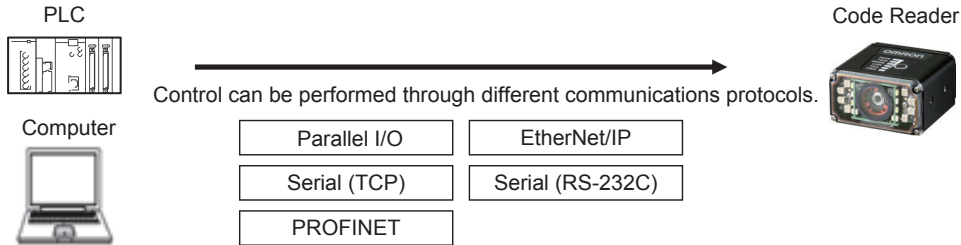

- Applicable Communications Protocols

○: Supported    ×: Not supported

Communication Method	Communication Protocol	Overview	Communication cable type		
			Parallel I/O	Ethernet	RS-232C
Contact Input Interface	Parallel I/O	Data is exchanged between an external device and the code reader through combinations of ON/OFF signals from multiple physical contacts.	○	×	×
Data sharing	EtherNet/IP	This is an open communications protocol. Tag Data Links are used for communication with the code reader. On the PLC, structured variables are created that correspond to the control signals, Command/Response data, and Read data. These variables are then used as I/O Tag Data Links to exchange data between the PLC and the code reader.	×	○	×
	PROFINET	This is an open communications protocol. Software-based RT (Real-time) communications, (SRT) is used for communication with the code reader. The control signals, Command Area/Response Area, and area to store Read result data are assigned in the I/O memory of the PLC, and data is exchanged cyclically between the PLC and the code reader.	×	○	×
Frame transmission	Serial (TCP)	Command frames are sent to the code reader and Response frames are received from the code reader without the use of any specific protocol. Data can be exchanged between the PLC, computer, or other external device and the code reader in ASCII or binary format.	×	○	×
	Serial (RS-232C)	Data can be exchanged in ASCII format over the RS-232C cable connection between the code reader and its controlling device (PLC, PC, or other external device).	×	×	○

## Simultaneous Use of Communication Methods and Connections

○: Supported   ×: Not Supported   -: N/A

V430-F Connection Method	Simultaneous Connection Method				
	EtherNet/IP	PROFINET	Serial (TCP)	Serial (RS-232C)	Parallel I/O
EtherNet/IP	-	×	○	○	○
PROFINET	×	-	○	○	○
Serial (TCP)	○	○	-	○	○
Serial (RS-232C)	○	○	○	-	○
Parallel I/O	○	○	○	○	-



### Additional Information

About connections over network routers

WebLink can connect to code readers on different networks across routers.

- To connect to the code reader, enter its IP address from the browser.
- Set a fixed IP address for the code reader you wish to connect to.

# 2

## Controlling Operation and Data Output with Parallel I/O

---

<b>2-1</b>	<b>Controlling Operation and Data Output with Parallel I/O .....</b>	<b>2 - 2</b>
2-1-1	Basic Operation with a Parallel I/O Connection.....	2 - 2
2-1-2	Wiring and Electrical Specifications for Parallel I/O.....	2 - 3
2-1-3	Change the Behavior of Operation .....	2 - 5
2-1-4	Change the Type of Trigger .....	2 - 6
2-1-5	Timing Charts for each Trigger Mode .....	2 - 7
2-1-6	Sample Ladder Program.....	2 - 8
2-1-7	Change the Assignments for the Output Signal (Output 1 to 3) ON Condition .....	2 - 9
2-1-8	Change the ON/OFF timing of the Output Signal (Output 1 to 3).....	2 - 17
2-1-9	Change the Polarity of Output Signal (Output 1 to 3) .....	2 - 20
2-1-10	Controlling Operation with Signals from an External Device .....	2 - 21


## 2-1 Controlling Operation and Data Output with Parallel I/O

This section explains how to directly connect the code reader to an external device by the I/O cable and the methods that you can use to control the code reader from the external device.

### 2-1-1 Basic Operation with a Parallel I/O Connection

This section describes the basic connections and signal flow with external devices.

Operation for one of the primary uses is described in the example below.

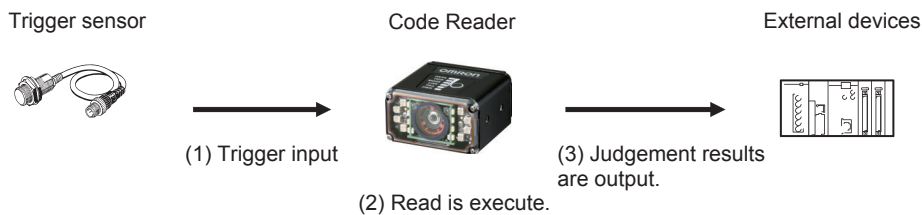

### Example of Trigger Input and OUTPUT signal


Below is an Output assignment example and Timing chart.

[Example assignment of OUTPUT signals]

- Output 1: In Read Cycle  
It turns ON while the code reader is in its Read cycle.
- Output 2: On Match (or Good Read)  
It turns ON when there is a Good Read or when it matches with the Master Symbol (if using the Matchcode function).
- Output 3 : On Mismatch (or No Read)  
It turns ON when there is a No Read or when it does not match with the Master Symbol (if using the Matchcode function).

For how to set up the Output signal assignments, please refer to *How to Assign the Output Signals* on page 2 - 10

<Timing Chart>

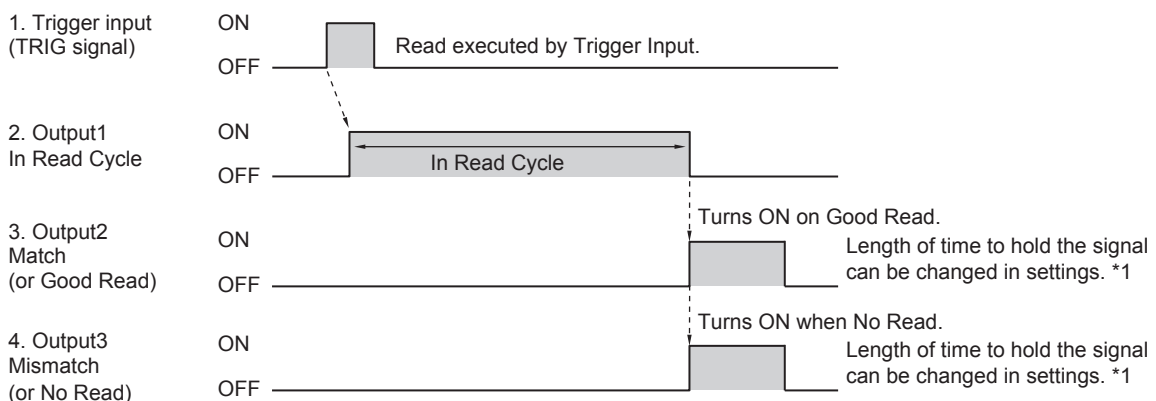


\*1 For how to change the length of time to hold the signal, please refer to 2-1-8 *Change the ON/OFF timing of the Output Signal (Output 1 to 3)* on page 2 - 17

## 2-1-2 Wiring and Electrical Specifications for Parallel I/O

The following is the wiring diagram of the power cable to connect to the code reader (All V430-W8).


Code Reader

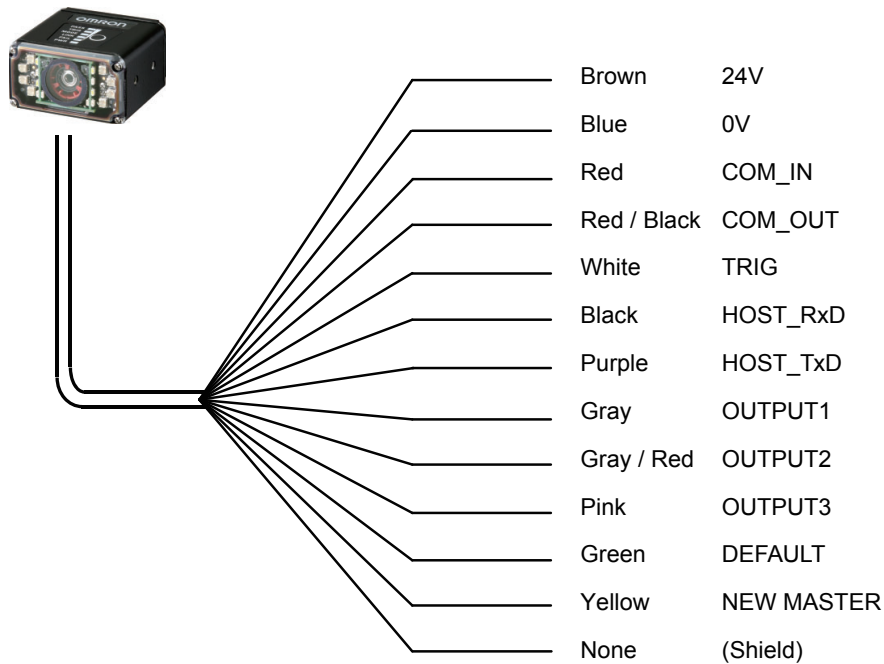


Colors for each wire

Wire color	Pin No.	Signal Name	Function
Brown	2	24V	Power supply
Blue	7	0V	GND
Red	8	COM_IN	Common Input Signals (Input Common)
Red / Black	12	COM_OUT	Common Output Signals (Output Common)
White	1	TRIG	Read Trigger Input (Trigger)
Black	9	HOST_RxD	Receive Data (RS-232(Host) RxD)
Purple	10	HOST_TxD	Transmit Data (RS-232(Host) TxD)
Gray	5	OUTPUT 1	(Output 1)
Gray / Red	11	OUTPUT 2	(Output 2)
Pink	6	OUTPUT 3	(Output 3)
Green	3	DEFAULT	(Default)
Yellow	4	NEW MASTER	(New Master)
None	-	-	(Shield)


- Input circuit diagram (V430-F  $\leftrightarrow$  External device) when NPN connected

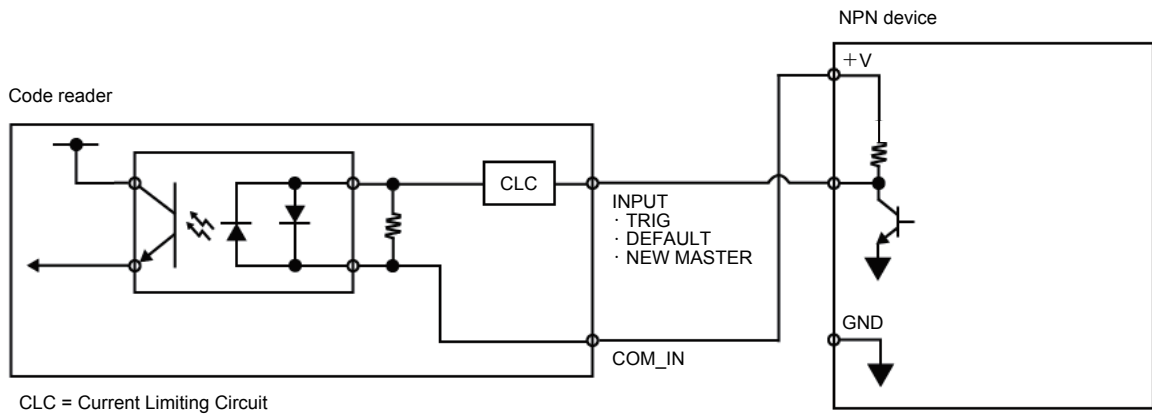


- Output circuit diagram (V430-F  $\leftrightarrow$  External device) when NPN connected

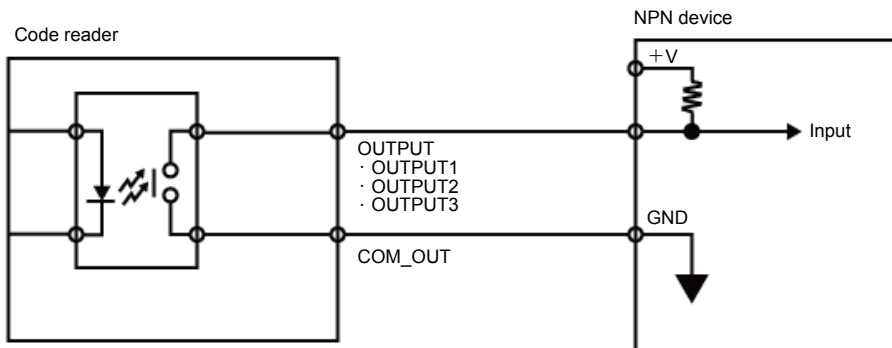

- Input circuit diagram (V430-F  $\leftrightarrow$  External device) when PNP connected

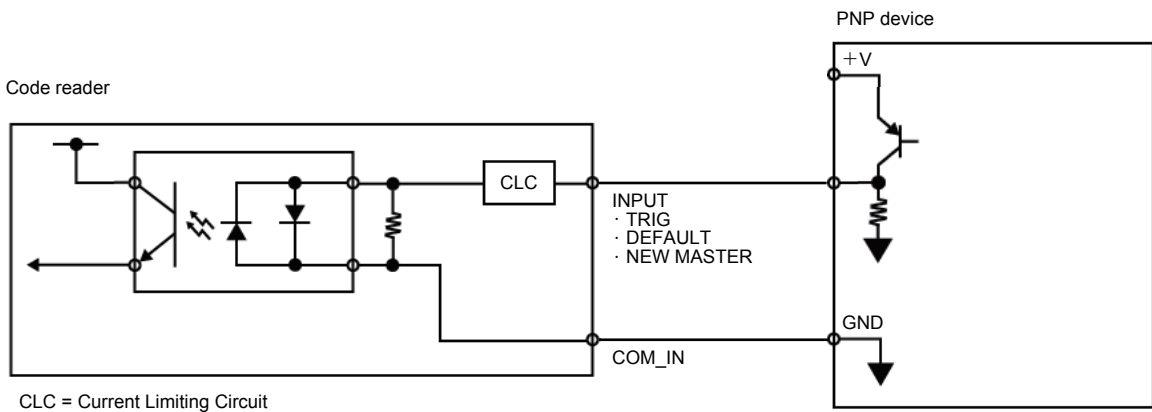

- Output circuit diagram (V430-F  $\leftrightarrow$  External device) when PNP connected

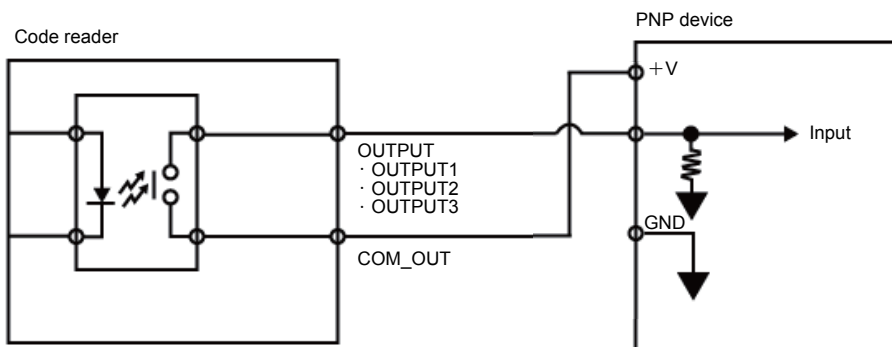



### 2-1-3 Change the Behavior of Operation

The following changes are possible depending on the system configuration and usage.

Type	Modification
Change the type of trigger	You can change the method used to trigger a Read (Triggered, or Continuous).
Change the assignments for the Output Signal (Output 1 to 3) ON Condition	Change the ON condition for Output 1 to 3.
Change the ON/OFF timing of the Output Signal (Output 1 to 3)	Change the OFF timing of the Output 1 to 3 signals after they turn ON.
Change the Output polarity of Output Signal (Output 1 to 3)	Change the Output polarity for Output 1 to 3.

## 2-1-4 Change the Type of Trigger

It is possible to change the Input method for the trigger used by the code reader to execute Image capture.

- WebLink - **Setup** - **Gear Icon** - **Advanced Settings** - **Read Cycle** - **Trigger**

Setting Item	Setting Value	Description
Mode	Continuous Read	With no Parallel TRIG signal used, the code reader executes Continuous Read. The data is continually output as each code is read.
	Continuous Read 1 Output	With no Parallel TRIG signal used, the code reader executes Continuous Read. If the data of a read code is the same as the previously read code, it is not output.
	External Level	While TRIG signal is ON, Read is executed. When TRIG signal turns OFF, Read ends.
	External Edge	While TRIG signal is ON, Read is executed. On Good Read or when End of Read Cycle condition is met, Read ends.
	Serial Data	Read is executed when you send the serial command "<>" (default value) to the code reader On Good Read or when End of Read Cycle condition is met, Read ends.
	Serial Data and Edge	Read is executed when TRIG signal turns ON or when you send the serial command "<>" (default value) to the code reader On Good Read or when End of Read Cycle condition is met, Read ends.
	Continuous Read Auto	With no Parallel TRIG signal used, the code reader executes Continuous Read. Exposure time and Gain is automatically adjusted for every Read performed.
External Trigger Signal Filter (Rising Edge)	0 to 2097120 $\mu$ s	When the TRIG signal is ON for more than a set time, the trigger is input as ON. If it is ON for less than the set time, it is not regarded as ON, so no trigger is input.
External Trigger Signal Filter (Falling Edge)	0 to 2097120 $\mu$ s	When the TRIG signal is OFF for more than a set time, the trigger is input as OFF. If it is OFF for less than the set time, it is not regarded as OFF, so no trigger is input.
External Trigger State	Active Open	When the TRIG signal turns from OFF $\rightarrow$ ON, it is recognized as the rising edge of the Trigger. When the TRIG signal turns from ON $\rightarrow$ OFF, it is recognized as the falling edge of the Trigger.
	Active Closed	When the TRIG signal turns from ON $\rightarrow$ OFF, it is recognized as the rising edge of the Trigger. When the TRIG signal turns from OFF $\rightarrow$ ON, it is recognized as the falling edge of the Trigger.

## 2-1-5 Timing Charts for each Trigger Mode

There are two methods for Trigger input.

Trigger Input Method	Overview	Trigger Mode
Triggered	Execute Read when the input on the Parallel TRIG Signal is ON.	<ul style="list-style-type: none"> <li>External Level</li> <li>External Edge</li> <li>Serial Data</li> </ul>
Continuous Read	With no Parallel TRIG signal used, the code reader executes Continuous Read.	<ul style="list-style-type: none"> <li>Continuous Read</li> <li>Continuous Read 1 Output</li> <li>Continuous Read Auto</li> </ul>


Below is an Output assignment example and Timing chart.

[Example assignment of OUTPUT signals]


- Output 1: In Read Cycle  
It turns ON while the code reader is in its Read cycle.
- Output 2: On Match (or Good Read) Output Mode: Pulse  
It turns ON when there is a Good Read or when it matches with the master symbol (if using the Matchcode function).
- Output 3: Mismatch (or on No Read) Output Mode: Pulse  
It turns ON when there is a No Read or when it does not match with the master symbol (if using the Matchcode function).

For how to set up the Output signal assignments, please refer to *How to Assign the Output Signals* on page 2 - 10

### <Timing Chart (External Level)>

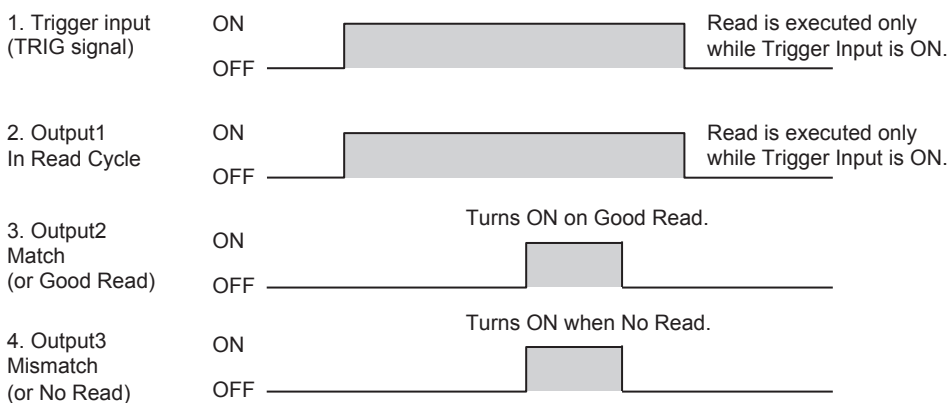


### <Timing Chart (External Edge)>

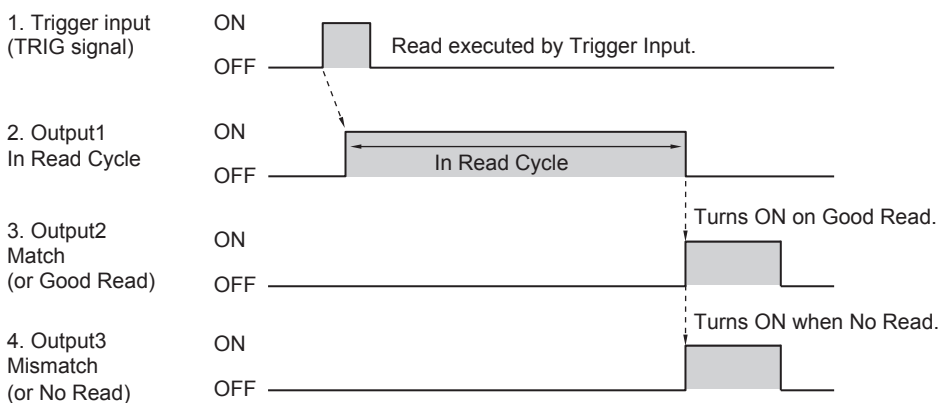

### <Timing Chart (Continuous Read)>

1. Trigger input  
(TRIG signal)


TRIG Signal not used.

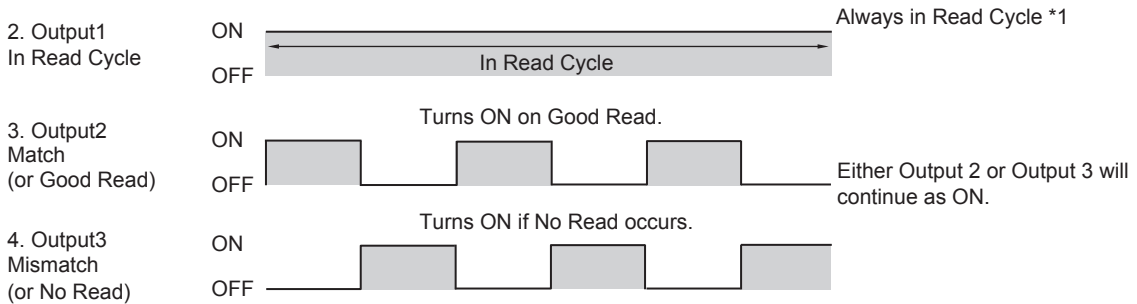

\*1 Output 1 turns OFF for about 300  $\mu$ s at the end of each Read Cycle.

## 2-1-6 Sample Ladder Program

This is a sample ladder program that inputs the TRIG signal to execute a Triggered Read. Triggered Read is executed by W0.00 ON.

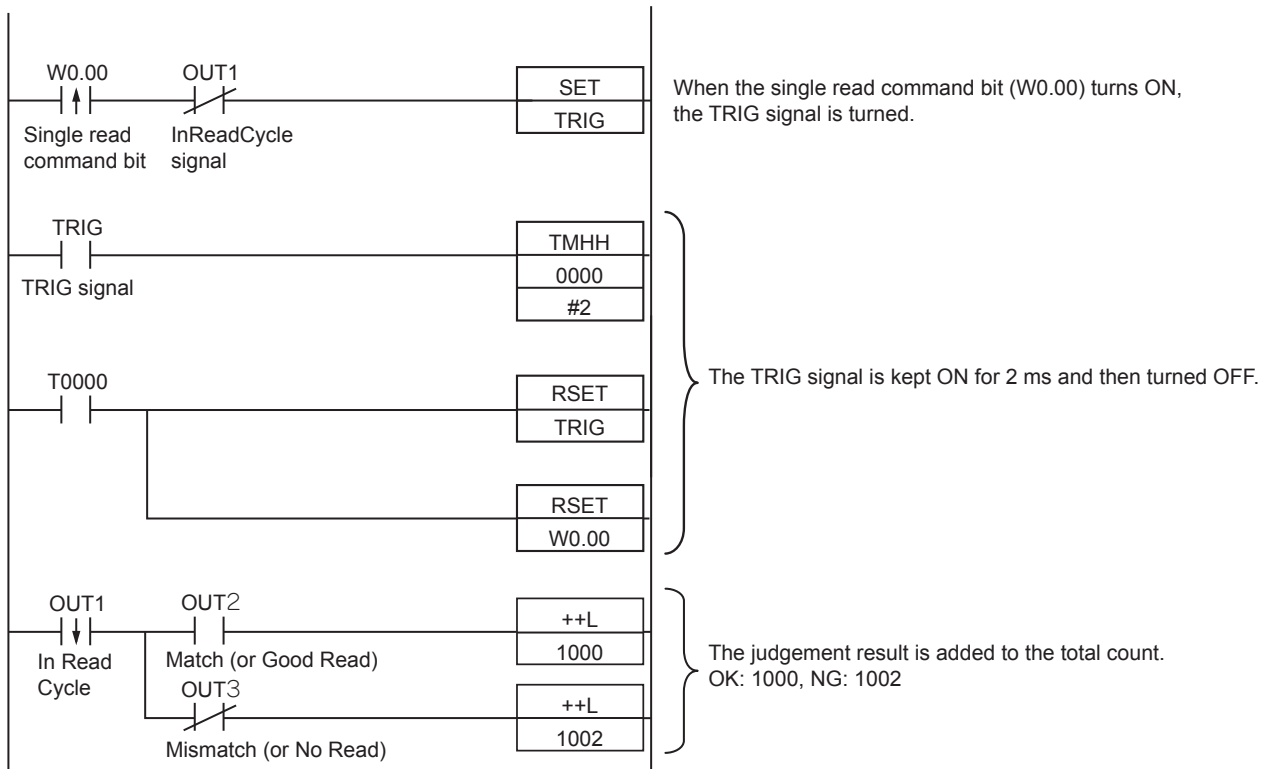

### Input and Output Signal Assignment

Signal Type		Address
Output Signal	Output 1	0.00
	Output 2	0.01
	Output 3	0.02
Input Signal	TRIG	1.00

**Precautions for Correct Use**

The time at which Read is executed is the same time the InReadCycle signal turns ON. The following Output signal assignments are made in WebLink.

- Output 1: In Read Cycle
- Output 2: On Match or On Good Read    Output Mode: Pulse
- Output 3: On Mismatch (or No Read)

For how to set up the Output signal assignments, please refer to *How to Assign the Output Signals* on page 2 - 10

## 2-1-7 Change the Assignments for the Output Signal (Output 1 to 3) ON Condition

2


The condition for turning the Output signals, Output 1, 2, 3 to ON can be set. The following conditions for output can be set.

Output On	Parameter meaning
Mismatch or No Read	It turns ON when there is a No Read or when it does not match with the Master Symbol (if using the Matchcode function).
Match or Good Read	It turns ON when there is a Good Read or when it matches with the Master Symbol (if using the Matchcode function).
Mismatch	It turns ON when it does not match with the Master Symbol (if using the Matchcode function). When the Matchcode function is not used, it is always OFF.
No Read	It turns ON when there is a No Read result.
Trend Analysis	Turns ON when the conditions set for Trend Analysis (Output 1 to 3) are matched.
Symbol Quality	Turns ON when the ISO/IEC xxx Code Quality conditions set for (Output 1 to 3) are met. Select 15415, 15416, 16022, or 29158.
Diagnostic Warning	Turns ON when the conditions set for Diagnostics (Output 1 to 3) are met.
In Read Cycle	ON while the code reader is in its Read cycle. Confirm the output when it changes from ON to OFF.
Use as Ext.Illumination Strobe - Can only be assigned to Output 3.	It is the signal used to illuminate with external lighting Turns ON when <b>Light Source</b> is set to <b>External Strobe</b> and a Trigger is input.


## How to Assign the Output Signals

The Output signals can be assigned using WebLink.

- 1 From the WebLink screen, select **Setup** → **Outputs**.
- 2 The **Digital Output Editor** dialog opens.
- 3 The Output condition for each Output signal can be set or changed in **Output On**.

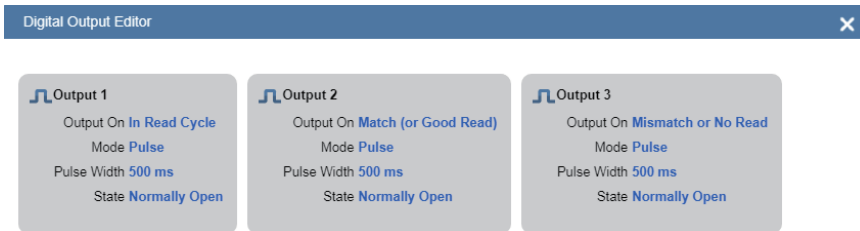

- 4 Advanced Settings for Trend Analysis, Symbol Quality and Diagnostic Warning are displayed by clicking on the Text string at the bottom of the Output setting screen. Here you can change any settings as needed.

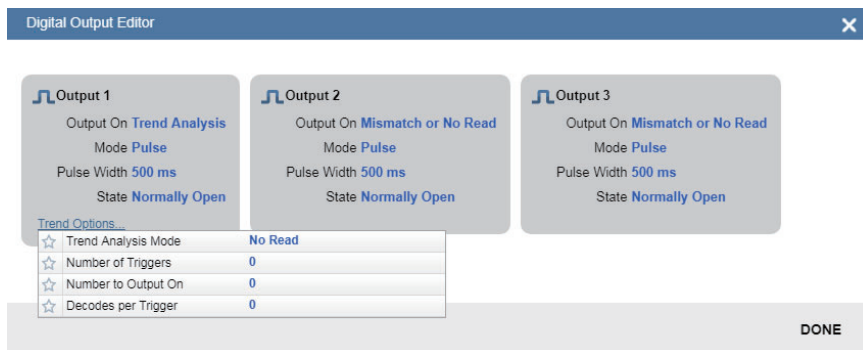

## Mismatch or No Read

The assigned output signal turns ON when one of the following conditions is met.

- On No Read (NOREAD)
- If using the Matchcode function, when it does not match with the master symbol.
- Triggered Mode must be External or Serial


Below is an Output assignment example and Timing chart.

[Example assignment of OUTPUT signals]

- Output 1: In Read Cycle
- Output 2: Mismatch (or No Read) Output Mode: Pulse

For how to set up the Output signal assignments, please refer to *How to Assign the Output Signals* on page 2 - 10

<Timing Chart>

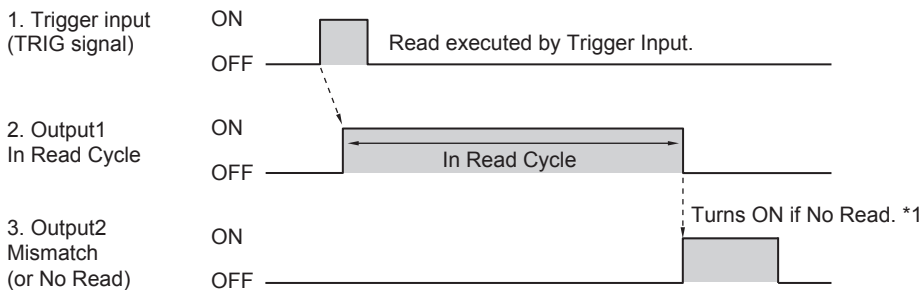

\*1 You can change the length of time the signal is ON. For further information, please refer to *2-1-8 Change the ON/OFF timing of the Output Signal (Output 1 to 3)* on page 2 - 17.

## Match (or On Good Read)

The assigned output signal turns ON when one of the following conditions is met.

- On Good Read
- If using the Matchcode function, when it matches with the master symbol.

Below is an Output assignment example and Timing chart.


[Example assignment of OUTPUT signals]

- Output 1: In Read Cycle
- Output 2: On Match (or On Good Read) Output Mode: Pulse

For how to set up the Output signal assignments, please refer to *How to Assign the Output Signals* on page 2 - 10

<Timing Chart>

- Trigger Input → On Good Read

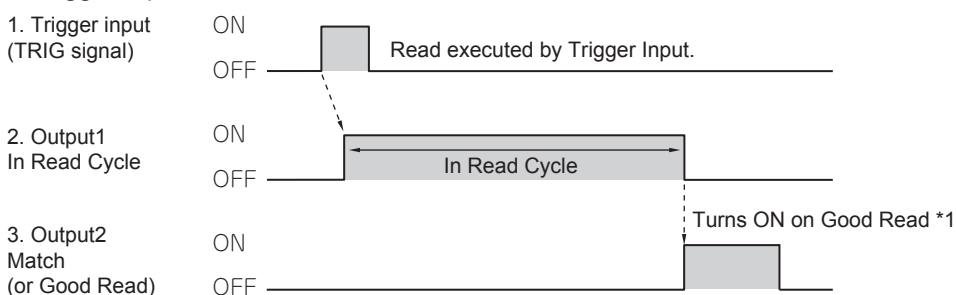

\*1 You can change the length of time the signal is ON. For further information, please refer to 2-1-8 Change the ON/OFF timing of the Output Signal (Output 1 to 3) on page 2 - 17.

## Mismatching Character String (Mismatch)

If using the Matchcode function, the assigned output signal for a Mismatch with the Master Symbol turns ON.

When the Matchcode function is not used, the signal state is OFF.

**Note:** Matchcode functionality is only used when Triggering mode is External or Serial.

Below is an Output assignment example and Timing chart.


[Example assignment of OUTPUT signals]

- Output 1: In Read Cycle
- Output 2: Character string Mismatch Output Mode: Pulse

For how to set up the Output signal assignments, please refer to *How to Assign the Output Signals* on page 2 - 10

<Timing Chart>

- Trigger Input → No Read (Mismatch with Master Symbol)

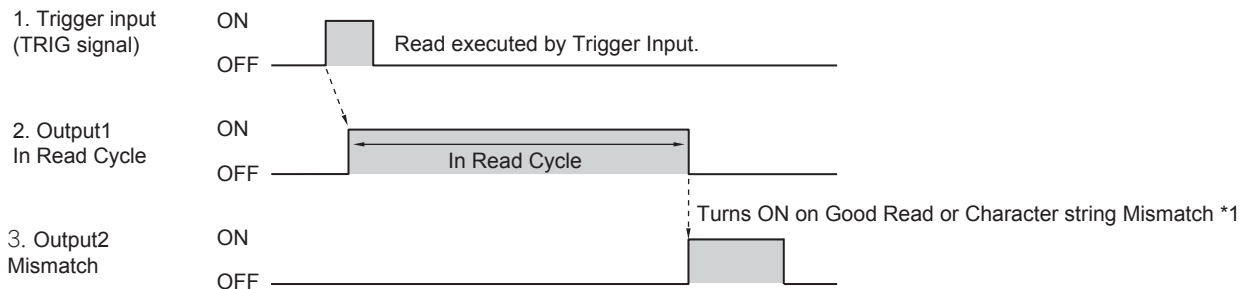

\*1 You can change the length of time the signal is ON. For further information, please refer to 2-1-8 Change the ON/OFF timing of the Output Signal (Output 1 to 3) on page 2 - 17.

## No Read

The assigned Output signal turns ON when there is a No Read.

Note: Triggered mode must be External or Serial.

Below is an Output assignment example and Timing chart.

[Example assignment of OUTPUT signals]


- Output 1: In Read Cycle
- Output 2: No Read Output Mode: Pulse

For how to set up the Output signal assignments, please refer to *How to Assign the Output Signals* on page 2 - 10

<Timing Chart>

- Trigger Input → On No Read



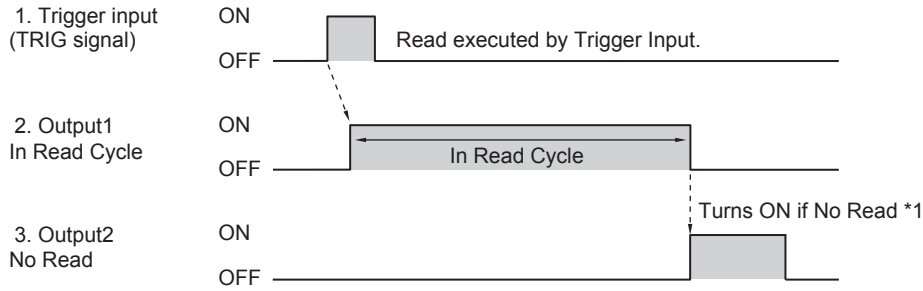

\*1 You can change the length of time the signal is ON. For further information, please refer to 2-1-8 Change the ON/OFF timing of the Output Signal (Output 1 to 3) on page 2 - 17.

## In Read Cycle

The assigned output signal turns ON when the code reader is In Read Cycle. The setting selected for **Output Mode** is disabled.

This signal turns ON when the Read Cycle starts. The timing for when it turns OFF depends on what is set for the End of Read Cycle condition.

- When the End of Read Cycle condition is *Timeout*  
 On Good Read: Turns OFF when there is a Good Read.  
 No Read: Turns OFF when the Timeout period is exceeded.
- When the End of Read Cycle condition is *Last Frame*.  
 On Good Read: Turns OFF when there is a Good Read.  
 On No Read: It turns OFF when all the image capture executed by 1 trigger input is completed.
- When the End of Read Cycle condition is *New Trigger*.  
 On Good Read: Turns OFF when there is a Good Read.  
 On No Read: Turns OFF when a trigger is input and there is a New Read Cycle. At this time, since the New Read Cycle is in progress, it will turn ON again.


Below is an Output assignment example and Timing chart.

[Example assignment of OUTPUT signals]

- Output 1: In Read Cycle

For how to set up the Output signal assignments, please refer to *How to Assign the Output Signals* on page 2 - 10

<Timing Chart>

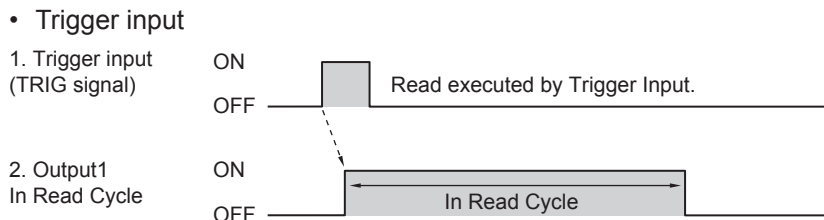

## Trend Analysis


Monitors the frequency of Mismatches and No Reads as well as the Number of Reads per Trigger, and turns ON when a certain threshold is met.

This can be used to monitor quality indicators like the percentage of Matches and Read Rate.

The following settings are set independent for each Output signal.

Change the Output signal number selection as needed for your application.

- WebLink - **Setup** - **Gear Icon** - **Advanced Settings** - **I/O** - **Trend Options (Output 1, 2, 3)**

Setting Item	Setting Value	Description
Trend Analysis Mode	<ul style="list-style-type: none"> <li>• Mismatch</li> <li>• No Read</li> <li>• Decodes per Trigger</li> </ul>	<ul style="list-style-type: none"> <li>• Mismatch: Turns ON when the number of Mismatches for the most recent <b>Number of Triggers</b> cycle reaches the number set for <b>Number to Output On</b>.</li> <li>• No Read: Turns ON when the number of No Reads for the most recent <b>Number of Triggers</b> cycle reaches the number set for <b>Number to Output On</b>.</li> <li>• Decodes per Trigger: Turns ON when the Number Of Decodes for the most recent <b>Number of Triggers</b> cycle reaches the number set for <b>Number to Output On</b>.</li> </ul>
Number of Triggers	0 to 255	The number of triggers in the Trend Analysis. For example, if you set this to 25, the Trend Analysis will be done for the most recent 25 trigger inputs.
Number to Output On	0 to 255	This is the threshold for turning on the Output signal Trend Analysis is assigned to. For example, <b>Trend Analysis Mode</b> : <i>No Read</i> , <b>Number of Triggers</b> : 25, <b>Number to Output On</b> : 4 With these settings, the output signal turns ON when there are 4 No Read in the last 25 triggers.
Decodes per Trigger Threshold	0 to 65535	When the number of codes read within the Read Cycle falls below the Decodes per Trigger threshold, the Output signal turns ON.  Setting Example <ul style="list-style-type: none"> <li>• Read Cycle <b>Trigger - Mode</b> : <i>External Edge</i> <b>End of Read Cycle - Mode</b> : <i>Timeout</i> <b>Capture Mode - Captures Mode</b> : <i>Continuous</i></li> <li>• I/O <b>Decodes per Trigger Output - Decodes/Trigger Status</b> : <i>Enabled</i> <b>Trend Analysis (Output 1) - Trend Analysis Mode</b> : <i>Decodes per Trigger</i> <b>Trend Analysis (Output 1) - Number of Triggers</b> : 1 <b>Trend Analysis (Output 1) - Number to Output On</b> : 1 <b>Trend Analysis (Output 1) - Decodes per Trigger</b> : 10 10 or more Reads in the Read Cycle : Signal OFF 9 or less Reads in the Read Cycle : Signal ON</li> </ul>

Below is an Output assignment example and Timing chart.


[Example assignment of OUTPUT signals]

- Output 1: In Read Cycle
- Output 2: Trend Analysis Output Mode: Pulse

For how to set up the Output signal assignments, please refer to *How to Assign the Output Signals* on page 2 - 10


#### <Timing Chart>

- Trigger Input → Trend Analysis Output On Condition met

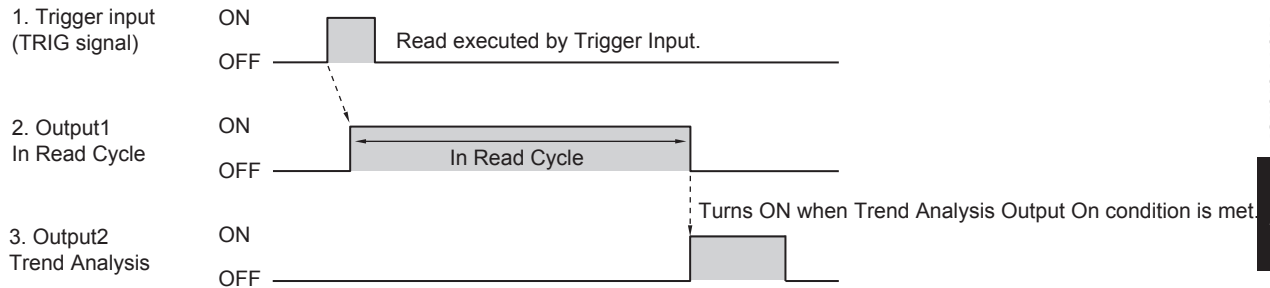

\*1 You can change the length of time the signal is ON. For further information, please refer to *2-1-8 Change the ON/OFF timing of the Output Signal (Output 1 to 3)* on page 2 - 17.

- Trigger Input → Decodes per Trigger count falls below threshold

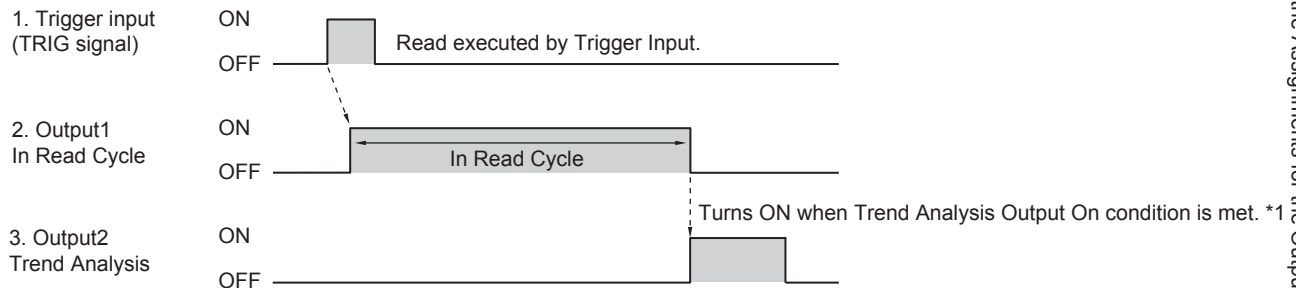

\*1 You can change the length of time the signal is ON. For further information, please refer to *2-1-8 Change the ON/OFF timing of the Output Signal (Output 1 to 3)* on page 2 - 17.

## Symbol Quality Grade

If a read barcode or 2D Code's Symbol Quality Grade falls below the set threshold value by one, the assigned output signal turns ON.

This can be used when you want to monitor trends in deterioration of Symbol Quality Grades.

The ISO standards for which threshold values can be set are as follows.

- ISO/IEC 15415
- ISO/IEC 15416
- ISO/IEC 16022
- ISO/IEC 29158

For more information on each of these, please refer to *Autofocus Multicode reader V430-F Series User Manual - Symbol Quality Grading*.

Below is an Output assignment example and Timing chart.

[Example assignment of OUTPUT signals]

- Output 1: In Read Cycle
- Output 2: Symbol Quality Output Mode: Pulse


**ISO/IEC 15415** Output on Overall Grade: B

※ In this case, when the Overall ISO Judgement of the Symbol Quality is lower than a B, this signal will turn ON.

For how to set up the Output signal assignments, please refer to *How to Assign the Output Signals* on page 2 - 10

<Timing Chart>

- Trigger Input → The read code symbol's quality grade falls below the set threshold

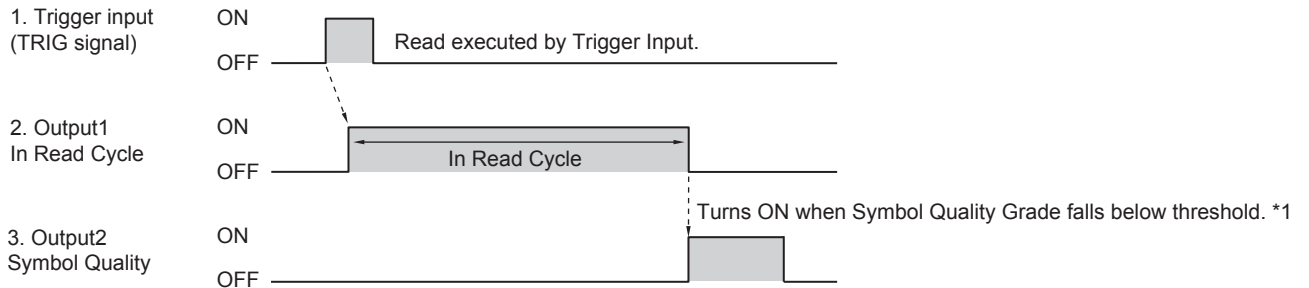

\*1 You can change the length of time the signal is ON. For further information, please refer to 2-1-8 Change the ON/OFF timing of the Output Signal (Output 1 to 3) on page 2 - 17.

## Diagnostic Warning

This signal turns ON and a text string is sent over Serial communications according to the interval set in **Diagnostics - Service Message - Threshold - Resolution**.

This can be used to regularly transmit a specified message from the code reader at a desired interval.

- WebLink - **Setup - Gear Icon - Advanced Settings - Diagnostics - Service Message**

Setting Item	Setting Value	Description
Status	<ul style="list-style-type: none"> <li>• Disabled</li> <li>• Enabled</li> </ul>	<ul style="list-style-type: none"> <li>• Disabled: Service Message is not used.</li> <li>• Enabled: The Service Message is used. The text string set in <b>Service Message</b> is sent from the code reader by Serial communications at the interval set in <b>Threshold - Resolution</b>.</li> </ul>
Service Message	Optional (Default: SERVICE)	The default message "SERVICE" will continue to be output at the interval set in <b>Threshold - Resolution</b> .
Threshold Value	1 to 65535	Interval at which to send Service Message
Unit	<ul style="list-style-type: none"> <li>• Seconds</li> <li>• Minutes</li> </ul>	<ul style="list-style-type: none"> <li>• Seconds: Treat thresholds in seconds.</li> <li>• Minutes: Treat thresholds in minutes.</li> </ul>

Below is an Output assignment example and Timing chart.

[Example assignment of OUTPUT signals]


- Output 1: Diagnostic Warning

Threshold: 2 Resolution: Seconds Output Mode: Pulse (500ms)

For how to set up the Output signal assignments, please refer to *How to Assign the Output Signals* on page 2 - 10

<Timing Chart>

1. Output1 Diagnostic Warning



### Use as Ext.Illumination Strobe - (Output 3 Signal Only)

Outputs the signal used to illuminate with external lighting. After enabling Output 3 as Ext. Illumination Strobe, by default, this output will be ON during the camera exposure time. In this mode, changing the exposure time also changes the ON time for Output 3.

For advanced applications where more control over Output 3 is required, the Illumination brightness can be set to Extreme, which will enable the Fixed Light On and Delay Times.

The illumination time length is dependent on the setting for **Fixed Light On Time** and its timing is dependent on the setting for **Fixed Light Delay Time**.

The setting selected for **Output Mode** is disabled.

- WebLink - **Setup - Gear Icon - Advanced Settings - Camera Setup - Lighting**

Setting Item	Setting Value	Description
Illumination Brightness	Extreme	Provides ability to set a fixed light-on time and fixed light delay time.
Light Source	External Strobe	Service Message is not used.
Fixed Light On Time	1 to 100000µs	The signal is ON during imaging only for the time set.
Fixed Light Delay Time	1 to 100000µs	The signal turns ON during imaging only after the time set.


Below is an Output assignment example and Timing chart.

[Example assignment of OUTPUT signals]

- Output 1: In Read Cycle
- Output 2: On Match (or On Good Read) Output Mode: Pulse (500ms)
- Output 3: Use as Ext. Illumination Strobe Fixed Light On Time: 100000µs Fixed Light Delay Time: 5000µs

For how to set up the Output signal assignments, please refer to *How to Assign the Output Signals* on page 2 - 10

<Timing Chart>

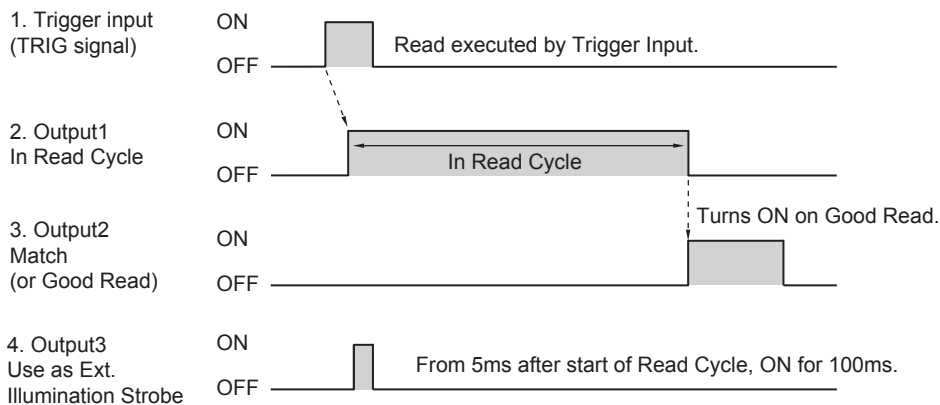

### 2-1-8 Change the ON/OFF timing of the Output Signal (Output 1 to 3)

Set/Change the length of time the signals assigned to Outputs 1 to 3 are in an ON state and the timing of when they turn OFF.


## How to Set the Output Signals

- 1 From the WebLink screen, select **Setup** → **Outputs**.
- 2 The **Digital Output Editor** dialog opens.
- 3 The ON/OFF timing of the Output Signal can be changed in **Mode**.
- 4 In **Pulse Width**, set the ON to OFF time.



### Precautions for Correct Use

This can only be set when **Mode** is set to *Pulse*.

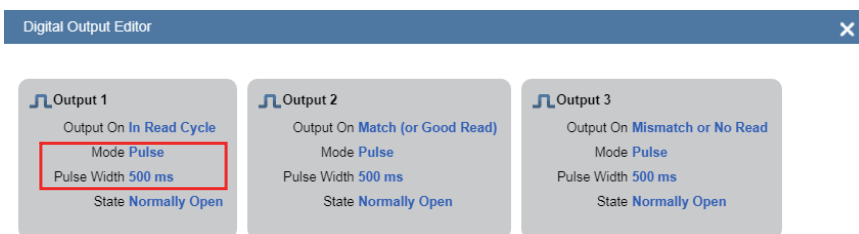

Setting Item	Setting Value	Description
Mode	<ul style="list-style-type: none"> <li>• Pulse</li> <li>• Latch Mode 1 (Unlatch with Setup Button)</li> <li>• Latch mode 2 (Unlatch Opposite Condition)</li> <li>• Latch Mode 3 (Unlatch Re-Enter Read Cycle)</li> </ul>	<ul style="list-style-type: none"> <li>• Pulse: After it turns ON when the Output On condition is met, it turns OFF after the set time (ms) elapses.</li> <li>• Latch Mode 1 (Unlatch with Setup Button) After it turns ON when the Output On condition is met, it can only be turned OFF by pressing the Setup button on the code reader. (This is set with <b>I/O - Setup Button</b>. Make the setting for <b>Setup Button Unlatch Output</b>.)</li> <li>• Latch mode 2 (Unlatch Opposite Condition): It turns ON when the Output On condition is met and remains in the ON state until the ON Condition is no longer met. For example, if its Output On condition is set to <i>No Read</i>, it turns ON whenever there is a No Read, and turns OFF whenever there is a Good Read</li> <li>• Latch Mode 3 (Unlatch Re-Enter Read Cycle): After it turns ON when its Output On condition is met, it remains in the ON state until Start New Read Cycle.</li> </ul>

## Pulse


The Output Signal is held for the time set for the **Pulse Width**.

Below is an Output assignment example and Timing chart.

[Example assignment of OUTPUT signals]

- Output 1: In Read Cycle
- Output 2: On Match (or On Good Read) Output Mode: Pulse (1000ms)

For how to set up the Output signal assignments, please refer to *How to Assign the Output Signals* on page 2 - 10

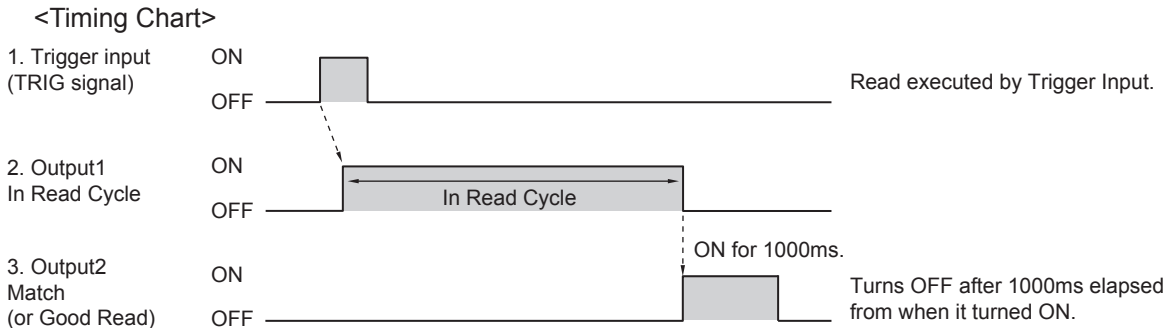

## Latch Mode 1 (Unlatch with Setup Button)

The Output Signal stays ON until the Setup Button on the code reader is pressed.

As for how this can be used, for example, when connected to a PLC, it can be configured so that when this signal is ON, an alarm can sound until the Setup Button on the code reader is pressed.



### Precautions for Correct Use

To use this function, set **I/O - Setup Button - Setup Button** to *Unlatch Outputs*.


Also, signals assigned with Latch Mode 1 will not turn OFF except by pressing the Setup Button.

Below is an Output assignment example and Timing chart.

[Example assignment of OUTPUT signals]

- Output 1: In Read Cycle
- Output 2: Match (or On Good Read) Output Mode: Latch Mode 1 (Unlatch with Setup Button)

For how to set up the Output signal assignments, please refer to *How to Assign the Output Signals* on page 2 - 10

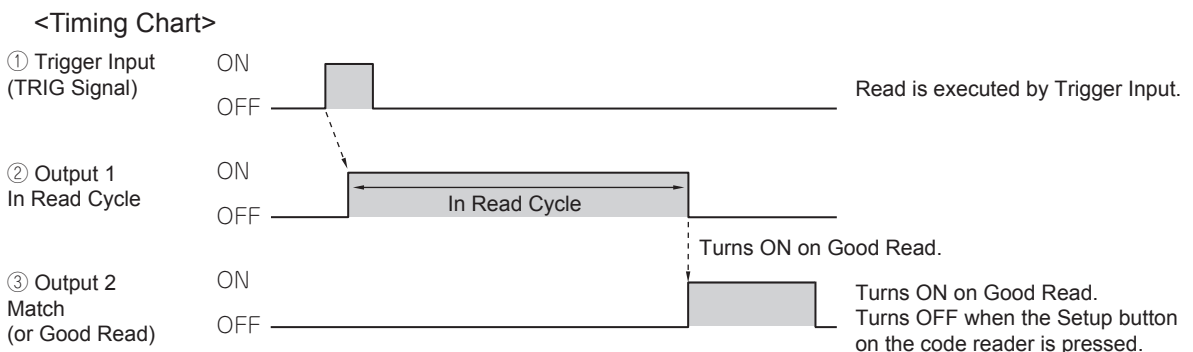

## Latch mode 2 (Unlatch Opposite Condition)

The Output Signal is held until the ON Condition is no longer met.


Below is an Output assignment example and Timing chart.

[Example assignment of OUTPUT signals]

- Output 1: In Read Cycle
- Output 2: Match (or On Good Read) Output Mode: Latch Mode 2 (Unlatch Opposite Condition)
- Output 3: Mismatch (or No Read) Output Mode: Latch Mode 2 (Unlatch Opposite Condition)

For how to set up the Output signal assignments, please refer to *How to Assign the Output Signals* on page 2 - 10

### <Timing Chart>

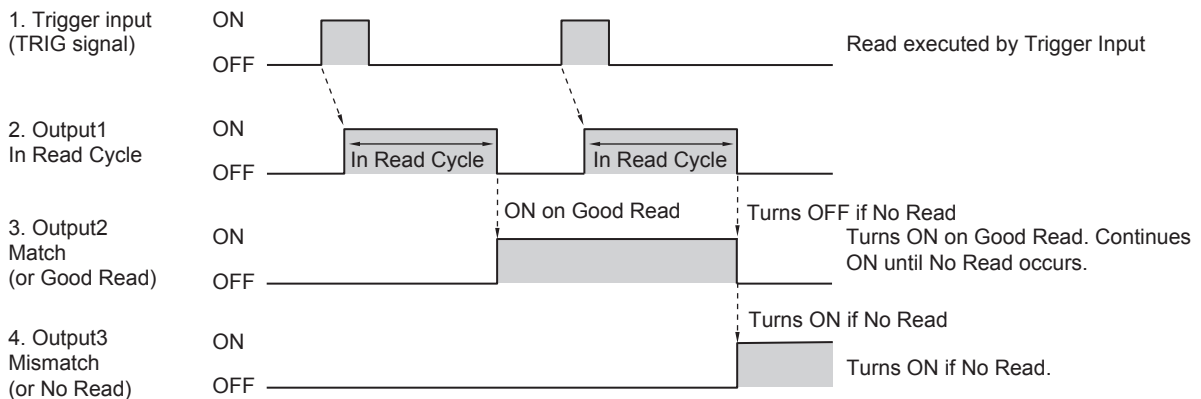

## Latch Mode 3 (Unlatch Re-Enter Read Cycle)

The Output Signal is held until the start of New Read Cycle.


Below is an Output assignment example and Timing chart.

[Example assignment of OUTPUT signals]

- Output 1: In Read Cycle
- Output 2: Match (or On Good Read) Output Mode: Latch Mode 3 (Unlatch Re-Enter Read Cycle)

For how to set up the Output signal assignments, please refer to *How to Assign the Output Signals* on page 2 - 10

### <Timing Chart>

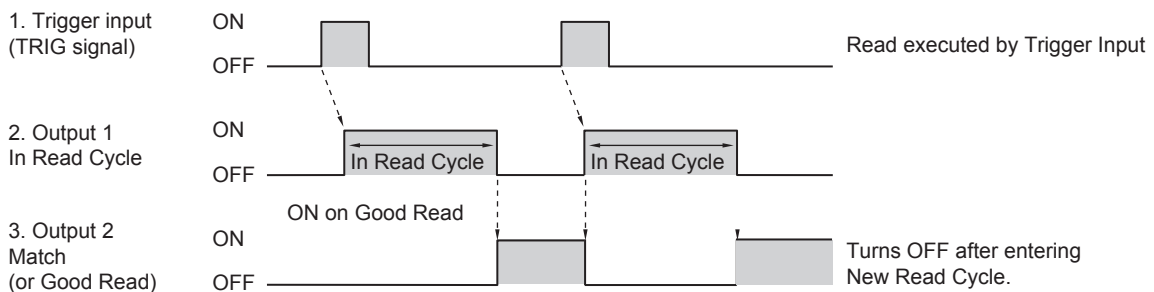

## 2-1-9 Change the Polarity of Output Signal (Output 1 to 3)


Change the Output polarity for Output 1 to 3.

By changing the Output polarity, the ON/OFF state of each output signal can be inverted.



## How to Set the Output Signals

- 1 From the WebLink screen, select **Setup** → **Outputs**.
- 2 The **Digital Output Editor** dialog opens.
- 3 Change the polarity of the output signal in **Polarity**.

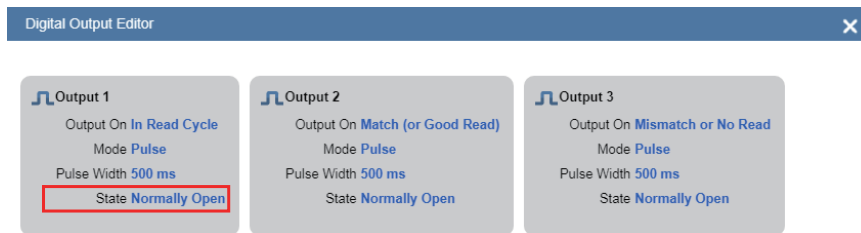

### Advanced Settings: I/O - Output 1 - 3 Parameters - Output State

Setting Item	Setting Value	Description
Output Polarity (Output 1 to 3)	<ul style="list-style-type: none"> <li>• Active Open (default)</li> <li>• Active Closed</li> </ul>	<ul style="list-style-type: none"> <li>• Active Open: Turns ON when the Output On Condition for the Signal is met. Is OFF until the Output On Condition for the Signal is met.</li> <li>• Active Closed: Turns OFF when the Output On Condition for the Signal is met. Is ON until the Output On Condition for the Signal is met.</li> </ul>

#### [Usage Example]

- Output 1: In Read Cycle Output State: Active Open  
Output 1 Signal for In Read Cycle turns ON, and the code reader will not accept Trigger input. Therefore, when the Output 1 Signal is OFF, you can see that the Trigger Input is possible.
- Output 2: In Read Cycle Output State: Active Closed  
Output 2 Signal for In Read Cycle turns OFF, and the code reader will not accept Trigger input. Therefore, when the Output 1 Signal is ON, you can see that the Trigger Input is possible.



#### Precautions for Correct Use

The timing charts in this manual for all Output Signals show the behavior of Active Open (the default setting) selected for the Output State. Please be careful when changing this setting.

## 2-1-10 Controlling Operation with Signals from an External Device

There are signals that can control the following on the code reader through its Parallel I/O.

Signal Name	Description
NEW MASTER	When this signal from the external device is ON, the symbol data from the next Good Read is registered as the Master Symbol.
DEFAULT	Used whenever a hardware reset is performed.

## Using the NEW MASTER Signal to Register a Master Symbol

You can register the character string of a barcode or 2D code you have read as the target text string to use for match verification.

- Signal wire to use

Color	Pin No.	Signal
White	1	TRIG
Yellow	4	NEW MASTER

### ● How to Use

Step 1 to Step 4: Settings on the code reader

Step 5 to Step 8: Registration

- 1 On the Setup screen, select *Triggered* for the Cycle.
- 2 Set Matchcode to *ON*.
- 3 Select **Mode: Standard**. Train **Match String** on **New Master Input** and set **New Master Pin** to *Enabled*.
- 4 Click on **Done**.
- 5 The NEW MASTER Signal is set to ON from an external device.
- 6 Put the barcode, or 2D code you want to register as the original to match with in the field of view.
- 7 Set the TRIG Signal to ON.
- 8 The read barcode, or 2D code is registered in the **Match String Database**. Verify the operation from the screen described in Step 3.

## Using the DEFAULT Signal to Reset the Code Reader

Used whenever a hardware reset is performed.

- Signal wire to use

Color	Pin No.	Signal
Green	3	DEFAULT
Black	7	GROUND

In cases where a software reset or hardware reset is not possible, it may be necessary to reset the code reader by short-circuiting (connecting) the two pin types shown above. This will do the same thing as sending the <Zrdall> command.



### Precautions for Correct Use

---

In perform a hardware reset in this manner, it must be executed **within 60 seconds** of the reader being started by either its power supply being turned on or the reader being reset. Connecting incorrect pins can cause serious damage to the equipment.

---

#### ● How to use

- 1** Verify the location of Pin 3 (DEFAULT) and Pin 7 (GROUND) on the connector.
- 2** Supply power to the code reader.
- 3** Indicator light PWR (Green) lights up.
- 4** After a while, the indicator lights LINK (Orange), MODE (Orange), TRIG (Orange) will light up once and the code reader will start up.
- 5** Within 60 seconds of this indication of the code reader starting up, short-circuit (connect) Pin 3 and Pin 7.
- 6** Within 3 seconds after doing that, disconnect and then re-connect Pin 3 and Pin 7 (short-circuit them again).
- 7** The code reader resets. After it restarts this time, disconnect Pin 3 and Pin 7.



# 3

## Controlling Operation and Data Output with Ethernet

---

<b>3-1</b>	<b>Controlling Operation and Data Output with EtherNet/IP.....</b>	<b>3 - 2</b>
3-1-1	EtherNet/IP Overview .....	3 - 2
3-1-2	Communication with the Code Reader over EtherNet/IP Connection .....	3 - 4
3-1-3	Communication Flow Between PLC and Code Reader.....	3 - 5
3-1-4	Communication Settings (EtherNet/IP).....	3 - 6
3-1-5	Tag Data Link Setting Methods.....	3 - 8
3-1-6	Status and Control Signals for Each Input and Output Assembly .....	3 - 11
3-1-7	Timing Charts by Assembly Type .....	3 - 12
3-1-8	Sample Ladder Program.....	3 - 14
3-1-9	Accessing the NJ-series Controller Communication Areas using Variables .....	3 - 15
3-1-10	Communicating with the Code Reader with EtherNet/IP Message .....	3 - 28
<b>3-2</b>	<b>Controlling Operation and Data Output with Serial (TCP).....</b>	<b>3 - 29</b>
3-2-1	Serial (TCP) Overview .....	3 - 29
3-2-2	Communications Processing Flow.....	3 - 29
3-2-3	Communication Settings (Serial (TCP)).....	3 - 30
3-2-4	Setting the Data to Output after a Read .....	3 - 32
3-2-5	Controlling Operation from an External Device .....	3 - 37
3-2-6	Serial Command List .....	3 - 41

# 3-1 Controlling Operation and Data Output with EtherNet/IP

---

## 3-1-1 EtherNet/IP Overview

EtherNet/IP is an industrial multi-vendor network that uses Ethernet. The EtherNet/IP specifications are open standards managed by the ODVA (OpenDeviceNet Vendor Association). EtherNet/IP is used by a wide range of industrial devices.

Because EtherNet/IP uses standard Ethernet technology, various general-purpose Ethernet devices can be used in the network.

EtherNet/IP has mainly the following features.

- **High-speed, High-capacity Data Exchange through Tag Data Links (Cyclic Communications)**

The EtherNet/IP protocol supports implicit communications, which allows cyclic communications (called Tag Data Links) with EtherNet/IP devices.

- **Tag Data Links are set at the specified communication cycle for each application regardless of the number of nodes**

Because the data is exchanged over the network at the refresh cycle that is set for each connection regardless of the number of nodes, that refresh cycle will not increase even if the number of nodes increases. (Data exchange in the connection is kept in synch)

Because the refresh cycle can be set for each connection, each application can communicate at its ideal refresh cycle. (For example, interprocess interlocks can be transferred at high speed, while the production commands and the status monitor information are transferred at low speed.)



### **Precautions for Correct Use**

---


On a network to which many devices are connected, performance may drop (e.g., responses may be delayed or packets lost) or communications errors may occur when there is temporarily high traffic on the network.

Test the operation under actual conditions before you start actual operation of the system.

---

## Data Exchange with EtherNet/IP (Implicit Communications)

Data is exchanged cyclically between Ethernet devices on the EtherNet/IP network using Tag Data Links as shown below.

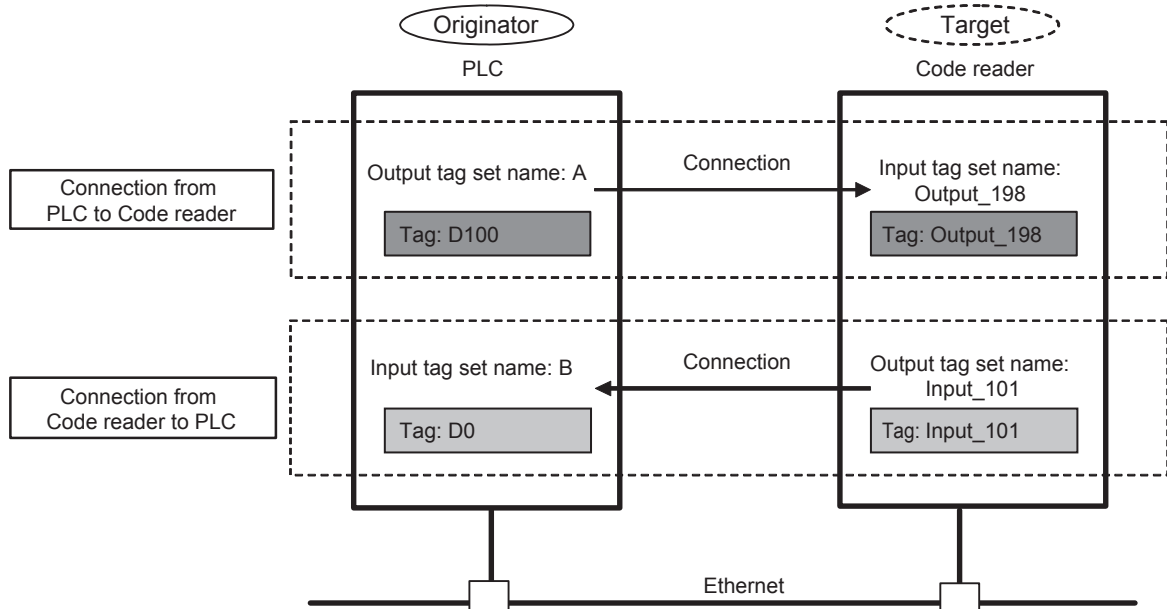

- **Data Exchange Method**

To exchange data, a connection is opened between two EtherNet/IP devices.

One of the nodes requests the connection to open a connection with a remote node.

The node that requests the connection is called the *Originator* and the node that receives the request is called the *Target*.

- **Data Exchange Memory Locations**

The memory locations that are used to exchange data across a connection are specified as tags.

You can specify memory addresses or variables for tags.

A group of tags consists of an output tag set and an input tag set.



### Additional Information

Message communications are used when communicating over EtherNet/IP with a PLC that does not support Tag Data Link communications. *3-1-10 Communicating with the Code Reader with EtherNet/IP Message* on page 3 - 28

### 3-1-2 Communication with the Code Reader over EtherNet/IP Connection


You can use an EtherNet/IP Tag Data Link to communicate between the PLC and the code reader. The PLC can control the code reader with Command/Response communications and the code reader can output data after executing a Read.

To connect to OMRON Controllers and communicate through EtherNet/IP, you can use Sysmac Studio, or Network Configurator to set up the Tag Data Links (tags, tag sets, and connection settings). For more detailed information on Tag Data Link settings, please refer to the following manuals.

- *NJ-series CPU Unit Built-in EtherNet/IP Port User's Manual (Cat. No. W506)*
- *CS/CJ-series EtherNet/IP Units Operation Manual (Cat. No. W465)*
- *CJ-series EtherNet/IP Units Operation Manual for NJ-series CPU Unit (Cat. No. W495)*

#### Types of Communication Areas

For EtherNet/IP, communication with a PLC, the communication is performed using two communication areas on the PLC, the Input Field and the Output Field. The V430-F has 6 types of Input Field Assemblies and 2 types of Output Field Assemblies, and one can be selected for each.

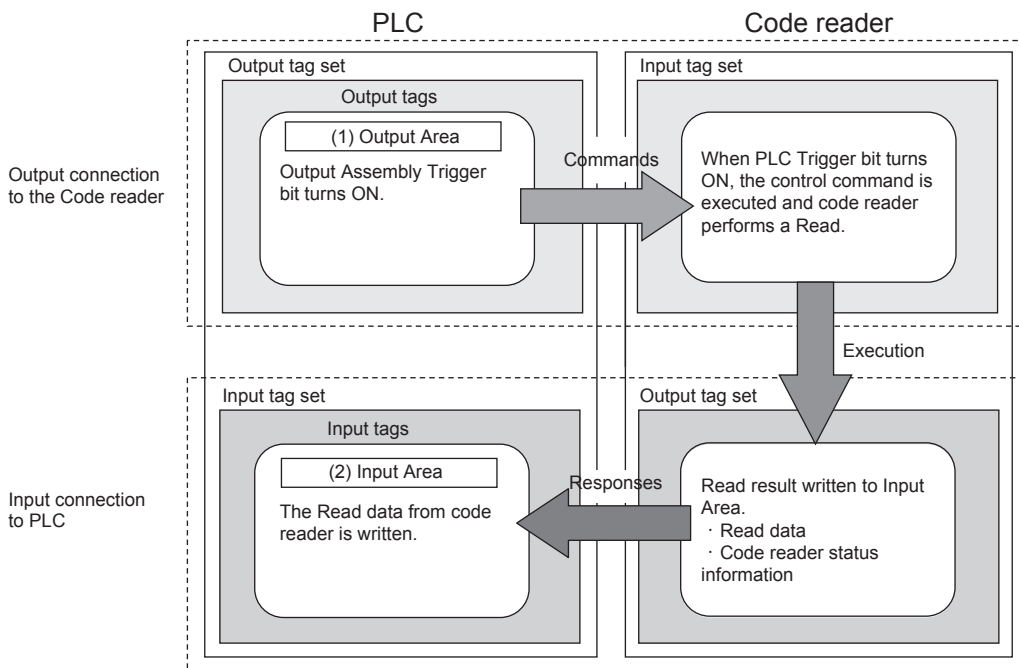



### 3-1-3 Communication Flow Between PLC and Code Reader

- (1) The PLC (User) changes the Trigger bit assigned to the memory area (Output Field) of the PLC in advance from OFF to ON.
- (2) When the Trigger bit from the PLC is ON, the code reader executes a Read process.
- (3) After the code reader's Read process is complete, it then stores its Read data in the specified memory area (Input Field) on the PLC.

[Output Data Example]

The screenshot shows the Watch Window for a PLC project. The 'Trigger' bit is set to 'True'. The 'DECODE\_DATA' area shows a character string '1 (16#31)' in the first cell, with other cells containing hexadecimal values like '2 (16#32)', '3 (16#33)', etc. Callouts indicate 'Trigger bit is True' and 'Character string is output to DECODE DATA Area'.

名称	モニタ値	形式
Commands	3	
RunMode	True	Boolean
Trigger	True	Boolean
▼ GetData		
INFO_BITS	01	Hexadecimal
DIAGNOSTIC_SEQUENCE_COUNT	00	Hexadecimal
CONFIGURATION_SEQ_COUNT	00	Hexadecimal
RESERVED	00	Hexadecimal
▶ DEVICE_STATUS		
FAULT	0	Decimal
▶ COUNTERS[0-5]		
▶ READ_CYCLE_REPORT[0-3]		
▶ DECODE_CYCLE_REPORT[0-3]		
DECODE_LENGTH	6	
▼ DECODE_DATA[0-183]		
DECODE_DATA[0]	1 (16#31)	ASCII
DECODE_DATA[1]	2 (16#32)	ASCII
DECODE_DATA[2]	3 (16#33)	ASCII
DECODE_DATA[3]	4 (16#34)	ASCII
DECODE_DATA[4]	5 (16#35)	ASCII
DECODE_DATA[5]	6 (16#36)	ASCII
DECODE_DATA[6]	. (16#00)	ASCII
DECODE_DATA[7]	. (16#00)	ASCII
DECODE_DATA[8]	. (16#00)	ASCII
DECODE_DATA[9]	. (16#00)	ASCII

### 3-1-4 Communication Settings (EtherNet/IP)

#### Using WebLink to Set the Code Reader Network Settings

Use WebLink to set the IP address on the code reader to match the network settings of the PLC or other external device.

- WebLink - **Setup - Gear Icon - Advanced Settings - Communications - Ethernet**

- 1** Set **Ethernet** to *Enabled*.
- 2** Set the **IP Address** and **Subnet mask** according to the network settings of the PLC or other external device.

Setting Item	Setting Value	Description
Ethernet	<ul style="list-style-type: none"> <li>• Enabled (default)</li> <li>• Disabled</li> </ul>	Select whether to enable all, some, or none of the various Ethernet protocols, (Serial (TCP)), EtherNet/IP, PROFINET).
IP Address	a.b.c.d a: 0 to 255 b: 0 to 255 c: 0 to 255 d: 0 to 255 (Default: 192.168.188.2)	Enter the IP address of the Code Reader
Subnet	a.b.c.d a: 0 to 255 b: 0 to 255 c: 0 to 255 d: 0 to 255 (Default: 255.255.0.0)	Input the subnet mask address.
Gateway	a.b.c.d a: 0 to 255 b: 0 to 255 c: 0 to 255 d: 0 to 255 (Default: 0.0.0.0)	If a Gateway is used, enter the gateway address. If a Gateway is not used, use the default value 0.0.0.0.
IP Address Mode	<ul style="list-style-type: none"> <li>• Fixed (default)</li> <li>• DHCP</li> </ul>	In Fixed mode, the code reader uses a user-defined IP address. In DHCP mode, the code reader acquires its IP address, subnet, and gateway from the DHCP server.


## Using WebLink to Set Up EtherNet/IP Communication

- WebLink - Setup - Gear Icon - Advanced Settings - Communications - Ethernet

Setting Item	Setting Value	Description
EtherNet/IP	<ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>	<ul style="list-style-type: none"> <li>• Enabled: EtherNet/IP connectivity is enabled on the code reader.</li> <li>• Disabled: EtherNet/IP connectivity is disabled on the code reader.</li> </ul>
Ethernet/IP Byte Swapping	<ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>	<ul style="list-style-type: none"> <li>• Enabled: Byte Swapping is enabled for the Read data. The Read data is stored in Decode Data in Little endian format. This is used when the Endian of the CPU architecture is different from that of the Read data.</li> <li>• Disabled: Byte Swapping is disabled for the Read data. The Read data is stored in Decode Data in Big endian format.</li> </ul>

When Byte Swapping is used, the output changes as follows.

Example: Where the character string of the read code is 0123

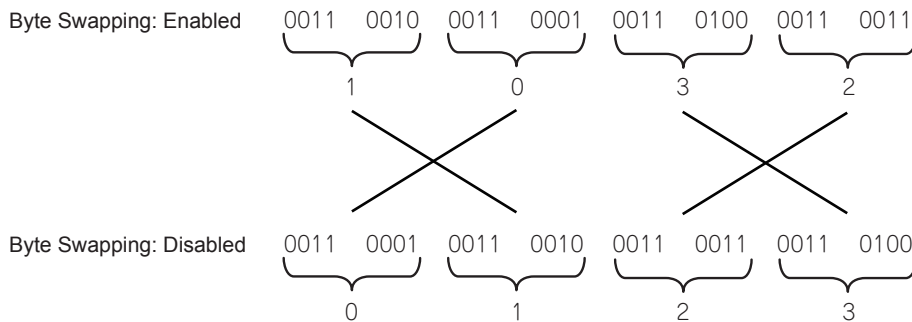

### 3-1-5 Tag Data Link Setting Methods

This section describes how to set data links for EtherNet/IP.

The communications areas in the PLC for which data links to the code reader are created are specified as tags and tag sets, and the connections are set for tag data link communications.



#### Precautions for Correct Use

When connecting to an NJ-series or CJ-series CPU Unit, install the EDS file that defines the connection information for the code reader in to Sysmac Studio.  
Download the EDS file from OMRON's website.

## Tags, Tag Sets, and Connection Settings

The code reader has 6 types of Input Assemblies and 2 types of Output Assemblies, and one type can be selected for each. The Data Structure changes based on the selected Assembly.

For more detailed information about Memory Allocation and the Data Structure of each Assembly, please refer to *A-2 EtherNet/IP Detailed Specifications* on page A - 3

#### Assemblies

Assembly Name	Connection I/O Type	Input / Output	Target Variable	Size (bytes)	Assembly Description	Data Structure
Small Input Assembly	IO small	Input	100	84	It is a compact, lightweight input assembly. Holds 64 bytes of Read data.	*1
Big Input Assembly	IO big	Input	101	176	Allows for more Device Status Information to be stored for verification than what can be stored with the Small Input Assembly. Holds 128 bytes of Read data.	
MXL/SLC Input Assembly	Input MXLSLC	Input	102	258	Allows advanced Device Status Information too large to be stored in Big Input Assembly to be stored for verification. Holds 184 bytes of Read data.	
1 Decode Input Assembly	Input 1 Decode	Input	103	500	Holds 436 bytes of Read data	
4 Decode Input Assembly	Input 4 Decode	Input	104	500	Holds Read result information for 4 symbols. The first Read data is stored in a 160 byte Area and the 2nd to 4th Read data are stored in the 72 byte Area.	
N Decode Input Assembly	Input N Decode	Input	105	500	Holds Symbol information and Read result information for any number of symbols. Holds 456 bytes of Read data.	
Output Assembly	-	Output	197	4	For commands to be sent to the code reader.	
Output Assembly (Legacy)	-	Output	198	12	Commands and Command Echo for fixed data can be sent to the code reader.	

\*1. *A-2 EtherNet/IP Detailed Specifications* on page A - 3refer to

**Tag Set Settings**

Setting Item	Setting
Input	
Tag Set Name	Tag Set Name on PLC
Size	Input Assembly Dependency • 84, 176, 248, 500 byte
Output	
Tag Set Name	Tag Set Name on PLC
Size	Output Assembly Dependency • 4 and 12 byte

**Connection Settings**

Setting Item	Setting
Input	
Target Variable	Input Assembly Dependency • 100, 101, 102, 103, 104, 105
Size	Input Assembly Dependency • 84, 176, 248, 500 byte
Originator Variable	Variable defined on the PLC
Size	Input Assembly Dependency • 4 and 12 byte
Connection type	Point to Point connection
RPI	1.0 to 65.0ms (Default: 5.0ms)
Timeout	RPI × (4 to 512) (Default: RPI × 512)
Output	
Target Variable	Output Assembly Dependency • 197, 198
Size	Output Assembly Dependency • 4 and 12 byte
Originator Variable	Variable defined on the PLC
Size	Output Assembly Dependency • 4 and 12 byte
Connection type	Point to Point connection



### Precautions for Correct Use

- If I/O memory addresses are specified for the communications areas, the information in the communications areas will be cleared when the operating mode of the PLC changes unless addresses in the CIO Area, which holds memory, are specified.
- The following Assembly objects are required to specify instances when the EDS file is not used.

#### Setting the Assembly Object

Setting item	Setting Value	Note
Instance ID	100	Small Input Assembly
	101	Big Input Assembly
	102	MXL/SLC Assembly
	103	1 Decode Input Assembly
	104	4 Decode Input Assembly
	105	N Decode Input Assembly
	197	Output Assembly
	198	Output Assembly (Legacy)

### 3-1-6 Status and Control Signals for Each Input and Output Assembly

The V430-F has the following types of Input Assemblies.

- (1) Small Input Assembly
- (2) Large Input Assembly
- (3) MXL/SLC Input Assembly
- (4) 1 Decode Input Assembly
- (5) 4 Decode Input Assembly
- (6) N Decode Input Assembly

The Status signals are as follows.

These signals are controlled automatically based on the status of the code reader.

○: Verifiable    ×: Not Verifiable

Status Signal	Description	(1)	(2)	(3)	(4)	(5)	(6)
InReadCycle	While in Read Cycle, this bit is set to 1.	×	○	×	×	×	×
Trigger Acknowledged	This bit becomes 1 when the Trigger bit from the Output Assembly is received. When the Trigger bit is OFF, Trigger Acknowledged also becomes 0.	×	×	○	○	○	○
Exposure Done	During exposure, this bit is set to 1. When Exposure is done, this bit becomes 0.	×	×	○	○	○	○
Decoding	When reader is decoding image, this bit is set to 1. When the decode is completed, this bit becomes 0.	×	×	○	○	○	○
Data is Ready	When the data from Read Cycle Report and Data Cycle Report is confirmed, this bit becomes 1. When the next Read starts, this bit becomes 0.	×	×	○	○	○	○
Read Cycle Pass	On Good Read (or Match if Matchcode enabled), bit becomes 1. When next Read starts, bit becomes 0.	×	×	○	○	○	○
Read Cycle Fail	On No Read (or Mismatch if Matchcode enabled), bit becomes 1. When next Read starts, bit becomes 0.	×	×	○	○	○	○
Decode Data	This field stores the Read string. When additional information such as Print Quality Grading Standard is set, it is stored following the Read string.	○	○	○	○	○	○

The following are the two V430-F Output Assembly types.

- (1) Output Assembly
- (2) Output Assembly (Legacy)

The Control Signals are as follows.

They can be controlled by the user at an arbitrary timing.

○: Verifiable    ×: Not Verifiable

Control Signal	Description	(1)	(2)
Trigger	Executes Read. The code reader recognizes this bit changing from 0 to 1 as the rising edge of the trigger and its change from 1 to 0 as the falling edge of the trigger.	○	○

Control Signal	Description	(1)	(2)
New Master	When this bit is ON, the next Read result is registered as the Master Symbol.	○	○


### 3-1-7 Timing Charts by Assembly Type

#### Read is executed by the Read (TRIG) Signal.

The timing signal at completion of storing the Read data to PLC data memory differs by the Input Assembly type.

##### ● Small Input Assembly (100)


It does not correspond to the Timing Signal for storing Read data.

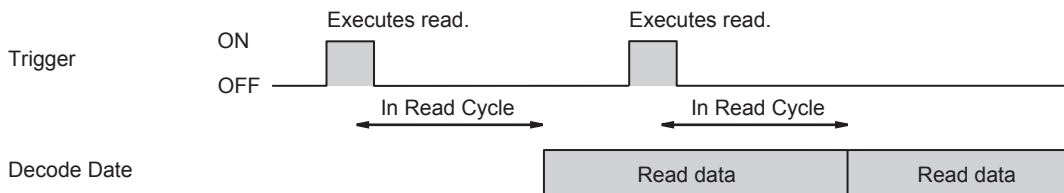

- (1) Reading starts at the rising edge of the Trigger.
- (2) At the end of reading, the read data is stored in Decode Data.

##### ● Large Input Assembly (101)

It is output at the timing of the **Device Status - InReadCycle** bit turning from ON → OFF.

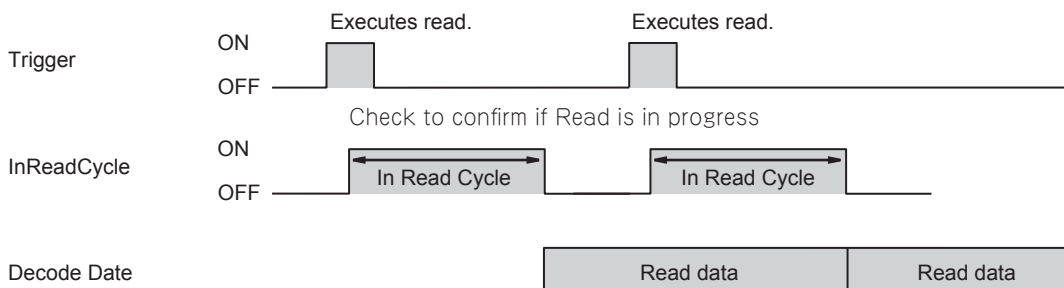


- (1) Reading starts at the rising edge of the Trigger.
- (2) At start of Read, InReadCycle turns ON and Trigger turns OFF.
- (3) At end of Read, the Read data is stored in Decode Data and InReadCycle turns OFF.



### ● MXL/SLC Input Assembly (102) through N Decode Input Assembly (105)

It is output at the timing of the **Device Status - InReadCycle** bit turning from ON → OFF.

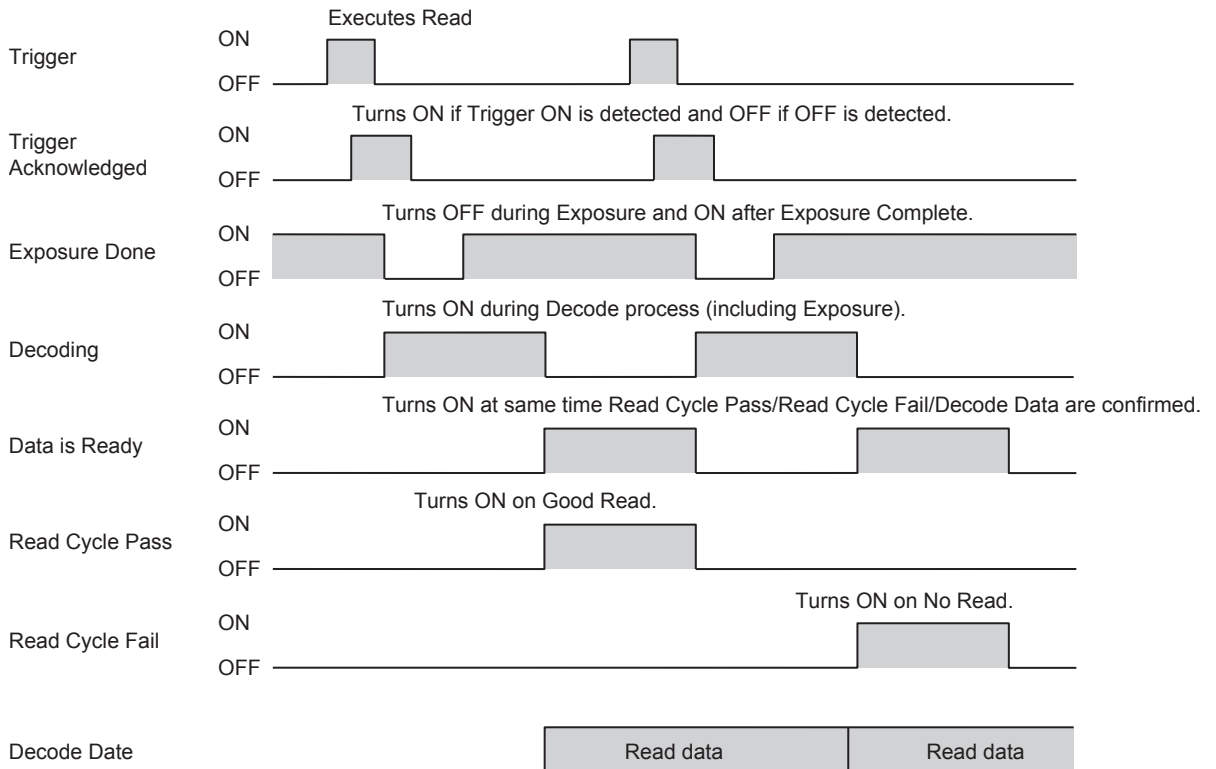

- (1) Reading starts at the rising edge of the Trigger.
- (2) Trigger Acknowledged turns ON when Trigger ON is detected and turns OFF when Trigger OFF is detected.
- (3) ExposureDone turns OFF when exposure starts and turns ON when exposure completes.
- (4) Decoding is ON during decoding processing. The Decoding process overlaps the Exposure process.
- (5) Data is Ready turns ON at the same time Decode Data / Read Cycle Pass or Read Cycle is confirmed.
- (6) Read Cycle Pass turns ON when there is a Good Read and Read Cycle Fail turns ON when there is a NoRead. The Read data is stored in Decode Data.

#### Additional Information



There can be up to a 10ms delay in the Output timing of the Symbol data.

- (7) When the next Trigger is detected, Data is Ready turns OFF.


### 3-1-8 Sample Ladder Program

A sample ladder program to execute the following operation.

- Input the Trigger Signal to execute Triggered Read.
- The read character string (Decode Data) is compared with the Verification string (Master Symbol) stored in the PLC.
- If they match, it is added to the OK/Match count, and if they do not match, it is added to the Mismatch/NG count.

The following Input and Output Assemblies are used.

- Input Assembly: MXL/SLC Input Assembly (102)
- Output Assembly: Output Assembly (197)

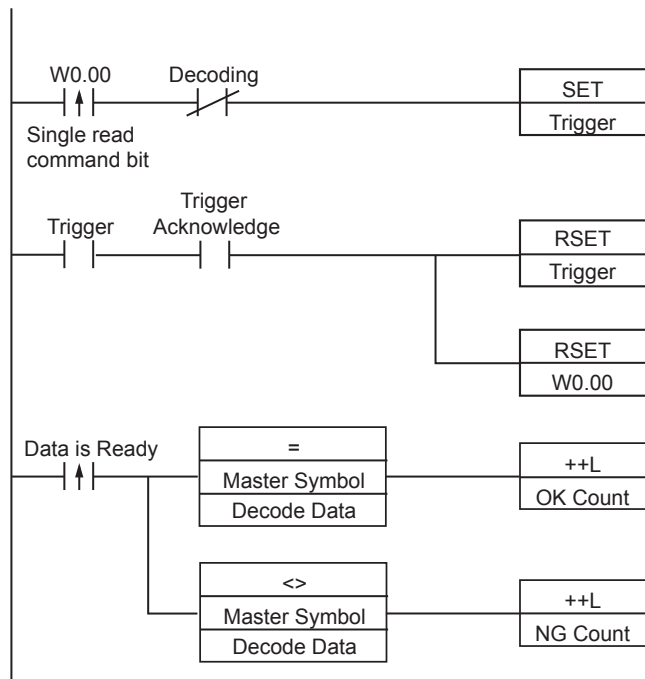

- (1) When the flag for Triggered is ON, The Trigger Bit turns ON.
- (2) The Trigger Acknowledged Bit (for detecting trigger input) is ON.
- (3) When the Trigger Acknowledged Bit ON is detected, the Trigger Bit turns OFF.
- (4) When Read is completed, the Data is Ready Bit turns ON.
- (5) The Read string (Decode Data) is compared with the Verification string (Master Symbol).
- (6) If the two strings match, the Match/OK Count is incremented by 1.
- (7) If the two strings do not match, the Mismatch/NG Count is incremented by 1.

## 3-1-9 Accessing the NJ-series Controller Communication Areas using Variables

With an NJ-series, accessing the I/O memory allocated to each communication area can be done with the user program with the use of variables.

Here is an example of using the MXL/SLC Input Assembly (102) and Output Assembly (197) for that purpose.

For more detailed information about the data structure of each Assembly, please refer to *A-2 EtherNet/IP Detailed Specifications* on page A - 3

### Access using Network Variables

Create user-defined variables that match the structures of the communications areas of the Sensor. Use the Sysmac Studio to define the variables.

For how to use Sysmac Studio, please refer to *Sysmac Studio Version1 Operation Manual (W504)*.

#### 1 Defining the Data Types of the Variables

Define data types for variables that match the structures of the communications areas.

##### (1) Defining a Data Type for Control Signal Access

First, define a BOOL array data type to access the control signals and status signals.

Here, we define the Data types, *COMMAND* and *Device\_Status*.

#### Control Signal

Data Name	Data Type
COMMAND	ARRAY[0..31]OF BOOL
Run_Mode	BOOL
Trigger	BOOL
Enable_Matchcode	BOOL
...	...
Output_2	BOOL
Output_3	BOOL
Reserved	ARRAY[0..17]OF BOOL

#### Status Signals

Data Name	Data Type
Device_Status	ARRAY[0..31]OF BOOL
Online	BOOL
Trigger_Acknowledged	BOOL
Exposure_Done	BOOL
...	...
Output2_Status	BOOL
Output3_Status	BOOL
Reserved	ARRAY[0..10]OF BOOL

##### (2) Defining Data Types for Communications Area Access

Data types are defined according to the communication area to access, with one data type for Output Area and another data type for Input Area.

Here, there are two Data types defined, *S\_EIPOutput197* and *S\_EIPIInput102*.

- Data Type to access Output Area  
Data type name: S\_EIOutput197  
Type of derivative data type: Structure

Data Name	Data Type
S_EIOutput197	STRUCT
COMMANDS	COMMAND

Example assignments of Variable Data Type for Output Area:

	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
+0	Reserved			*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	TRIG	*1
+1	Reserved															

\*1. For Bits other than TRIG, please refer to *Output Assembly (Instance ID: 197)* on page A - 29.

- Data Type to access Input Area  
Data type name: S\_EIInput102  
Type of derivative data type: Structure

Data Name	Data Type
S_EIInput102	STRUCT
INFO_BITS	BYTE
DIAGNOSTIC_SEQUENCE_COUNT	BYTE
CONFIGURATION_SEQ_COUNT	BYTE
RESERVED	BYTE
DEVICE_STATUS	Device Status
FAULT	DINT
COUNTERS	ARRAY[0..5]OF DINT
READ_CYCLE_REPORT	ARRAY[0..3] OF INT
DECODE_CYCLE_REPORT	ARRAY[0..3]OF DINT
DECODE_CYCLE_REPORT	DINT
DECODE_DATA	ARRAY[0..183] OF BYTE

Example assignments of Variable Data Type for Input Area:

	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
+0	DIAGNOSTIC_SEQUENCE_COUNT								INFO_BITS							
+1	RESERVED								CONFIGURATION_SEQ_COUNT							
+2	Code reader Signal Status Information (Device_Status)															
+3																
+4	Code Reader Error Code Information (FAULT)															
+5																
+6	Read Counter Information (COUNTERS)															
...																
...																
+11																

	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
+12	Read Cycle Information (READ CYCLE REPORT)															
+13																
+14																
+15																
+16	Number of characters in Read data (DECODE LENGTH)															
+17																
+18	The content of the Read data (DECODE DATA)															
...																
...																
+89																

**2** Defining the Variables

Define variables for the data links for the communications area data that is used in EtherNet/IP communications.

These variables use the data types that were defined above in procedure 1.

Variable	Variable type	Network Publish attribute	Data type	Application
EIPOutput	Global variable	Output	S_EIPOutput197	For data links to the Output Area
EIPInput	Global variable	Input	S_EIPInput102	For data links to the Input Area

**3** Accessing the Communications Areas from the User Program

The defined variables are used to access the communications areas for the Sensor using the following

**Output Area**

Signal name	Variable name
Trigger	EIPOutput.COMMANDS.Trigger

**Input Area**

Signal Name	Variable name
Online	EIPInput.DEVICE_STATUS.Online
Trigger_Acknowledged	EIPInput.DEVICE_STATUS.Trigger_Acknowledged
Decoding	EIPInput.DEVICE_STATUS.Decoding
DatalsReady	EIPInput.DEVICE_STATUS.DatalsReady
Decode_Data	EIPInput.DECODE_DATA

**Command Control Example**

Here is an example of how Command Control is executed in EtherNet/IP communications between a PLC and the code reader.

● **Read a Code and Store the Read String Output on the PLC**

- <Example Tag Sets and Connection Settings>
- Input Assembly: MXL/SXL Input Assembly (102)

- Output Assembly: Output Assembly (197)

▼ タグセット  
タグセット数/使用可能数: 2 / 32    タグ数/使用可能数: 2 / 256

入力 出力

タグセット名	Bit選択	サイズ (Byte)	サイズ (Bit)	インスタンスID	コントローラステータス	運転停止異常時出力
EIPOutput	<input type="checkbox"/>	4		Auto	含めない	
EIPOutput	<input type="checkbox"/>	4	0			クリア

▼ タグセット  
タグセット数/使用可能数: 2 / 32    タグ数/使用可能数: 2 / 256

入力 出力

タグセット名	Bit選択	サイズ (Byte)	サイズ (Bit)	インスタンスID	コントローラステータス
EIPIInput	<input type="checkbox"/>	248		Auto	含めない
EIPIInput	<input type="checkbox"/>	248	0		

▼ コネクション  
コネクション数/使用可能数: 2 / 32

ターゲットデバイス	コネクション名	コネクション/Oタイプ/入力/出力	ターゲット変数	サイズ[Byte]	オリジネータ変数	サイズ[Byte]	コネクションタイプ	RPI[ms]	タイムアウト
192.168.188.2 V430-F Rev. 1	default_001	Input 1 Decode	入力	102	EIPIInput	248	Point to Point	10	RPI x 4
			出力	197	EIPOutput	4	Point to Point		

< Example Variables >

グローバル変数 × Section0 - Program0

名称	データ型	初期値	割付先	保持	コンスタント	ネットワーク公開	コメント
EIPIInput	S_EIPIInput102			<input type="checkbox"/>	<input type="checkbox"/>	入力	
EIPOutput	S_EIPOutput197			<input checked="" type="checkbox"/>	<input type="checkbox"/>	出力	

Input Assembly

名前	データ型	オフセット種別	バイトオフセット	ビットオフセット
S_EPInput102	STRUCT	NJ		
INFO_BITS	BYTE			
DIAGNOSTIC_SEQUENCE_COUNT	BYTE			
CONFIGURATION_SEQ_COUNT	BYTE			
RESERVED	BYTE			
DEVICE_STATUS	Device_status			
FAULT	DINT			
COUNTERS	ARRAY[0..5] OF DINT			
READ_CYCLE_REPORT	ARRAY[0..3] OF INT			
DECODE_CYCLE_REPORT	ARRAY[0..3] OF DINT			
DECODE_LENGTH	DINT			
DECODE_DATA	ARRAY[0..183] OF BYTE			
Device_status	STRUCT	任意		
Online	BOOL		0	0
Trigger_Acknowledge	BOOL		0	1
Exposure_Done	BOOL		0	2
Decoding	BOOL		0	3
Data_Is_Ready	BOOL		0	4
Read_Cycle_Pass	BOOL		0	5
Read_Cycle_Fail	BOOL		0	6
General_Fault	BOOL		0	7
New_match_code_acknowledged	BOOL		1	0
Match_Code_Enabled	BOOL		1	1
Image_Sensor_Calibrating	BOOL		1	2
Image_Sensor_Calibration_Complete	BOOL		1	3
Training	BOOL		1	4
Training_Complete	BOOL		1	5
Optimizing	BOOL		1	6
Optimization_Complete	BOOL		1	7
AutoImage_Photometry_Enabled	BOOL		2	0
AutoImage_Photometry_Complete	BOOL		2	1
Output1_Status	BOOL		2	2
Output2_Status	BOOL		2	3
Buffer_Overflow	BOOL		2	4
Reserved	ARRAY[0..10] OF BOOL		2	5
Instance103	STRUCT	NJ		

Output Assembly

名前	データ型	オフセット種別	バイトオフセット	ビットオフセット	コメント
S_EPOutput197	STRUCT	NJ			
COMMANDS	COMMAND				
COMMAND	STRUCT	任意			
Run_Mode	BOOL		0	0	
Trigger	BOOL		0	1	
Enable_MatchCode	BOOL		0	2	
Reset_General_Fault	BOOL		0	3	
Clear_No_Read_ReadCycle_Count	BOOL		0	4	
Clear_MisMatch_ReadCycle_Count	BOOL		0	5	
Clear_No_Read_Count	BOOL		0	6	
Clear_Trigger_Count	BOOL		0	7	
Clear_Matchcode_Count	BOOL		1	0	
Clear_MisMatch_Count	BOOL		1	1	
Output_1	BOOL		1	2	
Output_2	BOOL		1	3	
Output_3	BOOL		1	4	
Reserved	ARRAY[0..17] OF BOOL		1	5	

<Example of Data Storage>

- Read string: 123456

PLC

ウォッチウィンドウ (プロジェクト) 1			
名称	モニタ値	変更	表示形式
EIOutput.COMMANDS.Trigger	True	<b>TRUE</b> FALSE	Boolean ▼
▼ EIPIInput			
INFO_BITS	01		Hexadecimal ▼
DIAGNOSTIC_SEQUENCE_COUNT	00		Hexadecimal ▼
CONFIGURATION_SEQ_COUNT	00		Hexadecimal ▼
RESERVED	00		Hexadecimal ▼
▶ DEVICE_STATUS			
FAULT	0		Decimal ▼
▶ COUNTERS[0-5]			
▶ READ_CYCLE_REPORT[0-3]			
▶ DECODE_CYCLE_REPORT[0-3]			
DECODE_LENGTH	6		Decimal ▼
▼ DECODE_DATA[0-183]			
DECODE_DATA[0]	1 (16#31)		ASCII ▼
DECODE_DATA[1]	2 (16#32)		ASCII ▼
DECODE_DATA[2]	3 (16#33)		ASCII ▼
DECODE_DATA[3]	4 (16#34)		ASCII ▼
DECODE_DATA[4]	5 (16#35)		ASCII ▼
DECODE_DATA[5]	6 (16#36)		ASCII ▼
DECODE_DATA[6]	. (16#00)		ASCII ▼
DECODE_DATA[7]	. (16#00)		ASCII ▼
DECODE_DATA[8]	. (16#00)		ASCII ▼

- Note: When outputting the Code Quality Grade  
Read data: 123456 D D A A A D A A



▼ DECODE_DATA[0-183]			
DECODE_DATA[0]	1 (16#31)		ASCII ▼
DECODE_DATA[1]	2 (16#32)		ASCII ▼
DECODE_DATA[2]	3 (16#33)		ASCII ▼
DECODE_DATA[3]	4 (16#34)		ASCII ▼
DECODE_DATA[4]	5 (16#35)		ASCII ▼
DECODE_DATA[5]	6 (16#36)		ASCII ▼
DECODE_DATA[6]	(16#20)		ASCII ▼
DECODE_DATA[7]	D (16#44)		ASCII ▼
DECODE_DATA[8]	(16#20)		ASCII ▼
DECODE_DATA[9]	D (16#44)		ASCII ▼
DECODE_DATA[10]	(16#20)		ASCII ▼
DECODE_DATA[11]	D (16#44)		ASCII ▼
DECODE_DATA[12]	(16#20)		ASCII ▼
DECODE_DATA[13]	D (16#44)		ASCII ▼
DECODE_DATA[14]	(16#20)		ASCII ▼
DECODE_DATA[15]	B (16#42)		ASCII ▼
DECODE_DATA[16]	(16#20)		ASCII ▼
DECODE_DATA[17]	A (16#41)		ASCII ▼
DECODE_DATA[18]	(16#20)		ASCII ▼
DECODE_DATA[19]	A (16#41)		ASCII ▼
DECODE_DATA[20]	(16#20)		ASCII ▼
DECODE_DATA[21]	A (16#41)		ASCII ▼
DECODE_DATA[22]	. (16#00)		ASCII ▼
DECODE_DATA[23]	. (16#00)		ASCII ▼

- **Read 4 Codes and Store the Read String Output on the PLC**

<Example of Tag Sets and Connection Settings>

- Input Assembly: 4 Decode Input Assembly (104)
- Output Assembly: Output Assembly (197)

▶ デバイス情報  
▼ タグセット  
タグセット数/使用可能数: 2 / 32    タグ数/使用可能数: 2 / 256

入力 出力

タグセット名	Bit選択	サイズ (Byte)	サイズ (Bit)	インスタンスID	コントロールステータス
▼ GetData	<input type="checkbox"/>	500		Auto	含めない
GetData	<input type="checkbox"/>	500	0		

▶ デバイス情報  
▼ タグセット  
タグセット数/使用可能数: 2 / 32    タグ数/使用可能数: 2 / 256

入力 出力

タグセット名	Bit選択	サイズ (Byte)	サイズ (Bit)	インスタンスID	コントロールステータス	運転停止異常時出
▼ Commands	<input type="checkbox"/>	4		Auto	含めない	
Commands	<input type="checkbox"/>	4	0			クリア

▼ コネクション  
コネクション数/使用可能数: 2 / 32

ターゲットデバイス	コネクション名	コネクション/Oタイ	入力/出力	ターゲット変数	サイズ[Byte]	オリジネータ変数	サイズ[Byte]	コネクションタイプ	RPI[ms]	タイムアウト
192.168.188.2 V430-F Rev.	default_001	Input 4 Decode	入力	104	500	GetData	500	Point to Point (	10	RPI x 512
			出力	197	4	Commands	4	Point to Point (		

< Example of Setting Variables >

グローバル変数 × データ型    EtherNet/IPデバイスリスト    内蔵EtherNet/IPポート設定 コ...

名称	データ型	初期値	割り先	保持	コンスタント	ネットワーク公開
GetData	Instance104		IOM://1000	<input type="checkbox"/>	<input type="checkbox"/>	入力
Commands	Instance197		IOM://D01500	<input checked="" type="checkbox"/>	<input type="checkbox"/>	出力
RunMode	BOOL		IOM://D01500.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	非公開
Trigger	BOOL		IOM://D01500.1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	非公開

Input Assembly

グローバル変数 × データ型 ×

root

名称	データ型	オフセット種別	バイトオフセット	ビットオ
▼ Instance104	STRUCT	NJ		
INFO_BITS	BYTE			
DIAGNOSTIC_SEQUENCE_COUNT	BYTE			
CONFIGURATION_SEQ_COUNT	BYTE			
RESERVED	BYTE			
DEVICE_STATUS	DINT			
FAULT	DINT			
COUNTERS	ARRAY[0..5] OF DINT			
READ_CYCLE_REPORT	ARRAY[0..3] OF INT			
DECODE_1_CYCLE_REPORT	ARRAY[0..7] OF INT			
DECODE_1_LENGTH	DINT			
DECODE_1_DATA	ARRAY[0..159] OF BYTE			
DECODE_2_CYCLE_REPORT	ARRAY[0..7] OF INT			
DECODE_2_LENGTH	DINT			
DECODE_2_DATA	ARRAY[0..71] OF BYTE			
DECODE_3_CYCLE_REPORT	ARRAY[0..7] OF INT			
DECODE_3_LENGTH	DINT			
DECODE_3_DATA	ARRAY[0..71] OF BYTE			
DECODE_4_CYCLE_REPORT	ARRAY[0..7] OF INT			
DECODE_4_LENGTH	DINT			
DECODE_4_DATA	ARRAY[0..71] OF BYTE			

Output Assembly

名称	データ型	オフセット種別	バイトオフセット	ビットオフセット
Instance197	STRUCT	NJ		
COMMANDS	COMMANDS_Check_197			
COMMANDS_Check_197	STRUCT	任意		
Run_Mode	BOOL		0	0
Trigger	BOOL		0	1
Enable_MatchCode	BOOL		0	2
Reset_General_Fault	BOOL		0	3
Clear_No_Read_ReadCycle_Count	BOOL		0	4
Clear_MisMatch_ReadCycle_Co...	BOOL		0	5
Clear_No_Read_Count	BOOL		0	6
Clear_Trigger_Count	BOOL		0	7
Clear_Matchcode_Count	BOOL		1	0
Clear_MisMatch_Count	BOOL		1	1
Output_1	BOOL		1	2
Output_2	BOOL		1	3
Output_3	BOOL		1	4
Reserved	ARRAY[0..17] OF BOOL		1	5

<Trigger Input>

名称	モニタ値	変更	表示形式
RunMode	True	TRUE FALSE	Boolean
Commands.COMMANDS.Trigger	True	TRUE FALSE	Boolean
Commands			
GetData			


<Example of Data Storage>

- Example of PLC data storage for 4 different codes in 1 image capture.

WebLink Screen



PLC

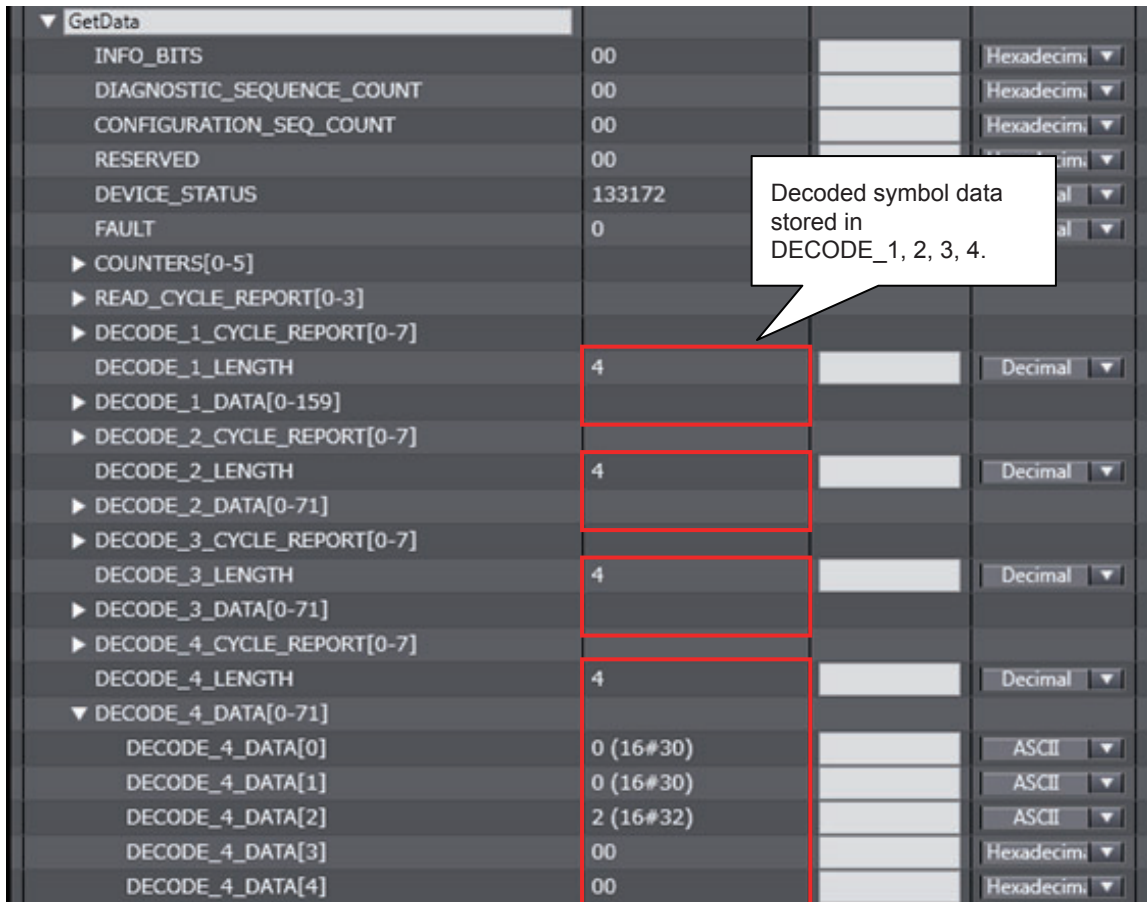

● Using the NEW MASTER Bit in the Output Assembly to Register Master Symbol Data

<Example Tag Sets and Connection Settings>

- Input Assembly: Large Input Assembly (101)
- Output Assembly: Output Assembly (198)

▼ タグセット  
タグセット数/使用可能数: 2 / 32    タグ数/使用可能数: 2 / 256

タグセット名	Bit選択	サイズ (Byte)	サイズ (Bit)	インスタンスID	コントローラステータス
▼ GetData	<input type="checkbox"/>	176		Auto	含めない
GetData	<input type="checkbox"/>	176	0		

▼ コネクション  
コネクション数/使用可能数: 2 / 32

タグセット名	Bit選択	サイズ (Byte)	サイズ (Bit)	インスタンスID	コントローラステータス	運転停止異常時出力
▼ Commands	<input type="checkbox"/>	12		Auto	含めない	
Commands	<input type="checkbox"/>	12	0			クリア

ターゲットデバイス	コネクション名	コネクション/Oタイプ/入力/出力	ターゲット変数	サイズ[Byte]	オリジネータ変数	サイズ[Byte]	コネクションタイプ	RPI[ms]	タイムアウト	
192.168.188.2 V430-F Rev.	default_001	IO big	入力	101	176	GetData	176	Point to Point	5	RPI x 512
			出力	198	12	Commands	12	Point to Point		

< Example Variables >

名称	データ型	初期値	割付先	保持	コンスタント	ネットワーク公開	コメント
GetData	Instance101		IOM://1000	<input type="checkbox"/>	<input type="checkbox"/>	入力	
Commands	Instance198		IOM://D01500	<input checked="" type="checkbox"/>	<input type="checkbox"/>	出力	
RunMode	BOOL		IOM://D01500.0	<input checked="" type="checkbox"/>	<input type="checkbox"/>	非公開	
Trigger	BOOL		IOM://D01500.1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	非公開	

Input Assembly


名称	データ型	オフセット種別	バイトオフセット	ビットオフセット
Instance101	STRUCT	NJ		
USER_DEFINED_TAG_ECHO	DINT			
COMMAND_ECHO	DINT			
OUTPUT_CONTROL_ECHO	DINT			
EXTERNAL_INPUT_STATUS	DINT			
EXTERNAL_OUTPUT_STATUS	DINT			
DEVICE_STATUS	DEVICE_STATUS_Check...			
READ_CYCLE_SEQUENCE_COU...	DINT			
TRIGGER_COUNT	DINT			
DECODE_MATCH_COUNT	DINT			
MISMATCH_COUNT	DINT			
NOREAD_COUNT	DINT			
DECODE_DATA_LENGTH	DINT			
DECODE_DATA_STRING	ARRAY[0..127] OF BYTE			
DEVICE_STATUS_Check_101	STRUCT	任意		
Reserved	BOOL		0	0
New_Master_Requested	BOOL		0	1
Reserved_for_future_use	BOOL		0	2
Scanning_Disabled	BOOL		1	0
In_read_cycle	BOOL		2	0
Actively_Scanning	BOOL		2	1

Output Assembly

名称	データ型	オフセット種別	バイトオフセット	ビットオフセット
Instance198	STRUCT	NJ		
USER_DEFINED_TAGS	ARRAY[0..3] OF BYTE			
COMMANDS	COMMANDS_Check_198			
EXTERNAL_OUTPUT	ARRAY[0..3] OF BYTE			
COMMANDS_Check_198	STRUCT	任意		
Trigger	BOOL		0	0
New_Master	BOOL		0	1
Reserved	ARRAY[0..5] OF BOOL		0	2
Disable_Scanning	BOOL		1	0
Reserved2	ARRAY[0..6] OF BOOL		1	1
Clear_Read_Cycle	BOOL		2	0
Unlatch_Outputs	BOOL		2	1
Reserved3	ARRAY[0..12] OF BOOL		2	2

Set Matchcode to ON.

- WebLink - **Setup** Screen

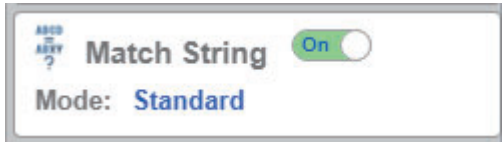

With nothing currently registered as the Master Symbol, when a Read is executed with Matchcode ON, the result is *Mismatch*.

By setting the NewMaster bit in the Output Assembly to 1, the next code that is read will be registered as the Master Symbol data.

<Register the Master Symbol Data>

名称	モニタ値	示形式
RunMode	True	lean
Commands.COMMANDS.Trigger	False	Boolean
Commands.COMMANDS.New_Master	True	Boolean
▼ GetData		
USER_DEFINED_TAG_ECHO	1	Decimal
COMMAND_ECHO	2	Decimal
OUTPUT_CONTROL_ECHO	0	
EXTERNAL_INPUT_STATUS	0	
EXTERNAL_OUTPUT_STATUS	0	
▼ DEVICE_STATUS		
Reserved	False	Boolean
New_Master_Requested	True	Boolean
Reserved_for_future_use	False	Boolean
Scanning_Disabled	False	Boolean
In_read_cycle	False	Boolean
Actively_Scanning	False	Boolean
READ_CYCLE_SEQUENCE_COUNTER	878	Decimal
TRIGGER_COUNT	3	Decimal

NewMaster bit set to True.

New\_Master\_Requested becomes True and next Read data is registered as Master Symbol.

<Trigger Input>

名称	モニタ値	TRUE	FALSE	表示形式
RunMode	True	TRUE	FALSE	Boolean
Commands.COMMANDS.Trigger	True	TRUE	FALSE	Boolean
Commands.COMMANDS.New_Master	True	TRUE	FALSE	Boolean
▼ GetData				
USER_DEFINED_TAG_ECHO	1			Decimal
COMMAND_ECHO	3			Decimal
OUTPUT_CONTROL_ECHO	0			
EXTERNAL_INPUT_STATUS	0			
EXTERNAL_OUTPUT_STATUS	0			
▼ DEVICE_STATUS				
Reserved	False	TRUE	FALSE	Boolean
New_Master_Requested	False	TRUE	FALSE	Boolean
Reserved_for_future_use	False	TRUE	FALSE	Boolean
Scanning_Disabled	False	TRUE	FALSE	Boolean
In_read_cycle	False	TRUE	FALSE	Boolean
Actively_Scanning	False	TRUE	FALSE	Boolean
READ_CYCLE_SEQUENCE_COUNTER	879			Decimal
TRIGGER_COUNT	4			Decimal


Trigger bit  
set to True.

Becomes False after Read  
is executed and  
NewMaster is registered.


<Perform a Read to Verify>

Since the data was registered as the Master Symbol, the result is *Match*.

WebLink Screen

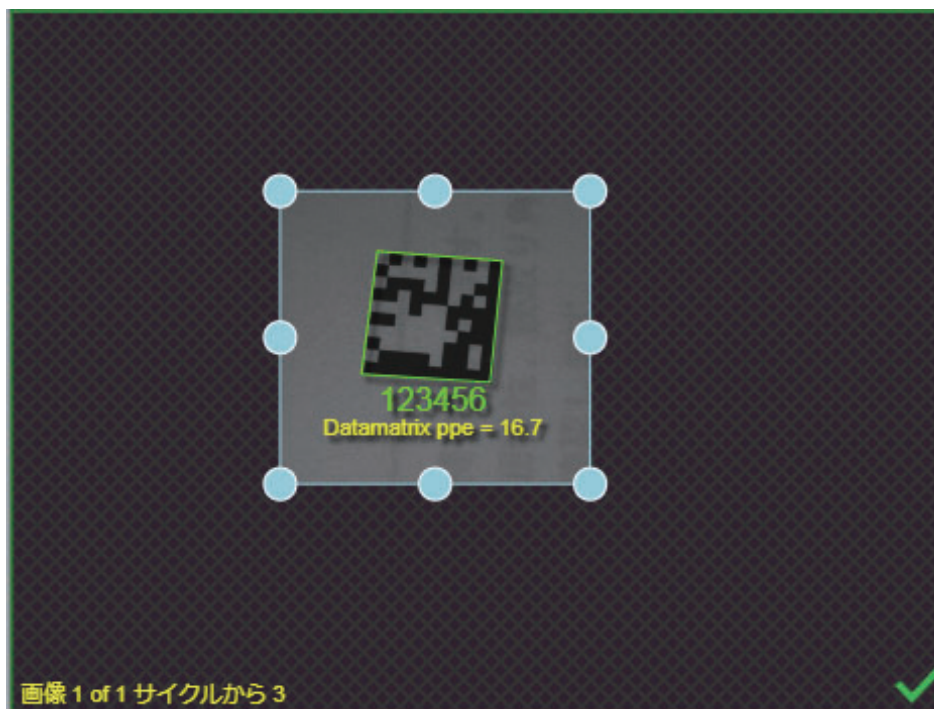

- WebLink - Setup - Matchcode - Match String Editor

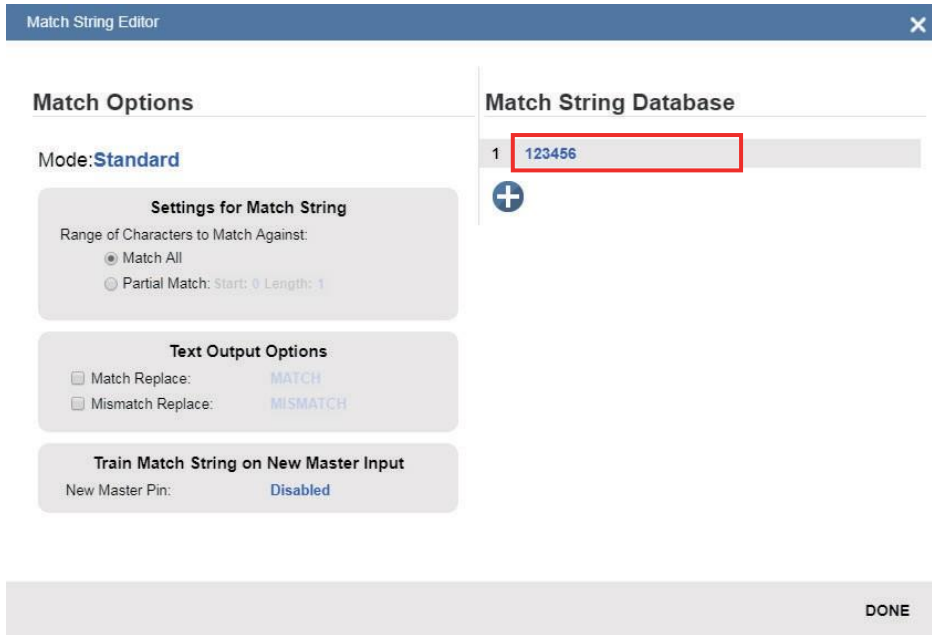

### 3-1-10 Communicating with the Code Reader with EtherNet/IP Message

Serial commands can be executed using EtherNet/IP Message (Explicit) communication.

For more information on Serial commands, please refer to the following.

3-2-5 Controlling Operation from an External Device on page 3 - 37.

**Note:** Any explicit message that causes an action that takes longer than 3 seconds will time out. It is recommended to use implicit messaging in these cases.

Message Communication Objects have the following structure:

Item	Setting value
Class ID	104 (0x68 hex)
Instance ID	1
Attribute ID	1
Service code	69 (0x45 hex)

#### ● EtherNet/IP Message (Explicit) Format


EtherNet/IP messages, both transmitted and received, are comprised of two parts, the Command Length and Command String.

- **Command Length (4 bytes)**

The total number of characters in the Command String.

- **Command String (256 byte maximum)**

The ASCII character array of the command sent from the PLC to the V430 reader.

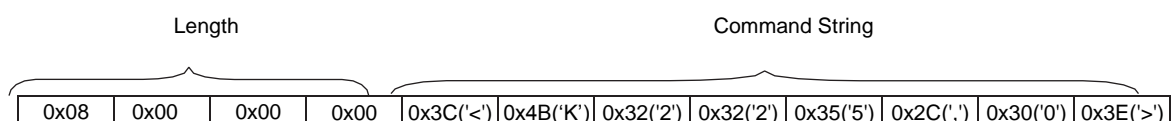



## Command Setting Example

This example shows how to set Message communication command strings.

- For the data that is sent from the PLC to the code reader, set a serial command character string.
- When using K Commands some commands do not provide a Response. In other words, there is no data to receive after sending the command.

However, in the case of a Verify setting command like <K225?>, there is a Response so data will be received after this command type is sent. Please note that multiple commands can be sent in a single transmission, so if the command sent typically doesn't produce a response a verify setting command can be sent in addition as shown in Example 3.

Example 1: The received data string when the data was sent using the <K225,0> command.

(Transmitted data) in 12 bytes 0x08 0x00 0x00 0x00 0x3C('<') 0x4B('K') 0x32('2') 0x32('2') 0x35('5') 0x2C(',') 0x30('0') 0x3E('>')

(Received data) None

Example 2: The received data string when the data was sent using the <K225?>

command. (Transmitted data) in 11 bytes 0x07 0x00 0x00 0x00 0x3C('<') 0x4B('K') 0x32('2') 0x32('2') 0x35('5') 0x32('?') 0x3E('>')

(Received data) in 11 bytes 0x07 0x00 0x00 0x00 0x3C('<') 0x32('2') 0x32('2') 0x35('5') 0x2C(',') 0x30('0') 0x3E('>')

Example 3: The received data string when the data was sent using the <K225,0><K225?> commands.

(Transmitted data) in 17 bytes 0x0D 0x00 0x00 0x00 0x3C('<') 0x32('2') 0x32('2') 0x35('5') 0x2C(',') 0x30('0') 0x3E('>') 0x3C('<') 0x32('2') 0x32('2') 0x35('5') 0x32('?') 0x3E('>')

(Received data) in 11 bytes 0x07 0x00 0x00 0x00 0x3C('<') 0x32('2') 0x32('2') 0x35('5') 0x2C(',') 0x30('0') 0x3E('>').

## 3-2 Controlling Operation and Data Output with Serial (TCP)

This section explains the communications settings required for using Serial (TCP) communications between the code reader and an external device.


### 3-2-1 Serial (TCP) Overview

Serial (TCP) conforms to the TCP/IP communication protocols. It can be used with any Ethernet communication equipment compatible with TCP/IP communication protocol. Since the V430-F communicates as a TCP server, the external device to be connected must be connected to V430-F as a TCP client. If you intend to use with an Omron PLC, please verify that it supports Socket Services (TCP Client).

### 3-2-2 Communications Processing Flow

In a system configuration in which it is connected by Serial (TCP) communications to an external device (such as PLC), serial commands can be received and code reading results can be output to the external device.

Below is the basic flow for establishing the Serial (TCP) communications, executing a Read command and outputting the Read result.

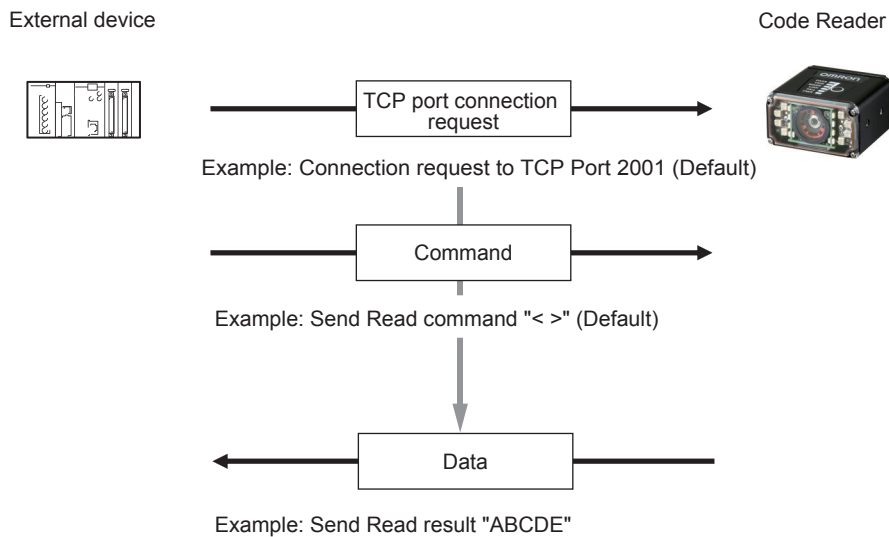

### 3-2-3 Communication Settings (Serial (TCP))

#### Network settings on the Code Reader

Set the IP address on the code reader to match the network settings of the PLC or other external device.

- WebLink - **Setup** - **Gear Icon** - **Advanced Settings** - **Communications** - **Ethernet**

- 1 Set **Ethernet** to *Enabled*.
- 2 Set the **IP Address** and **Subnet mask** according to the network settings of the PLC or other external device.

Setting Item	Setting Value	Description
Ethernet	<ul style="list-style-type: none"> <li>• Enabled (default)</li> <li>• Disabled</li> </ul>	Select whether to enable all, some, or none of the various Ethernet protocols, (Serial (TCP)), EtherNet/IP, PROFINET).
IP Address	a.b.c.d a: 0 to 255 b: 0 to 255 c: 0 to 255 d: 0 to 255 (Default: 192.168.188.2)	Enter the IP address of the Code Reader
Subnet	a.b.c.d a: 0 to 255 b: 0 to 255 c: 0 to 255 d: 0 to 255 (Default: 255.255.0.0)	Input the subnet mask address.
Gateway	a.b.c.d a: 0 to 255 b: 0 to 255 c: 0 to 255 d: 0 to 255 (Default: 0.0.0.0)	If a Gateway is used, enter the gateway address. If a Gateway is not used, use the default value 0.0.0.0.
IP Address Mode	<ul style="list-style-type: none"> <li>• Fixed (default)</li> <li>• DHCP</li> </ul>	In Fixed mode, the code reader uses a user-defined IP address. In DHCP mode, the code reader acquires its IP address, subnet, and gateway from the DHCP server.
TCP Port 1	1024 to 65536 (Default: 2001)	Enter one of the two TCP port numbers for communication with the code reader over Serial (TCP).
TCP Port 2	1024 to 65536 (Default: 2003)	Enter one of the two TCP port numbers for communication with the code reader over Serial (TCP).



#### Additional Information

Through the use of two TCP ports at the same time, it is possible for the V430-F to communicate over Serial (TCP) with two different external devices.

## Change the Command that Executes Read

It is possible to change the command used in Serial communications to execute Read.

There are two types of Read execution commands. One includes a Separator Character (delimiter) <> and the other has no delimiter.

- WebLink - Setup - Gear Icon - Advanced Settings - Read Cycle - Serial Trigger (Non-Delimited)

Setting Item	Setting Value	Description
Serial Trigger Character (Delimited)	ASCII code for 1 character (Default: Space(Hex: 20))	Specifies the command character string used to start a Read. To execute the command, the trigger character must be delimited in brackets <>. This command can only be executed when the Trigger Mode is set in <b>Read Cycle - Trigger - Mode</b> to either <i>Serial Data</i> or <i>Serial Data or External Edge</i> .
Start Character (Non-Delimited)	The ASCII codes for maximum of 2 characters (Default: NULL (Hex:00))	Specifies the command character string used to start a Read and the command character used to end a Read. The Start command character and the End command character must be different characters. When set it to NULL (Hex:00) it is disabled.
Stop Character (Non-Delimited)	The ASCII codes for maximum of 2 characters (Default: NULL (Hex:00))	The behavior will differ according to the selection made for <b>Read Cycle - Trigger - Mode</b> . <ul style="list-style-type: none"> <li>• If <i>External Edge</i> is selected, the code reader executes Read with the Start command character. An End command character is not necessary.</li> <li>• If <i>External Level</i> or <i>Serial Data and Edge</i> is selected, the Start trigger character starts a Read cycle and the End command character ends the Read cycle. Even for a Good Read, the Read Cycle does not end until the End command is sent.</li> </ul>

### ● Example Use of Character (Delimited) Command

- Read string: 12345, Character (Delimited): Space, Preamble: None, Postamble: CRLF

External device



	Serial Trigger command		
Character notation	<		>
Hex notation	3C	20	3E

Code Reader



In Read Cycle	Read result						
Character notation	1	2	3	4	5	CR	LF
Hex notation	31	32	33	34	35	0D	0A

### 3-2-4 Setting the Data to Output after a Read

The code reader can be configured so that after a Read is executed, its read results are automatically output to the TCP port it is connected to. Additional information such as print quality grade and code position coordinates can be appended to the Read result output and the format of that output can be modified.

#### Change the Read Result Output Condition

You can change the conditions by which you will output your Read results.

- WebLink - **Setup** - **Gear Icon** - **Advanced Settings** - **I/O** - **Symbol Data Output**

Setting Item	Setting Value	Description
Symbol Data Output	<ul style="list-style-type: none"> <li>• Disabled</li> <li>• Match</li> <li>• Mismatch</li> <li>• Good Read (default)</li> <li>• Only If All Are Good Reads</li> </ul>	<ul style="list-style-type: none"> <li>• Disabled: Read result is not output.</li> <li>• Match: The Read result is only output when it matches the Master Symbol set in the Matchcode function.</li> <li>• Mismatch: The Read result is only output when it does not match the Master Symbol set in the Matchcode function.</li> <li>• On Good Read: Read results are output for even just one Good Read.</li> <li>• Only If All Are Good Reads: The Read result is output only when all the symbols specified in the Read Multiple Symbols function are successfully read.</li> </ul>
Output Timing	<ul style="list-style-type: none"> <li>• As Soon As Possible (Default)</li> <li>• End of Read Cycle</li> </ul>	<ul style="list-style-type: none"> <li>• As Soon As Possible: Outputs the Read result immediately on Good Read and ends the Read Cycle.</li> <li>• End of Read Cycle: The Read result is not output until the End of Read Cycle condition is met. The End of Read Cycle condition is set in <b>Advanced Settings - Read Cycle - End of Read Cycle</b>.</li> </ul>

#### Set the data to be output when there is a No Read.

You can change the data to output when there is a No Read result.

- WebLink - **Setup** - **Gear Icon** - **Advanced Settings** - **I/O** - **No Read Message**

Setting Item	Setting Value	Description
No Read Message	<ul style="list-style-type: none"> <li>• Enabled (default)</li> <li>• Disabled</li> </ul>	<ul style="list-style-type: none"> <li>• Enabled: A message is output when there is a No Read. However, if the Trigger Mode set in Read Cycle is Continuous Read, no message is output regardless of this setting.</li> <li>• Disabled: No message is output for a No Read.</li> </ul>
Message	NOREAD (default)	Set the message to output when there is a No Read. You can set up to 64 ASCII characters.

#### Header and Footer Settings

You can change the Header (Preamble) and Footer (Postamble) that precedes and follows the Read string.


- WebLink - **Setup - Format Output**

- 1 Set the Header (Preamble) as needed.


In **Format Output**, check the box for **Preamble** to add a header to the Read result.



To edit the characters used in the header, click on the blue text to the right of **Preamble**. Characters can be entered from the keyboard in to the Text Input Box.

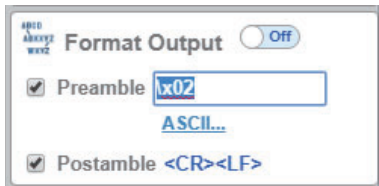

If you want to use a Control Character as the input, select **ASCII...** below the text input box. Control characters will be displayed and can be selected from here.

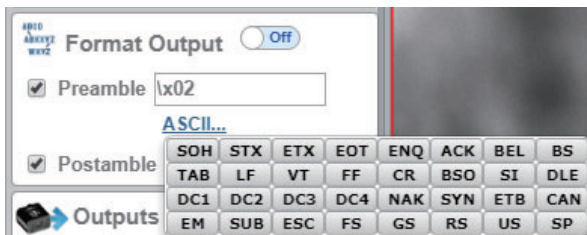

- 2 Set the Footer (Postamble) as needed.

The procedure for setting it is the same as that for the Header (Preamble).



#### Additional Information

The Header and Footer can also be set in **Advanced Settings - Communications - Preamble / Postamble**.

## Setting the Format of Data Output

You can format the Read data you wish to output, for example, by specifying the number of characters read from a code symbol to output and appending a fixed character string to the output.

- WebLink - **Setup - Format Output**


- 1 Change the format of the output as needed.

Turn **Format Output** ON.




- 2 The Output Formatting Editor screen opens.

Click on the **Format:** text in blue below **Format Output** to open the Output Formatting Editor.

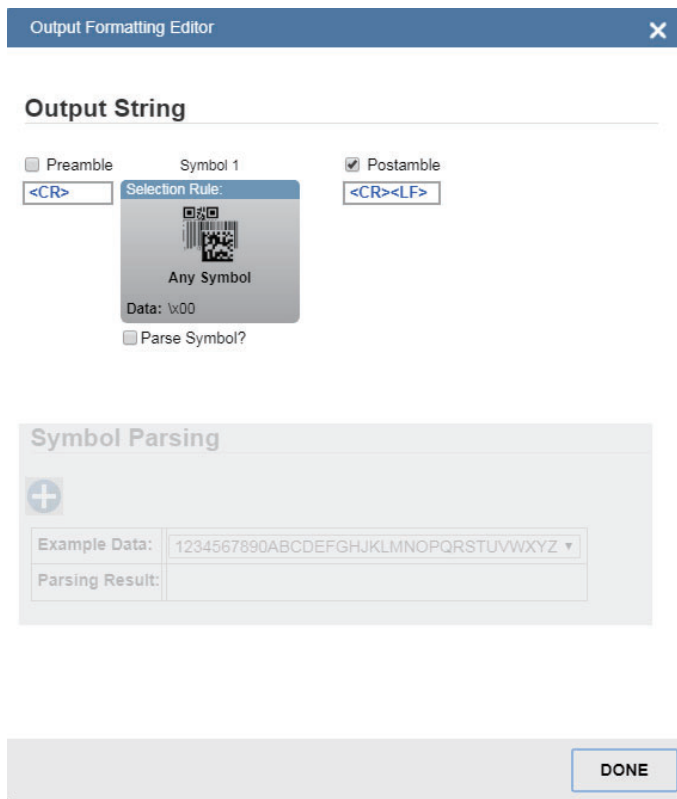

**3 Parse Symbol?** Check this box.

Press the appropriate button to select either **Extract chars from symbol data**, or **Insert your own text**.

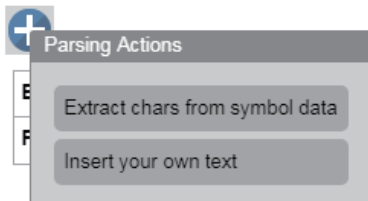

**4** If you want to specify the range (number) of characters from the read character string to output, select **Extract chars from symbol data**.

Enter the range for the number of characters to output. In the example setting below, a string length of 1 to 4 characters is output.



To apply this setting, click the button.

**5** If you want to insert a fixed character string in to the read (decoded) character string to output, select **Insert your own text**.

The default text in the field is `/r`. If you click on it, a Text input box will appear so that you can input text from your keyboard. In the example below, `ABC-` is set for the 4 characters.




If you want to use a Control Character as the input, select **ASCII...** below the text input box. Control characters will be displayed and can be selected from here.



When Input is complete, press Enter on the keyboard.

- 6** To delete the formatting you set for the output, place the cursor on it and click the X button displayed on the upper right.

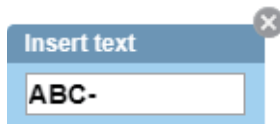

- 7** Click the **Done** button. It will close the Output Formatting Editor screen.


## How to Append Additional Symbol Information

Additional information such as print quality grade and code position coordinates can be appended to the Read result output.

### ● Outputting a Code Symbol's Position Information

- WebLink - **Setup** - **Gear Icon** - **Advanced Settings** - **I/O** - **Output Object Info**

- 1** Enable **Output Coordinates**.



- 2** If necessary, change the Separator Character.  
In WebLink - **Setup** - **Gear Icon** - **Advanced Settings** - **Symbol Quality** - **Global**, enter a character for **Symbol Quality Separator**. Below is an example where `,` is used as the Separator Character.



- 3** The position coordinates of the code symbol is output appended to the Read result.  
The following example shows the code symbol's position coordinates appended to the Read string `ABCDE`.



ABCDE,(0867,0708)(0867,0708)(1741,0673)(1741,0673)

● **Output of the Symbol Quality Grade Information (ISO/IEC 15415)**

- WebLink - **Setup** - **Gear Icon** - **Advanced Settings** - **Symbol Quality** - **ISO/IEC 15415**

**1** Enable the Symbol Quality Grade Standard to output  
 The following is an example where all ISO/IEC 15415 Symbol Quality Grade parameters are enabled.

ISO/IEC 15415 Parameters	
☆ Aperture	80 %
☆ Overall	Enabled
☆ Contrast	Enabled
☆ Modulation	Enabled
☆ Reflectance Margin	Enabled
☆ Fixed Pattern Damage	Enabled
☆ Axial Non-Uniformity	Enabled
☆ Grid Non-Uniformity	Enabled
☆ Unused ECC	Enabled

**2** If necessary, change the Separator Character.  
 In WebLink - **Setup** - **Gear Icon** - **Advanced Settings** - **Symbol Quality** - **Global**, enter a character for **Symbol Quality Separator**. Below is an example where , is used as the Separator Character.

Global	
☆ Symbol Quality Separator	,
☆ Output Mode	Grade

**3** The Symbol Quality Grade is output appended to the Read result.  
 The following example shows Symbol Quality Grades appended to the Read string *ABCDE*.  
 ABCDE,C,A,C,C,C,A,A,A

● **Additional Symbol Information That Can Be Appended**

Additional information	Setting to adjust (WebLink - Advanced Settings Menu)	Description	Example Output (For Read string <i>ABCDE</i> .) The delimiter character is a , <comma>.	Output Order
Symbol Identifier	<b>I/O - Symbol Data Output</b>	A (3 character) Symbol Identifier indicating the type of the read symbol is put in front of its Read string.	]dIABCDE	Put in front of the Read string
Decodes per Trigger	<b>I/O - Decodes per Trigger Output</b>	Outputs the number of Good Read in Read Cycle	ABCDE,00002	1
Configuration Data Identifier	<b>I/O - Database Identifier Output</b>	Outputs the Index Number of the Configuration Database used to get a Good Read.	ABCDE,DB01	2

Additional information	Setting to adjust (WebLink - Advanced Settings Menu)	Description	Example Output (For Read string <i>ABCDE</i> .) The delimiter character is a , <comma>.	Output Order
Frame Number	<b>I/O - Output Object Info</b>	Outputs the Frames number (number of images) that were needed to get a Good Read result. The output is a 3 digit number.	ABCDE,F010	3
Code Position Coordinates	<b>I/O - Output Object Info</b>	Outputs the coordinates of the four vertices of the read symbol in pixels.	ABCDE, (0032,0040) (0287,0056) (0287,0279) (0048,0271)	4
Print Quality (ISO/IEC 16022)	<b>Symbol Quality - ISO/IEC 16022 Parameters</b>	Outputs the DataMatrix Symbol Quality Grade defined by ISO/IEC 16022.*1	ABCDE,B,A,A,A	5
Print Quality (Omron Microscan)	<b>Symbol Quality - Omron Microscan Parameters</b>	Outputs the Omron Microscan Proprietary Symbol Quality Grade.*1	ABCDE,000,092,14 3,091,001,14.3,200 ,16X16,PASS,349	6
Print Quality (ISO/IEC 15415)	<b>Symbol Quality - ISO/IEC 15415 Parameters</b>	Outputs the Symbol Quality Grade defined by ISO/IEC 15415 for 2D Codes.*1	ABCDE,C,A,C,C,C, A,A,A	7
Print Quality (ISO/IEC 15416)	<b>Symbol Quality - ISO/IEC 15416 Parameters</b>	Outputs the Symbol Quality Grade defined by ISO/IEC 15416 for Barcode symbols.*1	ABCDE,C,A,A,A,A, A,C,A,A,A	8
Print Quality (ISO/IEC 29158)	<b>Symbol Quality - ISO/IEC 29158 Parameters</b>	Outputs the Symbol Quality Grade defined by ISO/IEC TR 29158 for 2D Codes.*1	ABCDE,C,C,A,B,C, A,A,A	9
Read Time	<b>I/O - Read Duration Output</b>	Outputs the Read Duration time in milliseconds.	ABCDE,100	10
Read Cycle ID	<b>I/O - Output Cycle ID</b>	The Output Cycle ID number (number of Reads executed) is output in hexadecimal format.	ABCDE,Cy- cleID=0x8	11

\*1. For more information on Symbol Quality Grade, please refer to Autofocus Multicode Reader V430-F Series User Manual (Z407) - *Symbol Quality Grade*.



#### Additional Information

When Multiple Symbol Reading is enabled, the Output Order is *read character string of symbol 1, additional information for symbol 1, read character string for symbol 2, additional information for symbol 2, and so on.*

## 3-2-5 Controlling Operation from an External Device

The code reader can be controlled, have its settings viewed and changed from an external device with the use of serial commands.

The V430-F serial commands are divided broadly in to two different types.

- **Serial Configuration Commands (K Commands)**

Commands to change settings on the V430-F.

- **Serial Utility Commands**

Commands used to test Read Rate, get code reader status and control automatic adjustments.

## Serial Command Format

Explanation of how commands are formatted in Serial communication.


- **Common Command Format for Serial Configuration Commands and Serial Utility Commands**

- Enclose the commands in brackets "< >".
- Characters used in commands and data are case-sensitive. Use either upper-case, or lower-case characters as required.
- Serial commands can be linked together in a chain. For example, the following command sets Trigger Mode to External Trigger/Edge, sets the End of Read Cycle condition to New Trigger, and saves the setting.

```
<K200,3> <K220,1> <Z>
```

- **Serial Configuration Command (K Commands) Format**

- The K Commands consist of the letter K, followed by a three digit number and comma-separated parameters as shown below.

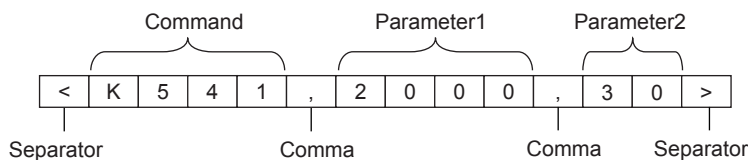

- Some K Commands can change multiple parameters. For those, if the final parameter does not need to be changed, it can be omitted.

For example, when using the K Command `<K541>` which is used for changing both Exposure time and Gain, if you only need to change the Exposure time, it can be entered as follows.

```
<K541,1000>
```

- If the parameter that does not need to be changed is not the last in sequence, only the comma delimiter for it is necessary.

For example, when using the K Command `<K541>` which is used for changing both Exposure time and Gain, if you only need to change the Gain, it can be entered as follows.

```
<K541,,30>
```

- If any characters other than numeric values, such as Control characters, need to be used in the command, they must be entered in hexadecimal format. If you need to include the characters '<,>', comma (,) as parameters, enter them as their hexadecimal value. To enter a hexadecimal value as a parameter, add lowercase h immediately after the K command.

For example, to set CR (hexadecimal value: 0D) to the footer (postamble), you can enter it as follows.

```
<K142h,,0D>
```

- By default, there is no Response when a K Command is used. To query a current state on the code reader, use a `<Knnn?>` Command.

For example, the following is the command to query the current Exposure time and Gain settings and its Response.

- Status Request command

<	K	5	4	1	?	>
---	---	---	---	---	---	---

- Response

The current settings of the request K command

<	K	5	4	1	,	2	0	0	0	,	3	0	>	CR	LF
---	---	---	---	---	---	---	---	---	---	---	---	---	---	----	----

Header (Preamble) Footer (Postamble)



### Additional Information

The Response includes a Header (Preamble) and Footer (Postamble). The defaults for these are Header: *None* and Footer: *CRLF* (hexadecimal: 0D0A).

- When the Serial Verification function is enabled (by default: disabled), the current setting status is returned as the response to the K command. If you want to confirm that the K command was applied correctly, please enable the Serial Verification function.

- K command (when the Serial Verification function is enabled)

<	K	5	4	1	,	1	0	0	0	>
---	---	---	---	---	---	---	---	---	---	---

- Response

The current settings of the request K command

<	K	5	4	1	,	1	0	0	0	,	3	0	>	CR	LF
---	---	---	---	---	---	---	---	---	---	---	---	---	---	----	----

Header (Preamble) Footer (Postamble)



### Additional Information

The Response includes a Header (Preamble) and Footer (Postamble).

## ● Command Format for the Serial Utility

- For the Serial Utility commands, there are commands for which there is a response and commands for which there is no response. The format of the response differs with each command.

- Application version Request command

<	#	a	>
---	---	---	---

- Response

<	#	a	/	3	5	-	9	0	0	0	0	9	7	-	1	.
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Header (Preamble)

2	.	3	.	3	0	0	8	>	CR	LF
---	---	---	---	---	---	---	---	---	----	----

Footer (Postamble)

- OUTPUT1 ON Request command

<	L	1	>
---	---	---	---

- Response

None

### 3-2-6 Serial Command List

A list of the supported Serial commands.

Category	Command	Description	Response Data Example (For Read string ABCDE.)
Setting change (K Command)	<Knnn, Parameter> nnn: Three-digit number of each K command	Commands to change settings on the code reader. Refer to the <i>Autofocus Multicode Reader V430-F Series User Manual (Z407) - Appendices A-6 to A-17</i> for additional information on K Commands.	None (If the Serial Verification function is enabled, the Response data will be the same as that for the <Knnn?> command.)
Execute a Read	User Defined (Default: < >)	Command (Delimited) to execute a Read. (Reference: <i>Change the Command that Executes Read</i> on page 3 - 31)	ABCDE
	User Defined (Default: Disabled)	The Start Character (Non-Delimited) (Reference: <i>Change the Command that Executes Read</i> on page 3 - 31)	ABCDE
	User Defined (Default: Disabled)	(Reference: <i>Change the Command that Executes Read</i> on page 3 - 31)	ABCDE
Read Test	<C>	Tests the number of Decodes per second. The Response data output is the number of Decodes per second and the Read character string.	5 Decodes / Sec ABCDE * <sup>1</sup> (By this you can see 5 Good Read in 1 second)
	<Cp>	Tests the Read Rate (%). The Response data output is the percentage of Good Read per 100 Reads and the Read character string.	95% ABCDE * <sup>1</sup> (By this you can see 95 Good Reads out of 100 Reads.)
	<J>	Ends the Read test.	None
Auto-adjust	<@CAL>	Automatically adjusts the settings for Exposure, Focus Position and Symbol Type. Calibration PASSED is output as the Response data from halfway through the progress and when calibration completes successfully. If calibration fails, the message, Calibration FAILED will be output.	Prog   Exposure Gain Brightness 2   5764 33 24 100   6011 33 37 Calibration PASSED. * <sup>1</sup>
Train	<TRAIN>	Start the Train operation. Trains with the next Symbol read. When reading the same code symbols, using Train can make Reading results more stable.	None
	<UNTRAIN>	Release the Train operation.	None
	<TRAIN?>	Verifies the Train status. Depending on the status of the Train, the Response data will be one of the following. <ul style="list-style-type: none"> <li>&lt;TRAIN,0&gt;: Default, Train not done</li> <li>&lt;TRAIN,1&gt;: Train in progress</li> <li>&lt;TRAIN,2&gt;: Training of Symbol complete</li> </ul>	<TRAIN,2>

Category	Command	Description	Response Data Example (For Read string ABCDE.)
Optimization	<OPT>	Starts Optimization. Optimization using the next Symbol read. When reading the same code symbols, using Optimization can make the Reading speed faster.	None
	<UNOPT>	Releases Optimization.	None
	<OPT?>	Confirm the Optimization status. Depending on the Optimization status, the Response data will be one of the following. <ul style="list-style-type: none"> <li>• &lt;OPT,0&gt;: Default, No Optimization</li> <li>• &lt;OPT,1&gt;: Optimization in Progress</li> <li>• &lt;OPT,2&gt;: Optimization of Symbol is complete</li> </ul>	<OPT,0>
	<?>	Gets the hexadecimal number showing the code reader status. Information for error conditions on the code reader and Read Cycle status can be obtained. For more detailed information, please refer to Autofocus Multicode Reader V430-F Series User Manual (Z407) - <i>Appendices A-16 Utilities</i> .	<?/02> (You can see there is currently no error condition on the code reader.)
	<K?>	Queries the settings status of all K Commands.	Settings status of all K Commands.
	<K??>	Gets the description of all K Command parameters.	Description of all K Command parameters.
	<K?#>	Gets the parameter ranges of all K Commands.	Parameter ranges of all K Commands.
	<Knnn?> (nnn: Three-digit number of each K command)	Queries the setting status of the specified K Command.	<K541,2000,30> (Example response to <K541??> Exposure: 2000us, Gain: 30)
	<Knnn??> (nnn: Three-digit number of each K command)	Queries the parameter description of the specified K Command.	<K541??,Exposure,Gain> (Example Response data for <K541??> You can see that Parameter 1 is Exposure and Parameter 2 is Gain.)
	<Knnn?#> (nnn: Three-digit number of each K command)	Gets the parameter range of the specified K Command.	<K541?#,Value 25-100000:Def=2500,Value 0-100:Def=33> (Example Response data for <K541?#> You can see that the setting range of Parameter 1 is 25 to 100000 with a default value of 2500, while the setting range of Parameter 2 is 0 to 100 with a default value of 33.)
<Knnn?*> (nnn: Three-digit number of each K command)	Gets the same Response data as when the <Knnn?> command, <Knnn??> command, or <Knnn?#> command is executed.	<K541,2000,30> <K541??,Exposure,Gain> <K541?#,Value 25-100000:Def=2500,Value 0-100:Def=33> (Example Response data for <K541?*>.)	

Category	Command	Description	Response Data Example (For Read string ABCDE.)
Device Control	<L1>	Parallel OUTPUT 1 Signal turns ON.	None
	<L2>	Parallel OUTPUT 2 Signal turns ON.	None
	<L3>	Parallel OUTPUT 3 Signal turns ON.	None
	<I1>	Turn ON the target pattern (blue LED).	None
	<I0>	Turn OFF the target pattern (blue LED).	None
	<I>	Disables Read Cycle. While Read Cycle is Disabled, it cannot accept a trigger.	None
	<H>	Enables Read Cycle.	None
Counters and Counter re-sets	<q>	Gets the number of No Reads in the Read Cycle. The Response data output is q/ followed by a 9 digit value for the number of No Read	<q/000000005>
	<q0>	Clears the number of No Reads in the Read Cycle.	None
	<\$>	Gets the Mismatch Count. The Response data output is \$/ followed by a 9 digit value for the number of Mismatch.	<\$/000000002>
	<\$0>	Clears the Mismatch Count.	None
	<N>	Gets the number of No Reads. The Response data output is N/ followed by a 9 digit value for the number of No Reads	<N/000000005>
	<O>	Clears the Mismatch Count.	None
	<T>	Gets the Trigger Input Count. The Response data output is T/ followed by a 9 digit value for the number of Triggers.	<T/000000010>
	<U>	Clears the Trigger Input Count.	None
	<V>	Gets the Match Count when the Matchcode function is used. The Response data output is V/ followed by a 9 digit value for the number of Matched strings.	<V/000000010>
	<W>	Clears the Match Count.	None
	<X>	Gets the Mismatch Count when the Matchcode function is used. The Response data output is X/ followed by a 9 digit value for the number of Mismatched strings.	
	<Y>	Clears the Mismatch Count.	None



Category	Command	Description	Response Data Example (For Read string <i>ABCDE.</i> )
Confirm Firm-ware version	<#>	Queries all the firmware version information.	<#b/ 35-9000033-122.3021><#a/ 35-9000097-1.2.3.3008><#w/ 30-9000079-1.2.3.3006><#p/ N/A><#d/35-xxxxxx- x.x.x.xxxx>
	<#a>	Queries the version information of application software.	<#a/35-9000097-1.2.3.3008>
	<#b>	Queries the Boot Software Version information.	<#b/35-9000033-122.3021>
	<#w>	Queries the WebLink version.	<#w/30-9000079-1.2.3.3006>
	<!>	Queries the Application software checksum and Boot Software checksum.	<!b/38B7><!a/9555>
	<!a>	Queries the Application software checksum.	<!a/9555>
	<!b>	Queries the Boot Software checksum.	<!b/38B7>
Save for Power-on, Re-initialize and Restart	<Z>	Saves current settings to the code reader and restarts it.	<A?/0>
	<Zc>	Saves the current setting as the Customer default setting on the code reader and restarts.	<A?/0>
	<Zrc>	Restores the code reader settings to the customer default and restarts the code reader.	<A?/0>
	<Zrd>	Resets the code reader to its factory default settings (excluding communication settings and user-defined names) and restarts.	<A?/0>
	<Zrdall>	Resets the code reader to its factory default settings and restarts.	<A?/0>1>
	<A>	Restarts the code reader with its current settings.	<A?/0>
	<Ard>	Resets the code reader to its factory default settings (excluding communication settings and user-defined names) and restarts.	<A?/0>
	<Arp>	Restores the code reader settings to the previously saved state and restarts.	<A?/0>
	<Arc>	Restores the code reader settings to the customer default and restarts.	<A?/0>
Master Database	<G>	Sets the database number to be registered in the Master database to 1.	None
	<Gn> n: Master Database Index Number	Sets the database number to be registered in the Master database to n.	<NEWM/01> (The data for the next Good Read is registered in Master database 1.)
	<NEWM>	Queries the database number to register. <NEWM/00> is returned if there is no database yet specified to be registered.	None

Category	Command	Description	Response Data Example (For Read string ABCDE.)
Barcode Configuration	<BCCFG>	Transitions to the Barcode Configuration Mode in which Read can be performed on a Data-Matrix converted to data with a K Command. For more information please refer to <i>Autofocus Multicode Reader V430-F Series User Manual (Z407) - Appendices A-16 Utilities</i> .	None
Code Grade	<VAL3>	Queries the ISO/IEC 15415 Code Quality/Grade Report.	For more information on Response data, please refer to <i>Autofocus Multicode Reader V430-F Series User Manual (Z407) - Appendices A-11 Code Grading Standards</i> .
	<VAL4>	Queries the ISO/IEC 15416 Code Quality/Grade Report.	
	<VAL5>	Queries the ISO/IEC TR 29158 Code Quality/Grade Report.	

\*1. The Headers and Footers are not dependent on code reader settings. They are Header: None and Footer: CRLF.

# 4

## Controlling Operation and Data Output with PROFINET

This section describes the procedures for connecting the V430-F Series Reader to the NJ Series Machine Automation Controller (hereinafter referred to as Controller) via Profinet IO), and for verifying the device connections. After following the configurations in this section, the user will be able to view PROFINET input and output module data, make changes to the output module, and verify those changes at the input module. The examples in this section do not contain any PLC programming, custom data structures, or setup, beyond connecting the input and output modules. It is the user's responsibility to program the controller once data access to the V430-F has been established.

---

<b>4-1 Overview of PROFINET</b> .....	<b>4-2</b>
4-1-1 Types of PROFINET .....	4-3
<b>4-2 V430-F Communications for PROFINET Connections</b> .....	<b>4-6</b>
4-2-1 Types of Communication Areas .....	4-6
<b>4-3 Setting Up PROFINET Communications</b> .....	<b>4-7</b>
4-3-1 Configuring Network Settings in the V430-F .....	4-7
4-3-2 Timing Charts by Module Type .....	4-10

## 4-1 Overview of PROFINET

---

PROFINET is a network for industrial use that applies industrial Ethernet (100 Mbps, full duplex) to PROFIBUS DP.

PROFINET is an open standard that is managed by PI (PROFIBUS and PROFINET International) and is used in a variety of types of industrial equipment. Because PROFINET uses standard Ethernet technology, a variety of general-purpose Ethernet devices can be included in the network.

This section provides an overview sufficient to use the V430-F with PROFINET.

Refer to the standards IEC61158, IEC61784, and PI for detailed PROFINET specifications.

### 4-1-1 Types of PROFINET


There are two PROFINET standards: PROFINET CBA and PROFINET IO.

- **PROFINET CBA**

Inter-device communication using components. Mainly used between controllers.

- **PROFINET IO**

Control by I/O data between a controller and devices.

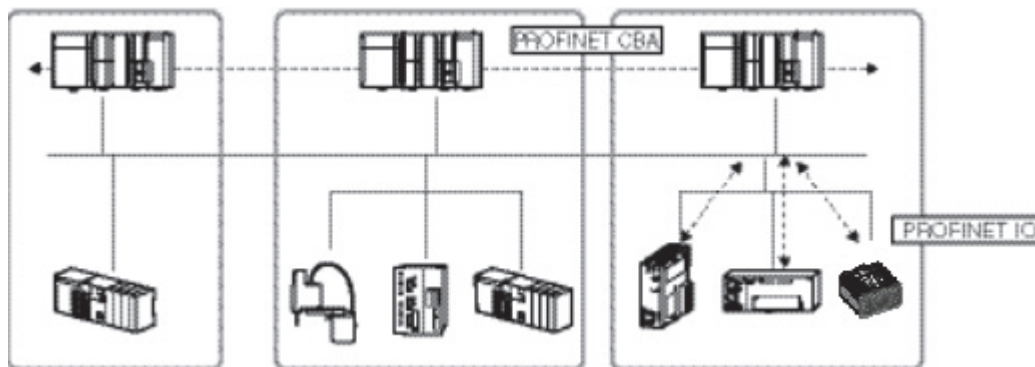

The V430-F supports PROFINET IO. PROFINET IO uses the same device model as PROFINET DP. The information of each device is described in a GSD (General Station Description) file based on XML (Extensible Markup Language).

## Communication Specifications of PROFINET IO

The communication specifications of PROFINET IO are described below.

Communication Specifications	Type	Details	V430-F Support
Periodic data communication method	RT (real-time) communication	Uses standard Ethernet hardware and achieves the same level of performance as the existing Fieldbus.	Supported
	IRT (Isochronous real-time) communication	This method provides a higher level of assurance than RT that communication will be executed within a specific time. Intended for use in systems such as motion control that require strict real-time.	Not supported

**PROFINET IO specifies the supported functions by conformance class, with consideration given to the application.**

Class	Overview	V430-F Support
Class A	Supports the basic functions of RT communication.	Supported
Class B	This class adds network diagnosis and redundancy functions used in process automation and other applications.	Supported
Class C	Supports IRT communication that realizes reliable synchronization.	Not Supported

**The functions below are defined in Class A.**

Function	Overview
Cyclic Data Exchange	Real-time data communication between the I/O controller and I/O devices at determined cycles. Set by I/O data CR.
Acyclic Parameter Data / Device Identification	Used for parameter settings, I/O device configuration, and reading of device information. Set by record data CR.
Device / Network Diagnosis	Communication for the purpose of sending alarms and statuses from I/O devices to the I/O controller. Set by Alarm CR.

**The functions below are defined in Class B, which expands upon Class A.**

Function	Overview
SNMP (Simple Network Management Protocol)	Allows additional Network Diagnostics via Management Information Base 2 (MIB2) and Lower Link Layer Discovery Protocol-MIB(LLDP-EXT-MIB).
PDEV (Physical Device Object)	Can also gather diagnostic information using acyclic PROFINET services.

## Device Types Used in PROFINET IO

**The devices below are defined in PROFINET IO.**

Type	Details
I/O Controller	Controller for external and other devices.
I/O Device	Reader device connected to the I/O controller. The V430-F is an I/O device.
I/O Supervisor	PC or other device used for maintenance and diagnosis.

## IO Devices

I/O devices consist of DAPs and I/O modules.

The functions and properties of these devices are described in a GSD file.

- **DAP (Device Access Point):** This is an Ethernet access point and is used by means of a communication program.
- **I/O Module:** Consists of the Slot, Subslot, and Index below. An I/O module has one or multiple slots.
- **Slot:** Indicates the location of the I/O module in the I/O device.
- **Subslot:** I/O interface inside the slot. This defines data types such as bit data and byte data, and the meanings of the data types.
- **Index:** Data in a Subslot.

The above information is described in the GSD file of the V430-F, and the I/O controller uses the GSD file of the V430-F to build the system.




### Additional Information

When an I/O device is used in PROFINET, the GSD file that describes the device functions and properties is used to configure the network configuration settings.

When the V430-F is used in PROFINET as an I/O device, the GSD file of the V430-F must be installed in the engineering tool.

## Data Communication in PROFINET IO

For an I/O controller and I/O device to communicate, a connection called an AR (Application Relation) must first be established between the two devices. When the AR connection is established, data communication between the I/O controller and I/O device takes place by means of a CR (Communication Relation) that defines the content of the data communication. An I/O device can establish AR relations with multiple communication devices. In addition, multiple CR relations can be defined inside one AR. By establishing multiple CR relations inside one AR, communication that requires multiple profiles or differing Subslots can be performed. It is also possible to set a cycle time for each CR or I/O.

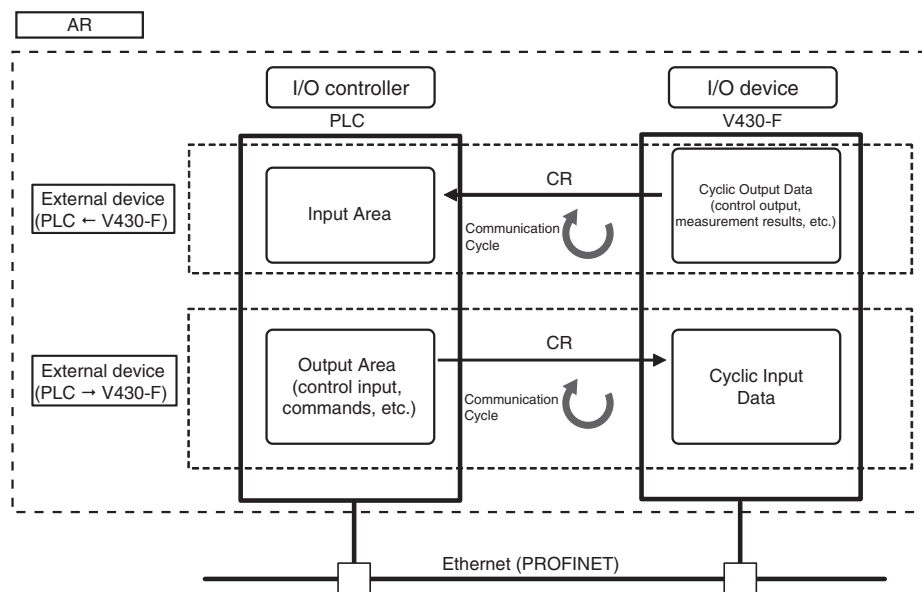

CR is classified into IO data CR, record data CR, and alarm CR. Within the IO data CR, data communication is performed for each refreshing task period. Within CRs other than the IO data CR, communication takes place between the periodic data communications. Within the record data CR, the IO controller will send commands to the IO device(s) at any time. IO device(s) will send back responses to the IO controller.

# 4-2 V430-F Communications for PROFINET Connections

You can use PROFINET IO data CR to communicate between the PLC and the reader to perform control via command/response communications or to output data after measurements.

The V430-F complies with PROFINET conformance class B.

To connect to external devices and communicate using PROFINET, configure the PROFINET IO data CR settings with the engineering tool.

For details on the IO data CR settings in the engineering tool, refer to the manual for each engineering tool.


## 4-2-1 Types of Communications Areas

For PROFINET communications, the following three communications areas are used in the PLC to perform communications.

### Areas Used for the Different Control Methods

Command / Response Communications	(1) Output Area (Command Area)	This is the area to which you write control commands for the V430-F to execute.
	(2) Input Area (Response Area)	This is the area to which the V430-F writes the results of control commands executed from the command area.
Data Output after Measurements	(3) Input Area (Output Area)	This is the area to which the V430-F writes output data for measurements after an inspection is performed.

The Input Area (Response Area) (2) and Input Area (Output Area) (3) are assigned to continuous memory addresses or to a variable.

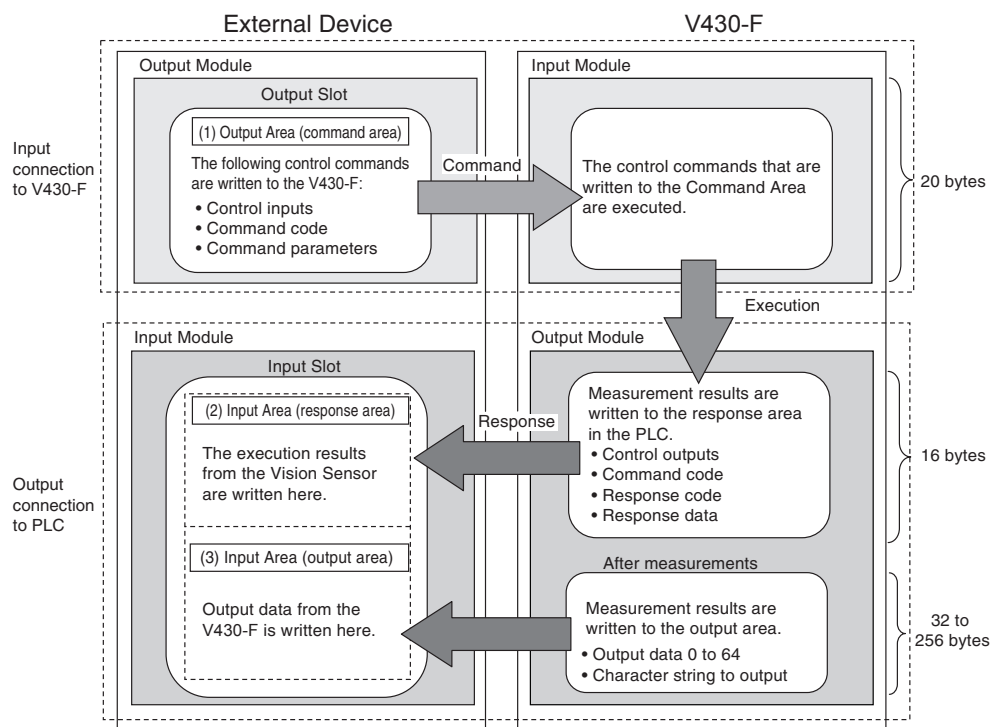




## 4-3 Setting Up PROFINET Communications

### 4-3-1 Configuring Network Settings in the V430-F

- 1 Launch a browser and enter **http://192.168.188.2**. Google Chrome is the recommended browser.



- 2 The WebLink startup screen will be displayed.

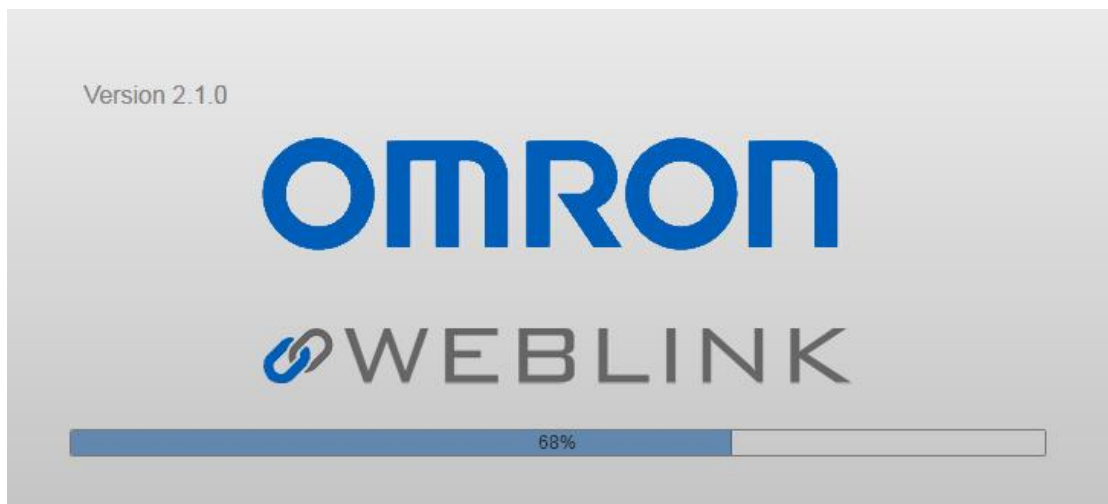

- 3 If the WebLink startup screen does not appear, it means that communication between the code reader and the PC has not been established. Check the following:


- Does the V430-F and the PC have a proper physical (cable) connection?
- Are the respective IP Addresses on the PC and on the V430-F code reader set correctly?

Set the IP Address of the PC and perform a hardware reset of the V430-F.

When turning the power on, press and hold the setup button on the reader until its light turns on.

For other measures that can be taken, refer to the *V430-F Series Autofocus Multicode Reader User Manual*, **Appendices, Q&A, How to react when unable to connect to WebLink**.


**4** The WebLink screen shown below will appear.

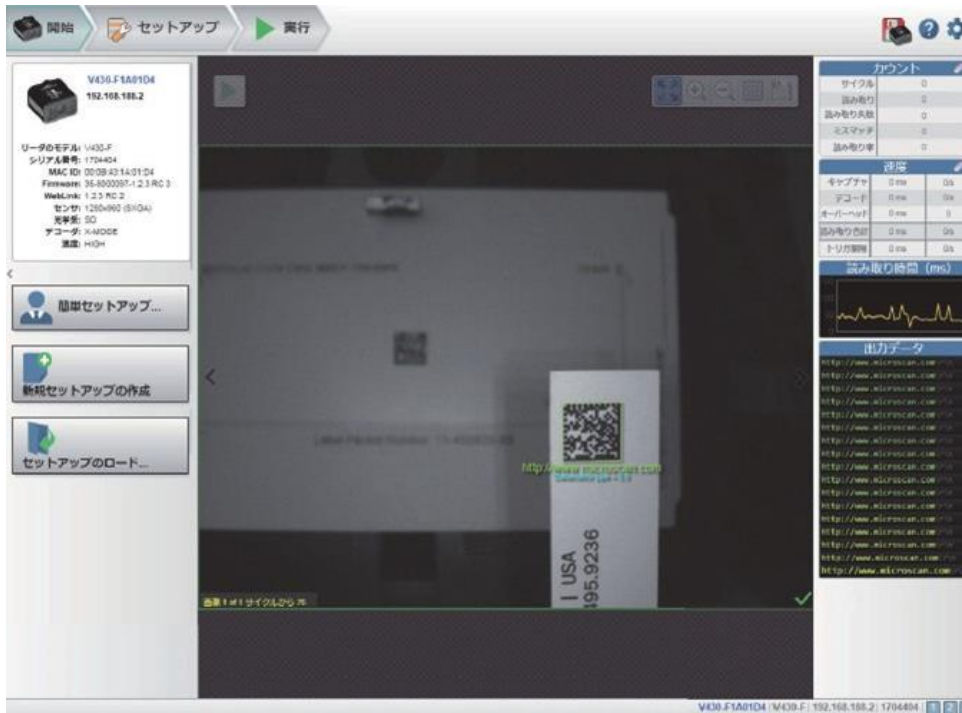


**5** Click on the **Setup** tab and set the **Cycle** to **Triggered**.



**6** Click on the **gear icon** on the upper right of the screen to select **Advanced** settings.

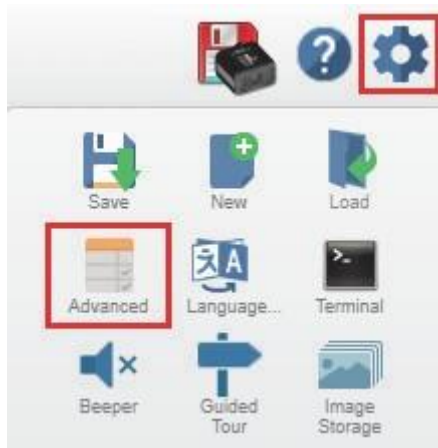


- 7** The **Advanced Settings** will appear. Check the settings indicated by the red boxes. **EtherNet/IP** connection is **Enabled** by default. Disable EtherNet/IP and set **PROFINET** to **Enabled**. If the IP address needs to be changed (when connecting multiple V430s, for example), configure the **IP Address** as needed for your application.

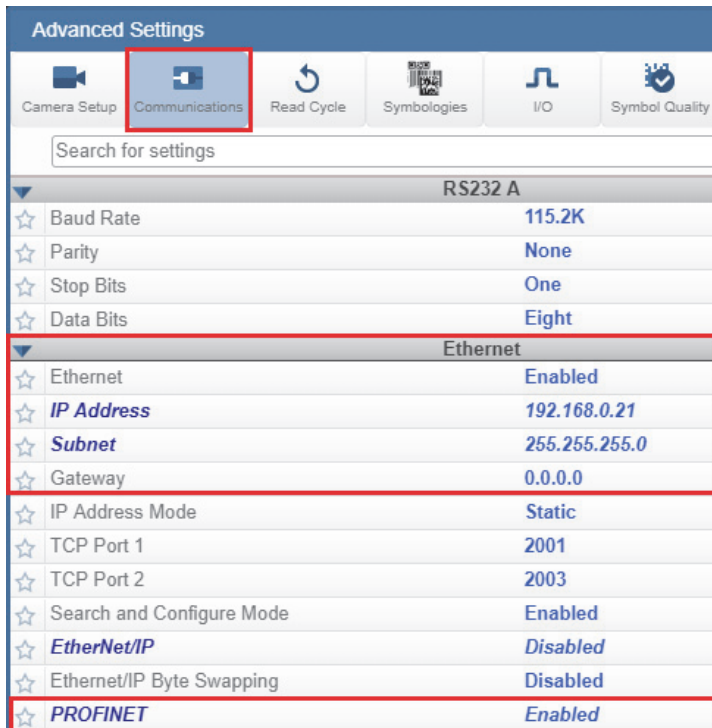

## Communications Settings Procedure

To use PROFINET communication, the settings below must be configured.

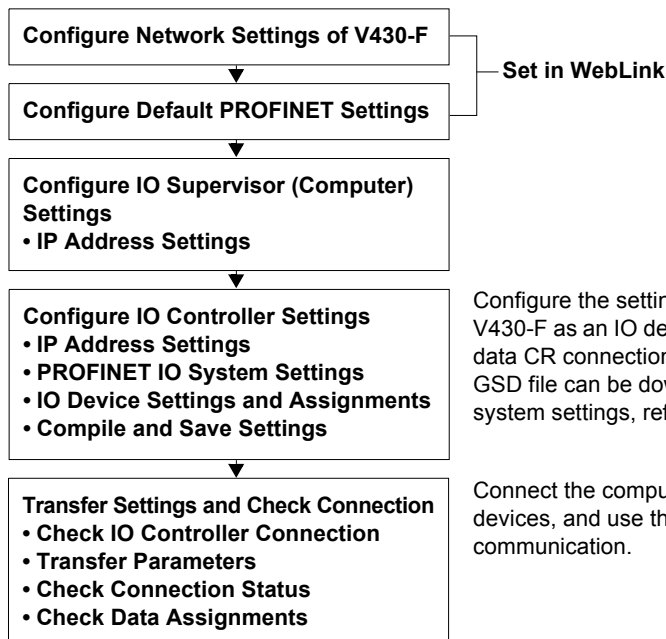

Configure the settings with the engineering tool. If you are setting the V430-F as an IO device, install a GSD file that defines the V430-F IO data CR connection information in the engineering tool. The V430-F GSD file can be downloaded from our website. For PROFINET IO system settings, refer to applicable engineering tool manual(s).

Connect the computer (engineering tool), V430-F, and external devices, and use the engineering tool to transfer settings and check communication.

## Memory Assignments

Refer to **Appendix B – V430-F Input and Output Modules** for the definition of input and output modules.


### 4-3-2 Timing Charts by Module Type

#### Read is Executed by the Read (TRIG) Signal.

The timing signal at completion of storing the Read data to PLC data memory differs by the **Input Module** type.

##### ● Small Input Module (100)


**Small Input Module** does not correspond to the Timing Signal for storing Read data.

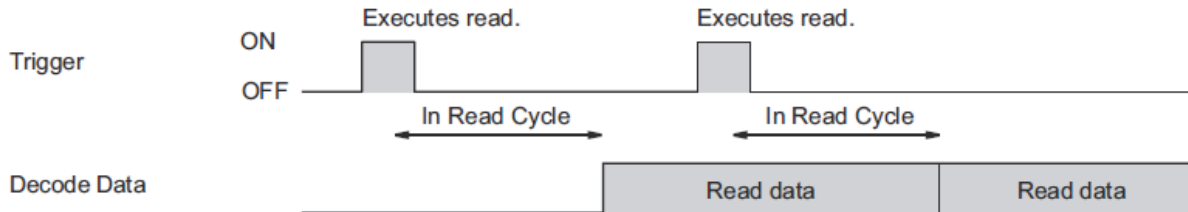

1. Reading starts at the rising edge of the **Trigger**.
2. At the end of a Read, the read data is stored in **Decode Data**.

##### ● Large Input Module (101)


**Large Input Module** is output at the timing of the **Device Status - InReadCycle** bit turning from ON to OFF.

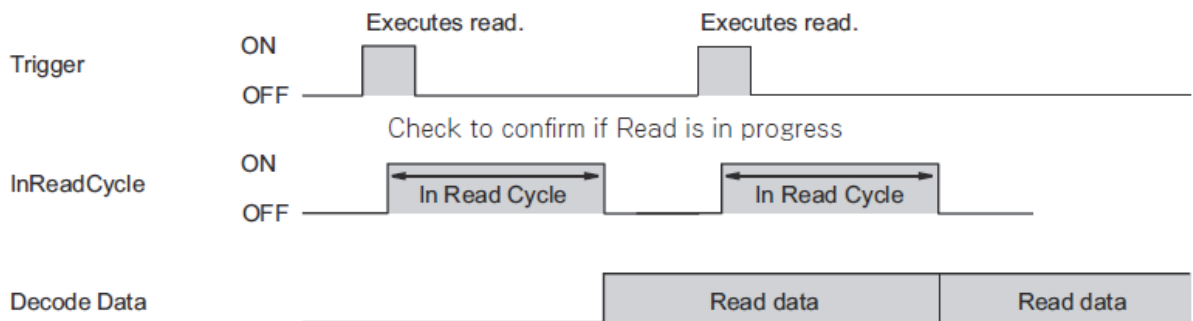

1. Reading starts at the rising edge of the **Trigger**.
2. At the start of a Read, **InReadCycle** turns ON and Trigger turns OFF.
3. At the end of a Read, the Read data is stored in **Decode Data** and **InReadCycle** turns OFF.

### ● MXL Input Module (102)

**MXL/Input Module (102)** is output at the timing of the **Device Status - InReadCycle** bit turning from ON to OFF.

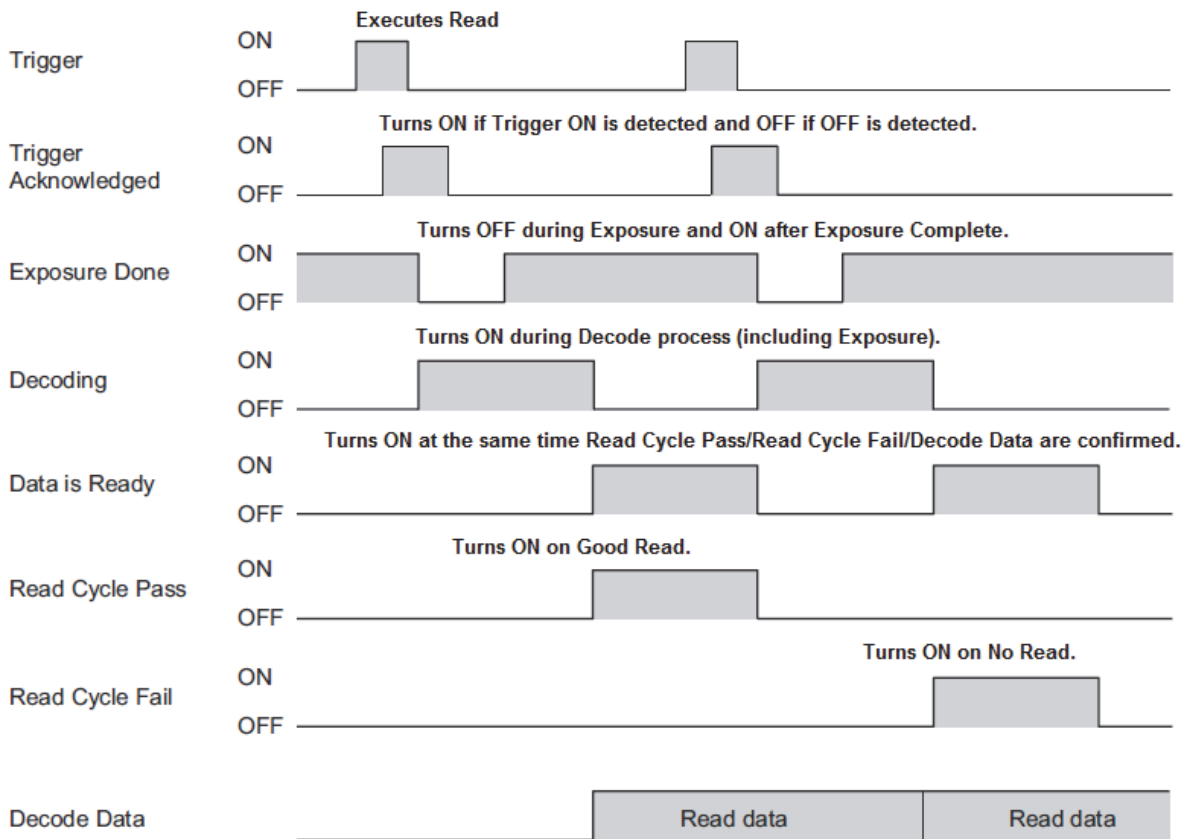

1. Reading starts at the rising edge of the **Trigger**.
2. **Trigger Acknowledged** turns ON when Trigger ON is detected and turns OFF when Trigger OFF is detected.
3. **ExposureDone** turns OFF when exposure starts and turns ON when exposure completes.
4. **Decoding** is ON during decoding processing. The Decoding process overlaps the Exposure process.
5. **Data is Ready** turns ON at the same time Decode Data / Read Cycle Pass or Read Cycle is confirmed.
6. **Read Cycle Pass** turns ON when there is a Good Read and **Read Cycle Fail** turns ON when there is a No Read. The Read data is stored in **Decode Data**.



#### Additional Information

There can be up to a 10 ms delay in the Output timing of the Symbol data.

7. When the next **Trigger** is detected, **Data is Ready** turns OFF.


## Sample Ladder Program

A sample ladder program is shown below.

- Input the Trigger Signal to execute Triggered Read.
- The read character string (Decode Data) is compared with the Verification string (Master Symbol) stored in the PLC.
- If they match, it is added to the Match/OK Count, and if they do not match, it is added to the Mismatch/NG Count.

The following Input and Output Modules are used.

- Input Module: MXL/SLC Input Module (102)
- Output Module: Output Module (197)

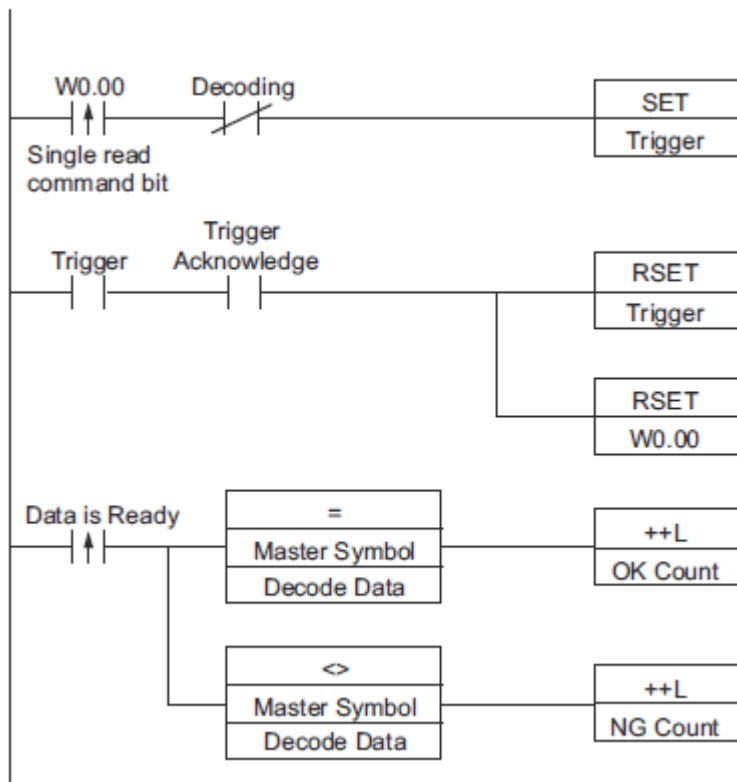

- (1.) When the flag for Triggered is ON, The Trigger Bit turns ON.
- (2.) The Trigger Acknowledged Bit (for detecting trigger input) is ON.
- (3.) When the Trigger Acknowledged Bit ON is detected, the Trigger Bit turns OFF.
- (4.) When Read is completed, the Data is Ready Bit turns ON.
- (5.) The Read string (Decode Data) is compared with the Verification string (Master Symbol).
- (6.) If the two strings match, the Match/OK Count is incremented by 1.
- (7.) If the two strings do not match, the Mismatch/NG Count is incremented by 1.

# 5

## Controlling Operation and Data Output with RS-232C

---

<b>5-1</b>	<b>Controlling Operation and Data Output with RS-232C .....</b>	<b>5 - 2</b>
5-1-1	Communications Processing Flow.....	5 - 2
5-1-2	RS-232C Wiring .....	5 - 2
5-1-3	Communication Settings (Serial (RS-232C)) .....	5 - 4
5-1-4	Setting Data to be Output after Reading a Code (Serial (RS-232C)) .....	5 - 7
5-1-5	Additional Symbol Information that can be Appended (Serial (RS-232C)) ...	5 - 7
5-1-6	Controlling Operation with Serial (RS-232C) from an External Device.....	5 - 7
5-1-7	Serial Command List (RS-232C) .....	5 - 7


# 5-1 Controlling Operation and Data Output with RS-232C

This section explains how to connect the code reader to an external device (such as PLC) using RS-232C communications and the methods that you can use to control the code reader and its output.

## 5-1-1 Communications Processing Flow

In a system configuration in which it is connected by Serial (RS-232C) communications to an external device (such as PLC), serial commands can be received and code reading results can be output to the external device.

Below is the basic flow for establishing the Serial (RS-232C) communications, executing a Read command and outputting the Read result.

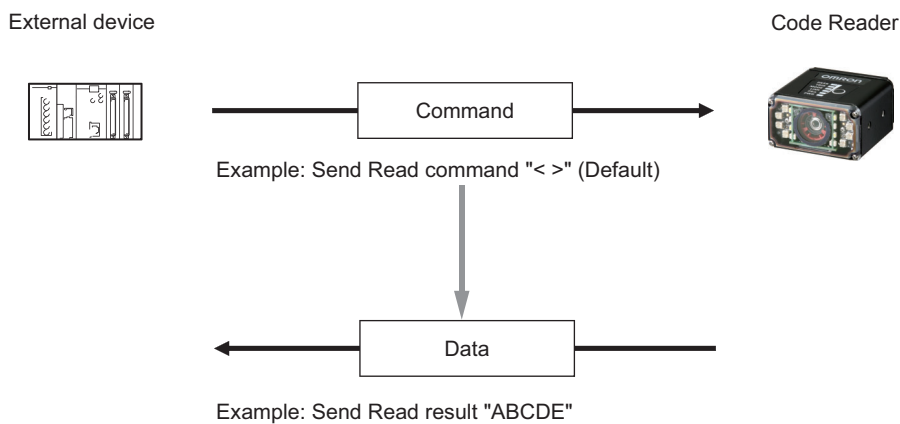

## 5-1-2 RS-232C Wiring


There are two ways of wiring the V430-F for RS-232C connection.

### Using the RS-232C-I/O 2 Prong cable (V430-W2-3M)

The D-Sub 9 Pin connector can be connected directly to an IBM PC compatible Serial Port.

V430-W2 3M

(Units: mm)

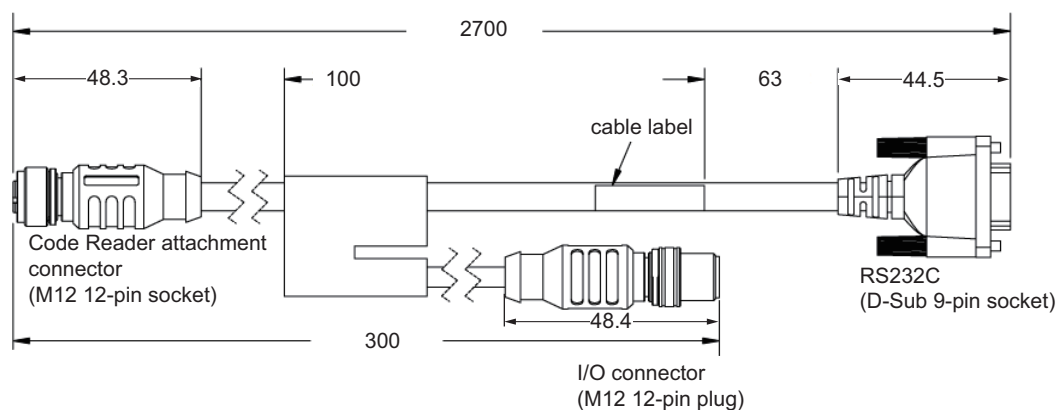



Please connect V430-W8□ to the I/O connector (M12 plug) and connect it to power supply etc.  
RS-232C (D-sub 9 Pin Female Connector)

Pin No.	Signal Name	Pin Layout Diagram
1	-	
2	HOST_RxD	
3	HOST_TxD	
4	-	
5	0V	
6	-	
7	-	
8	-	
9	-	


### Using the RS-232C Signal on I/O cable (V430-W8□).

RS-232C communication is possible by combining the signal for RS-232C communication (HOST\_RxD, HOST\_TxD) coming from the I/O cable (V430-W8□) with the RS-232C signal of the device it is connected to.

(If the V430-W8□ is connected to the M12 plug of the V430-W2-3M, the RS-232C signal on the V430-W8□ cannot be used.)

I/O Cable Connection Diagram (All V430-W8)

Wire color	Pin No.	Signal Name	Function
Brown	2	24V	Power supply
Blue	7	0V	GND
Red	8	COM_IN	Common Input Signals (Input Common)
Red / Black	12	COM_OUT	Common Output Signals (Output Common)
White	1	TRIG	Read Trigger Input (Trigger)
Black	9	HOST_RxD	Receive Data (RS-232(Host) RxD)
Purple	10	HOST_TxD	Transmit Data (RS-232(Host) TxD)
Gray	5	OUTPUT 1	(Output 1)
Gray / Red	11	OUTPUT 2	(Output 2)
Pink	6	OUTPUT 3	(Output 3)
Green	3	DEFAULT	(Default)
Yellow	4	NEW MASTER	(New Master)
None	-	-	(Shield)

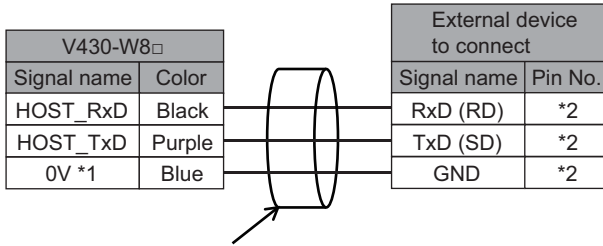

Use a shielded cable. Up to 15m cable length.

\*1. 0V is shared with the 0V for V430-F power supply supply, so please branch it.

\*2. Connect according to your device specifications.

Example: When using OMRON Serial Communication Unit

CJ1W-SCU22	
Signal name	Pin No.
RxD (RD)	3
TxD (SD)	2
GND	9


### 5-1-3 Communication Settings (Serial (RS-232C))

#### RS-232C Communication Settings on the Code Reader

Set the RS-232C communications settings on the code reader according to the settings on the PLC or other external device.

- WebLink - **Setup** - **Gear Icon** - **Advanced Settings** - **Communications** - **RS-232C**

- 1 Set the Baud Rate, Parity, Stop Bit, and Data Length according to the RS-232C communication settings of the external device to connect to.

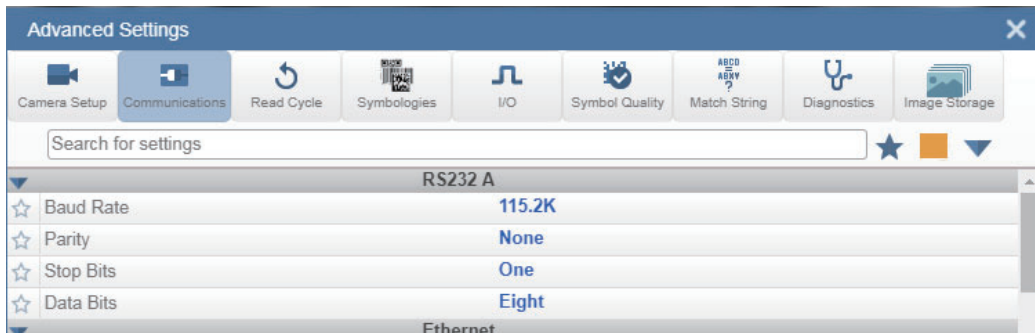

Setting Item	Setting Value	Description
Baud Rate	600、1200、2400、4800、9600、19200、38400、57600、115200、230400 (Default: 115200)	Set the transmission speed for RS-232C communications. Set it to match the communications specifications of the external device.
Parity	<ul style="list-style-type: none"> <li>• None (default)</li> <li>• Odd</li> <li>• Even</li> </ul>	An error detection routine that sets 1 data bit per character to 1 or 0 so that the total number of bits in the data field is even or odd. Set it to match the communications specifications of the external device.

Setting Item	Setting Value	Description
Stop bit	<ul style="list-style-type: none"> <li>1 (default)</li> <li>2</li> </ul>	1 or 2 bits appended to the end of the data per each character to indicate End of the data. Set it to match the communications specifications of the external device.
Data Bits	<ul style="list-style-type: none"> <li>7</li> <li>8 (default)</li> </ul>	Length of the data bits. Select eight or seven. Set it to match the communications specifications of the external device.

## 2 Set the Host Protocol as needed.

Set this when you wish to use RS-232C communications for control codes with an external device.

*Behavior of the Host Protocol* on page 4 - 5

Host Protocol	
☆ Protocol Selection	Point-to-Point
☆ Address	1
☆ Response Timeout	12 ms
☆ LRC Status	Disabled


Setting Item	Setting Value	Description
Protocol Selection	<ul style="list-style-type: none"> <li>Point-to-Point (default)</li> <li>Point-to-Point with XOn/XOff</li> <li>ACK/NAK</li> <li>Polling Mode</li> </ul>	<ul style="list-style-type: none"> <li>Point-to-Point: A basic RS-232C communication protocol that does not control communication by a control code.</li> <li>Point-to-Point with XOn/XOff: RS-232C communication protocol that performs data transfer control with the use of XOn/XOff control codes.</li> <li>ACK/NAK: RS-232C communication protocol that performs communication confirmation with the use of ACK/NAK control codes.</li> <li>Polling Mode: Polling Mode is a protocol used in RS-422 communications. It is not used with the V430-F.</li> </ul>
Address	1 to 50 (Default: 1)	The Polling Mode Address Number. It is not used with the V430-F.
Response Timeout	0 to 255 (Default: 12)	Sets the Response Latency of the ACK/NAK Protocol (milliseconds). If the Response Timeout for the ACK/NAK response to data transmission is being exceeded, the code reader will cancel/release/clear the ACK/NAK Response Wait State.
LRC Status	<ul style="list-style-type: none"> <li>Disabled (Default)</li> <li>Enabled</li> </ul>	When enabled, error checking to verify the accuracy of RS-232C data transmission is added. Exclusive OR for all characters following [STX] (beginning of text) up to [ETX] (end of text). Cumulatively adds the binary sequence of all characters to be transmitted. The result is that 1 is added when the number of 1 is an odd number, and 0 is added when the number is an even number. (0 is added in the case of two instances of 1, or two instances of 0, while 1 is added when there is only 0 or 1 instances) The data receiving side executes the same operation and checks for errors by comparing with the LRC of the received data.

## Behavior of the Host Protocol

Description of how each Host Protocol behaves


### ● Point-to-Point

It is a basic RS-232C communication protocol that does not control communication by a control code.

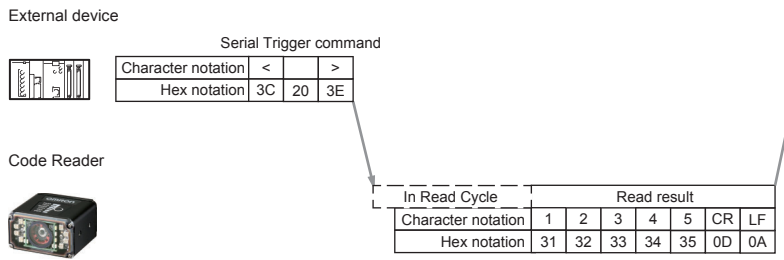


### ● Point-to-Point with XOn/XOff

With this protocol, if the free space of the Receive buffer on the side receiving data becomes small, it sends XOff (Hex:13) to the Data Transmit side to request transmission interrupt. When it has enough free space again, it sends XOn (Hex:11) to the Data Transmit side to request Re-transmit.

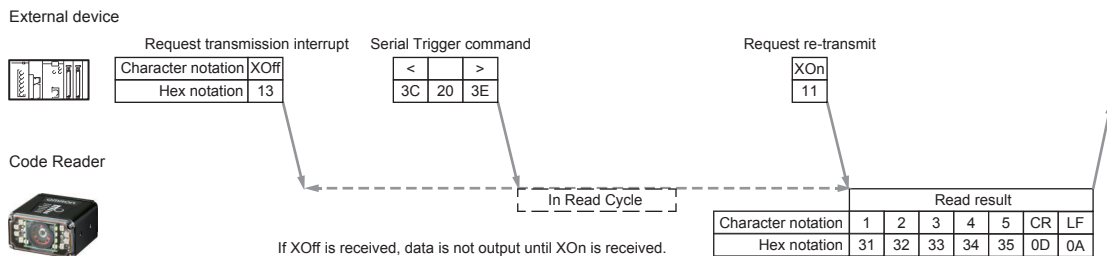


### ● ACK/NAK

ACK/NAK Control Codes are an RS-232C communication protocol for confirming communication. When data is received, an ACK (Hex:06) response is sent to the device that sent the data. When data is not successfully received, a NAK (Hex:15) response is sent to the device that sent the data. If the device that sent the data receives a NAK response, it re-transmits its data. When the data was successfully received:

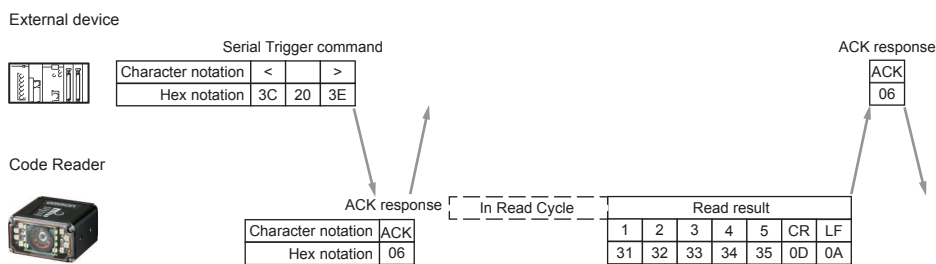

When the data was not received:

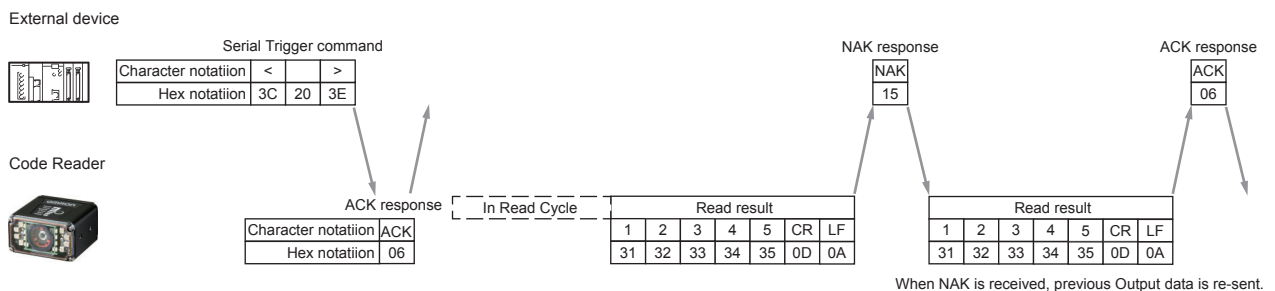

- **Polling Mode**

Polling Mode is not used with the V430-F.

## **Change the Command that Executes Read (Serial (RS-232C))**

It is possible to change the command used in Serial (RS-232C) communications to execute Read. The method for changing the commands is the same as for Ethernet Serial (TCP) communications.

*Additional Symbol Information that can be Appended on page 3 - 36*

### **5-1-4 Setting Data to be Output after Reading a Code (Serial (RS-232C))**

The code reader can be configured so that after a Read is executed, its read results are automatically output using Serial (RS-232C) communications. Additional information such as print quality grade and code position coordinates can be appended to the Read result output and the format of that output can be modified.

The methods for setting the data is the same as for Ethernet Serial (TCP) communications.

*3-2-4 Setting the Data to Output after a Read on page 3 - 32*

### **5-1-5 Additional Symbol Information that can be Appended (Serial (RS-232C))**

The list of additional Symbol Information that can be appended is the same as the list for Serial (TCP) communications.

*Additional Symbol Information that can be Appended on page 3 - 36*

### **5-1-6 Controlling Operation with Serial (RS-232C) from an External Device**

The code reader can be controlled, have its settings viewed and changed from an external device with the use of serial commands.

The specifications for serial commands are the same as for Ethernet Serial (TCP) communications.

*3-2-5 Controlling Operation from an External Device on page 3 - 37*

### **5-1-7 Serial Command List (RS-232C)**

The list of Serial commands is the same as the list for Serial (TCP) communications

*3-2-6 Serial Command List on page 3 - 41*




# Appendices

---

---

<b>A</b>	<b>Command List and EtherNet/IP Specifications.....</b>	<b>A - 1</b>
<b>B</b>	<b>V430-F Input and Output Modules .....</b>	<b>B - 1</b>

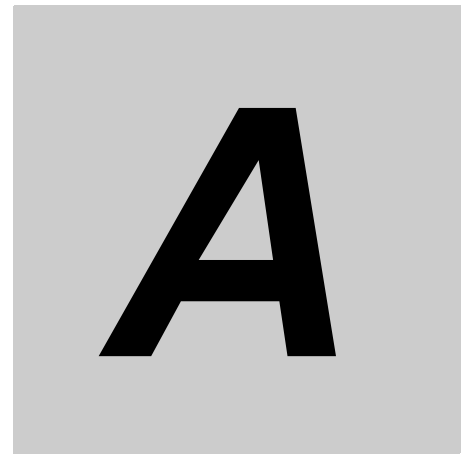

# Appendix

---



This section lists the commands you can use with the V430-F and the EtherNet/IP industrial protocol.

---

<b>A-1 Command List</b> .....	<b>A-2</b>
<b>A-2 EtherNet/IP Specifications</b> .....	<b>A-3</b>



# A-1 Command List

## A-1-1 Command List

This section lists the commands that you can use with the V430-F and the EtherNet/IP industrial protocol.

○: Supported Command, △: Command with restricted execution, -: Non-Supported Command

Function	Parallel	Serial (TCP)	Serial (RS-232C)	EtherNet/IP
Change the settings.	-	○	○	_*1
Performs Read	○	○	○	○
Starts Read Counts Test	-	○	○	-
Starts Read Rate Test	-	○	○	-
Ends Reads Count Test / Read Rate Test	-	○	○	-
Performs Calibration	-	○	○	-
Performs Training	-	○	○	-
Performs Optimization	-	○	○	-
Gets Error information from code reader	-	○	○	○
Gets settings	-	○	○	_*1
Turns Parallel OUTPUT signal ON/OFF	-	○	○	○
Turns Target Pattern light (Blue LED) ON/OFF	-	○	○	○
Enables / Disables Read Cycle	-	○	○	○
Gets Counters	-	○	○	○
Resets Counters	-	○	○	○
Gets Version information	-	○	○	-
Saves settings to Code reader	-	○	○	-
Restores code reader factory default settings	○	○	○	-
Restarts Code reader	-	○	○	-
Writes Read results to the Master Database	○	○	○	○
Gets Code quality grade report	-	○	○	-

\*1. It can be used for sending serial command over EtherNet/IP message communications.

# A-2 EtherNet/IP Specifications

## A-2-1 EDS Files by Firmware Version

Product	Code Version	EDS File	Version	Product Code	Device Major Rev	Device Minor Rev
ID-40	1.3.1.xxxx	MicroHAWK_(35-9000034-11).eds	1.2	3410	1	1
	2.0.0.xxxx	MicroHAWK_(35-9000034-11).eds	1.2	3410	1	1
	2.1.0.xxxx	MicroHAWKID40_2_1_0_20201016.eds	1.0	3410	2	1
V430	2.0.0.xxxx	V430(32-9000097-01).eds	1.2	3410	1	1
	2.1.0.xxxx	V430-F_2_1_0_20201015.eds	1.0	3411	2	1
V330	2.1.0.xxxx	V330-F_2_1_0_20201015.eds	1.0	3412	2	1

## A-2-2 Assembly Memory Allocation

An explanation of the memory allocation of each Input Assembly (V430-F → PLC) and each Output Assembly (PLC → V430-F).

### Small Input Assembly (Instance ID: 100)

It is a compact, lightweight input assembly. It is designed to hold 64 bytes of information in the Read result. When reading multiple symbols, the Read strings are output delimited by Separator Characters. The following table lists the Member Structure of the Small Input Assembly

Small Input Assembly Member Structure

Member Name	Size (Bytes)
USER-DEFINED TAG ECHO	4
COMMAND ECHO	4
OUTPUT CONTROL ECHO	4
READ CYCLE SEQUENCE COUNTER	4
DECODE DATA LENGTH	4
DECODE DATA STRING	64

Total Size: 84 Bytes

#### Member Description

- **User-Defined Tag Echo**  
Returns the value set in the User-Defined Tag field of the Output Assembly (Legacy).
- **Command Echo**  
Returns the value set in the Command field of the Output Assembly (Legacy).
- **Output Control Echo**  
Returns the value set in the External Output field of the Output Assembly (Legacy).
- **Read Cycle Sequence Counter**  
Stores the current Read Cycle Count.
- **Decode Data Length**  
Stores the number of characters in the Read string.
- **Decode Data String**  
Stores the Read string. When additional information such as Print Quality Grading Standard is set, it is stored following the Read string.

**Assembly Memory Allocation**

	<b>Member Name</b>	<b>Data Type</b>	<b>Bit Number</b>	<b>Data Length</b>	<b>Byte Offset</b>
32 bit	<b>User Defined Tag Echo</b>	<b>DINT</b>		<b>4 Byte</b>	<b>0</b>
	UserTag_1		0	1 bit	
	UserTag_2		1	1 bit	
	UserTag_3		2	1 bit	
	UserTag_4		3	1 bit	
	UserTag_5		4	1 bit	
	UserTag_6		5	1 bit	
	UserTag_7		6	1 bit	
	UserTag_8		7	1 bit	
	UserTag_9		8	1 bit	
	UserTag_10		9	1 bit	
	UserTag_11		10	1 bit	
	UserTag_12		11	1 bit	
	UserTag_13		12	1 bit	
	UserTag_14		13	1 bit	
	UserTag_15		14	1 bit	
	UserTag_16		15	1 bit	
	UserTag_17		16	1 bit	
	UserTag_18		17	1 bit	
	UserTag_19		18	1 bit	
	UserTag_20		19	1 bit	
	UserTag_21		20	1 bit	
	UserTag_22		21	1 bit	
	UserTag_23		22	1 bit	
	UserTag_24		23	1 bit	
	UserTag_25		24	1 bit	
	UserTag_26		25	1 bit	
	UserTag_27		26	1 bit	
	UserTag_28		27	1 bit	
	UserTag_29		28	1 bit	
	UserTag_30		29	1 bit	
	UserTag_31		30	1 bit	
	UserTag_32		31	1 bit	
32 bit	<b>Command Echo</b>	<b>DINT</b>		<b>4 Byte</b>	<b>4</b>
	Trigger_Echo		0	1 bit	
	New Master Echo		1	1 bit	
	Reserved		2 - 7	6 bit	
	Disable Scanning Echo		8	1 bit	
	Reserved		9 - 15	7 bit	
	Clear Read Cycle Report and Counters Echo		16	1 bit	
	Unlatch Outputs Echo		17	1 bit	
	Reserved		18 - 31	14 bit	

	Member Name	Data Type	Bit Number	Data Length	Byte Offset
32 bit	<b>Output Control Echo</b>	<b>DINT</b>		<b>4 Byte</b>	<b>8</b>
	Out1 Echo		0	1 bit	
	Out2 Echo		1	1 bit	
	Out3 Echo		2	1 bit	
	Reserved		3 - 31	29 bit	
32 bit	<b>Read Cycle Sequence Counter</b>	<b>UDINT</b>	0 - 31	<b>4 byte</b>	<b>12</b>
32 bit	<b>Decode Data Length</b>	<b>UDINT</b>	0 - 31	<b>4 byte</b>	<b>16</b>
	<b>Decode Data String</b>	<b>SINT[64]</b>	0 - 512	<b>64 byte</b>	<b>20</b>

## Large Input Assembly (Instance ID: 101)

Compared to the Small Input Assembly, the Large Input Assembly holds more Device Status information and Read result character strings of 128 bytes. When reading multiple symbols, the Read strings are output delimited by Separator Characters.

### Large Input Assembly Member Structure

Member Name	Size (Bytes)
<b>USER-DEFINED TAG ECHO</b>	4
<b>COMMAND ECHO</b>	4
<b>OUTPUT CONTROL ECHO</b>	4
<b>EXTERNAL INPUT STATUS</b>	4
<b>EXTERNAL OUTPUT STATUS</b>	4
<b>DEVICE STATUS</b>	4
<b>READ CYCLE SEQUENCE COUNTER</b>	4
<b>TRIGGER COUNT</b>	4
<b>DECODE/MATCH COUNT</b>	4
<b>MISMATCH COUNT</b>	4
<b>NOREAD COUNT</b>	4
<b>DECODE DATA LENGTH</b>	4
<b>DECODE DATA STRING</b>	128

### Member Description

Total Size: 176 Bytes

- **User-Defined Tag Echo**  
Returns the value set in the User-Defined Tag field of the Output Assembly (Legacy).
- **Command Echo**  
Returns the value set in the Command field of the Output Assembly (Legacy).
- **Output Control Echo**  
Returns the value set in the External Output field of the Output Assembly (Legacy).
- **External Input Status**  
Indicates the current state of the Parallel Input signal.

Bit	Signal Name
0	Trigger
1	New Master
2 - 31	Reserved

Numeric value in Bit

0 = OFF

1 = ON

- **External Output Status**  
Indicates the current state of the Parallel Output signal.

Bit	Signal Name
0	OUTPUT 1
1	OUTPUT 2
2	OUTPUT 3
3 - 31	Reserved

Numeric value in Bit

0 = OFF

1 = ON

- **Device Status**

Displays code reader status

Bit	State	Description
0	Reserved	-
1	New Master Requested	When the bit is ON, the next read result is registered as the Master Symbol.
2 - 7	Reserved	-
8	Scanning Disabled	When the bit is ON, the Read Cycle is Disabled.
9 - 15	Reserved	-
16	In Read Cycle	Bit is ON when In Read Cycle.
17	Actively Scanning	When the bit is ON, the Read Cycle is Disabled.

- **Read Cycle Sequence Counter**

Stores the current Read Cycle Count.

- **Trigger Counter**

Stores the current total number of triggers input.

- **Decode/Matchcode Counter**

Stores one of the following.

(1) Total number of Good Reads (When Matchcode: Disabled)

(2) Total number of matches to the Master Symbol (When Matchcode: Enabled)

- **Mismatch Counter**

Stores the total number of Mismatches (not matching Master Symbol).

- **No Read Counter**

Stores the total number of No Reads.

- **Decode Data Length**

Stores the number of characters in the Read string.

- **Decode Data String**

Stores the Read string. When additional information such as Print Quality Grading Standard is set, it is stored following the Read string.

Assembly Memory Allocation

	Member Name	Data Type	Bit Number	Data Length	Byte Offset
32 bit	<b>User Defined Tag Echo</b>	<b>DINT</b>		<b>4 Byte</b>	<b>0</b>
	UserTag_1		0	1 bit	
	UserTag_2		1	1 bit	
	UserTag_3		2	1 bit	
	UserTag_4		3	1 bit	
	UserTag_5		4	1 bit	
	UserTag_6		5	1 bit	
	UserTag_7		6	1 bit	
	UserTag_8		7	1 bit	
	UserTag_9		8	1 bit	
	UserTag_10		9	1 bit	
	UserTag_11		10	1 bit	
	UserTag_12		11	1 bit	
	UserTag_13		12	1 bit	
	UserTag_14		13	1 bit	
	UserTag_15		14	1 bit	
	UserTag_16		15	1 bit	
	UserTag_17		16	1 bit	
	UserTag_18		17	1 bit	
	UserTag_19		18	1 bit	
	UserTag_20		19	1 bit	
	UserTag_21		20	1 bit	
	UserTag_22		21	1 bit	
	UserTag_23		22	1 bit	
	UserTag_24		23	1 bit	
	UserTag_25		24	1 bit	
	UserTag_26		25	1 bit	
	UserTag_27		26	1 bit	
	UserTag_28		27	1 bit	
	UserTag_29		28	1 bit	
	UserTag_30		29	1 bit	
	UserTag_31		30	1 bit	
	UserTag_32		31	1 bit	
32 bit	<b>Command Echo</b>	<b>DINT</b>		<b>4 Byte</b>	<b>4</b>
	Trigger Echo		0	1 bit	
	New Master Echo		1	1 bit	
	Reserved		2 - 7	6 bit	
	Disable Scanning Echo		8	1 bit	
	Reserved		9 - 15	7 bit	
	Clear Read Cycle Report and Counters Echo		16	1 bit	
	Unlatch Outputs Echo		17	1 bit	
	Reserved		18 - 31	14 bit	

	Member Name	Data Type	Bit Number	Data Length	Byte Offset
32 bit	<b>Output Control Echo</b>	<b>DINT</b>		<b>4 Byte</b>	<b>8</b>
	Out1 Echo		0	1 bit	
	Out2 Echo		1	1 bit	
	Out3 Echo		2	1 bit	
	Reserved		3 - 31	29 bit	
32 bit	<b>External Input Status</b>	<b>DINT</b>		<b>4 Byte</b>	<b>12</b>
	Trigger		0	1 bit	
	New Master		1	1 bit	
	Reserved		2 - 31	30 bit	
32 bit	<b>External Output Status</b>	<b>DINT</b>		<b>4 Byte</b>	<b>16</b>
	Out1		0	1 bit	
	Out2		1	1 bit	
	Out3		2	1 bit	
	Reserved		3 - 31	29 bit	
32 bit	<b>Device Status</b>	<b>DINT</b>		<b>4 Byte</b>	<b>20</b>
	Reserved		0	1 bit	
	New Master Requested		1	1 bit	
	Reserved		2 - 7	6 bit	
	Scanning Disabled		8	1 bit	
	Reserved		9 - 15	7 bit	
	In Read Cycle		16	1 bit	
	Actively Scanning		17	1 bit	
	Reserved		18 - 31	14 bit	
	32 bit	<b>Read Cycle Sequence Counter</b>	<b>UDINT</b>	0 - 31	<b>4 byte</b>
32 bit	<b>Trigger Count</b>	<b>UDINT</b>	0 - 31	<b>4 byte</b>	<b>28</b>
32 bit	<b>Decode/Matchcode Count</b>	<b>UDINT</b>	0 - 31	<b>4 byte</b>	<b>32</b>
32 bit	<b>Mismatch Count</b>	<b>UDINT</b>	0 - 31	<b>4 byte</b>	<b>36</b>
32 bit	<b>No Read Count</b>	<b>UDINT</b>	0 - 31	<b>4 byte</b>	<b>40</b>
32 bit	<b>Decode Data Length</b>	<b>UDINT</b>	0 - 31	<b>4 byte</b>	<b>44</b>
	<b>Decode Data String</b>	<b>SINT[128]</b>	0 - 1024	<b>128 byte</b>	<b>48</b>

## MXL/SLC Input Assembly (Instance ID: 102)

Compared to the Large Input Assembly, the MXL/SLC Input Assembly holds the more detailed Device Status information and Read result character strings of up to 184 bytes. When reading multiple symbols, the Read strings are output delimited by Separator Characters.

### MXL/SLC Input Assembly Member Structure

Member Name	Size (Bytes)
<b>INFO BITS</b>	1
<b>RESERVED</b>	1
<b>RESERVED</b>	1
<b>RESERVED</b>	1
<b>DEVICE STATUS</b>	4
<b>FAULT CODE</b>	4
<b>COUNTERS</b>	24
<b>READ CYCLE REPORT</b>	8

Member Name	Size (Bytes)
DECODE CYCLE REPORT	16
DECODE DATA LENGTH	4
DECODE DATA STRING	184

Total Size: 248 Bytes

Member Description

• **INFO BITS**

Bit	State	Description
0	Run Mode	Is 1 when Read Cycle is enabled.
1	Connection Faulted	Always 0 while connected.
2 - 7	Reserved	-

• **Device Status**

Shows the current status of the code reader.

Bit	State
0	Run Mode
1	Trigger Acknowledged
2	Exposure Done
3	Decoding
4	Data Is Ready
5	Read Cycle Pass
6	Read Cycle Fail
7	General Fault
8	Matchcode Master Label Trained
9	Matchcode Enabled
10	Image Sensor Calibrating
11	Image Sensor Calibration Complete
12	Training
13	Training Complete
14	Optimizing
15	Optimization Complete
16	AutoImage Photometry Enabled
17	AutoImage Photometry Complete
18	Output 1 Status
19	Output 2 Status
20	Output 3 Status
21	Buffer Overflow
22 - 30	Reserved

• **Run Mode**

Shows Read Cycle Enabled/Disabled status.

0 = Read Cycle Disabled cannot accept Trigger. However, it can receive a command.

1 = Read Cycle Enabled State in which trigger can be accepted.

• **Trigger Acknowledged**



This bit becomes 1 when the Trigger bit from the Output Assembly is received. When the Trigger bit is OFF, Trigger Acknowledged also becomes 0.

- Exposure Done

During exposure, this bit is set to 0.

When Exposure is done, this bit becomes 1.

- Decoding

During image processing, this bit is set to 1.

When image processing is done, this bit becomes 0.

- Data is Ready

When the data from Read Cycle Report and Data Cycle Report is confirmed, this bit becomes 1.

When the next Read starts, this bit becomes 0.

- Read Cycle Pass

On Good Read, this bit becomes 1.

When the next Read starts, this bit becomes 0.

- Read Cycle Fail

If the read cycle fails for any reason (No Read, Mismatch, etc.) this bit becomes 1. This bit will be set to 0 at the start of a read cycle.

- General Fault

When a code reader Error occurs, this bit becomes 1. The user must resolve the problem by referring to the Fault Code field of the error code. After resolving the problem, the user must set "Reset General fault" in the Output Assembly Control to 0.

- Matchcode Master Label Trained

When active, the unit has accepted the data read on the last trigger and the new master label used in the matchcode function.

- Matchcode Enabled

When Matchcode is Enabled, this bit becomes 1.

- Image Sensor Calibrating

This bit is set to 1 while the device is executing the following calibrations.

Exposure

Gain

Focus (1.2 Megapixel and 5 Megapixel cameras)

This bit is set to 0 when V430-F calibration is complete.

- Image Sensor Calibration Complete

This bit is set to 1 when the V430-F completes executing the following calibrations.

Exposure

Gain

Focus (1.2 Megapixel and 5 Megapixel cameras)

- Training

This bit is set to 1 while Training is in progress.

This bit is set to 0 when Training is complete.

- Training Complete

This bit will be set to 0 during training and will be set to 1 when training is successful. If an error occurs, the bit will remain at 0.

- Optimizing

This bit is set to 1 while Optimization is in progress.

This bit is set to 0 when Optimization is complete.

- Optimization Complete

This bit is set to 1 when Optimization processing is complete. If an error occurs, it is output by Fault Code area.

- Autolmage Photometry Enabled

This bit is set to 1 when Auto Photometry is used.

This bit is set to 0 when Autolmage Photometry is complete.

- Autolmage Photometry Complete

This bit is set to 1 when Autolmage Photometry processing is complete. If an error occurs, it is output by Fault Code area.

- Output 1 Status

Indicates the current state of the Parallel OUTPUT 1 signal.

- Output 2 Status

Indicates the current state of the Parallel OUTPUT 2 signal.

- Output 3 Status

Indicates the current state of the Parallel OUTPUT 3 signal.

- Buffer Overflow

This bit is set to 1 when the read string length exceeds the size of the Decode Data area.

• **Fault Code**

Outputs Error information when a code reader error occurs.

It can be set from the Command field of the Output Assembly.

Bit	State
0	Command Error Detected
1	Communication Error
2	Reserved
3	Host Port Buffer Overflow
4 - 31	Reserved

- Command Error Detected

This bit is set to 1 when a Serial command fails to be executed.

- Communication Error

This bit is set to 1 when a data error condition is detected in Serial (RS-232C) communication.

- Host Port Buffer Overflow

This bit is set to 1 when a character string larger than the size set for the Decode Data area is received.

• **Counters**

Various counters of Read results after starting the device are output.

These counters can be set from the Command Field/Area of the Output Assembly.

Counters	Size (Bytes)
No Read Read Cycle Counter	4
Mismatch per Read Cycle Counter	4
No Read Counter	4
Trigger Counter	4
Matchcode Counter	4
Mismatch Counter	4

- No Read Read Cycle Counter

Outputs the total number of Read Cycle No Reads.

- Mismatch per Read Cycle Counter

Outputs the total number of Read Cycle Mismatches.

- No Read Counter

Outputs the total number of No Reads.

- Trigger Counter

Outputs the total number of executed Triggers.

- Matchcode Counter

Outputs one of the following.

(1) Total number of matches to the Master Symbol (When Matchcode: Enabled)

(2) Total number of Good Reads (When Matchcode: Enabled)

- Mismatch Counter

Outputs the total number of Mismatches (not matching Master Symbol).

• **Read Cycle Report**

Read Cycle Report	Size (Bytes)
Capture Time	2
Total Decode Time	2
Total Read Cycle Time	2
Reserved	2

- Capture Time

The time required for image capture. (milliseconds)

- Total Decode Time

The time required for decoding a symbol. (milliseconds)

- Total Read Cycle Time

The total time taken to read symbols. This encompasses the total time of image capture, decoding and overhead. (milliseconds)

• **Decode Cycle Report**

Outputs symbol information.

Symbol Information	Size (Bytes)
Decode Location Top	2
Decode Location Left	2
Decode Location Height	2
Decode Location Width	2
Code Type	4
Pixels per Element	4

- Decode Location Top

The upper left Y coordinate of the Symbol Detection Region. (pixels)

- Decode Location Left

The upper left X coordinate of the Symbol Detection Region. (pixels)

- Decode Location Height

The Y size of the Symbol Detection Region. (pixels)

- Decode Location Width

The X size of the Symbol Detection Region. (pixels)

- Code Type

A bit indicating the Symbol Type of the decoded symbol is output.

Bit	State
0	Aztec Code

Bit	State
1	Micro QR Code
2	Postal Code
3	Code 39
4	Codabar
5	Interleaved 2 of 5
6	UPC/EAN
7	Code 128/EAN 128
8	Code 93
9	PDF417
10	Pharma Code
11	DataMatrix
12	QR Code
13	BC412
14	RSS-14
15	RSS-14 LTD
16	RSS-14 EXP
17	Micro PDF
18	Composite
19	Dot Code
20 - 31	Reserved

- Pixels Per Element

Outputs the number of pixels displayed in 1 cell size (or narrow element) on the image.

- **Decode Data Length**

Stores the number of characters in the Read string.

- **Decode Data String**

Stores the Read string. When additional information such as Print Quality Grading Standard is set, it is stored following the Read string.

**Assembly Memory Allocation**

	Member Name	Data Type	Bit Number	Data Length	Byte Offset
32 bit	<b>InfoBits</b>	<b>SINT</b>		<b>1 Byte</b>	<b>0</b>
	Bit Run Mode		0	1 bit	
	Bit Connection Faulted		1	1 bit	
	Reserved		2	1 bit	
	Reserved		3 - 7	5 bit	
	<b>Reserved</b>	<b>SINT</b>		<b>1 Byte</b>	<b>1</b>
	<b>Reserved</b>	<b>SINT</b>		<b>1 Byte</b>	<b>2</b>
	<b>Reserved</b>	-		<b>1 byte</b>	<b>3</b>

	Member Name	Data Type	Bit Number	Data Length	Byte Offset
32 bit	<b>DeviceStatus</b>	<b>DINT</b>		<b>4 Byte</b>	<b>4</b>
	Run Mode		0	1 bit	
	Trigger Acknowledged		1	1 bit	
	Exposure Done		2	1 bit	
	Decoding		3	1 bit	
	Data is Ready		4	1 bit	
	Read Cycle Pass		5	1 bit	
	Read Cycle Fail		6	1 bit	
	General Fault		7	1 bit	
	Matchcode Master Label Changed		8	1 bit	
	Matchcode Enabled		9	1 bit	
	Image Sensor Calibrating		10	1 bit	
	Image Sensor Calibration Complete		11	1 bit	
	Training		12	1 bit	
	Training Complete		13	1 bit	
	Optimizing		14	1 bit	
	Optimizing Complete		15	1 bit	
	Auto Image Photometry Enabled		16	1 bit	
	Auto Image Photometry Complete		17	1 bit	
	Output 1 Status		18	1 bit	
Output 2 Status		19	1 bit		
Output 3 Status		20	1 bit		
BufferOverflow		21	1 bit		
Reserved		22 - 31	10 bit		
32 bit	<b>Fault Code</b>	<b>DINT</b>		<b>4 Byte</b>	<b>8</b>
	Command Error Detected		0	1 bit	
	Communication Error		1	1 bit	
	Reserved		2	1 bit	
	Host Port Buffer Overflow		3	1 bit	
	Reserved		4 - 31	28 bit	
	<b>Counters</b>	<b>UDINT[6]</b>		<b>24 byte</b>	<b>12</b>
32 bit	No Read Read Cycle Counter		0 - 31	4 byte	
32 bit	Mismatch per Read Cycle Counter		0 - 31	4 byte	
32 bit	No Read Counter		0 - 31	4 byte	
32 bit	Trigger Counter		0 - 31	4 byte	
32 bit	Matchcode Counter		0 - 31	4 byte	
32 bit	Mismatch Counter		0 - 31	4 byte	
	<b>Read Cycle Report</b>	<b>UINT[4]</b>		<b>8 byte</b>	<b>36</b>
32 bit	Capture Time		0 - 15	2 byte	
	Total Decode Time		0 - 15	2 byte	
32 bit	Total Read Cycle Time		0 - 15	2 byte	
	Reserved		0 - 15	2 byte	
	<b>Decode Cycle Report</b>	<b>INT[4]</b>		<b>8 byte</b>	<b>44</b>

	Member Name	Data Type	Bit Number	Data Length	Byte Offset
32 bit	Decode Location Top		0 - 15	2 byte	
	Decode Location Left		0 - 15	2 byte	
32 bit	Decode Location Height		0 - 15	2 byte	
	Decode Location Width		0 - 15	2 byte	
32 bit	<b>Code Type</b>	<b>DINT</b>		<b>4 Byte</b>	<b>52</b>
	Aztec Code		0	1 bit	
	Micro QR Code		1	1 bit	
	Postal Code		2	1 bit	
	Code 39		3	1 bit	
	Codabar		4	1 bit	
	Interleaved 2 of 5		5	1 bit	
	UPC EAN		6	1 bit	
	Code 128 EAN 128		7	1 bit	
	Code 93		8	1 bit	
	PDF417		9	1 bit	
	Pharma Code		10	1 bit	
	DataMatrix		11	1 bit	
	QR Code		12	1 bit	
	BC412		13	1 bit	
	RSS14		14	1 bit	
	RSS14 LTD		15	1 bit	
	RSS14 EXP		16	1 bit	
	Micro PDF		17	1 bit	
	Composite		18	1 bit	
	Dot Code		19	1 bit	
	Reserved		20 - 31	12 bit	
32 bit	<b>Pixels per Element</b>	<b>REAL</b>	0 - 31	<b>4 byte</b>	<b>56</b>
32 bit	<b>Decode Data Length</b>	<b>DINT</b>	0 - 31	<b>4 byte</b>	<b>60</b>
	<b>Decode Data String</b>	<b>SINT[184]</b>	0 - 1472	<b>184 byte</b>	<b>64</b>

## 1 Decode Input Assembly (Instance ID: 103)

1 Decode Input Assembly is designed to hold a 436 byte Read result string. When reading multiple symbols, the Read strings are output delimited by Separator Characters.

### 1 Decode Input Assembly Member Structure

Member Name	Size (Bytes)
<b>INFO BITS</b>	1
<b>RESERVED</b>	1
<b>RESERVED</b>	1
<b>RESERVED</b>	1
<b>DEVICE STATUS</b>	4
<b>FAULT CODE</b>	4
<b>COUNTERS</b>	24
<b>READ CYCLE REPORT</b>	8
<b>DECODE CYCLE REPORT</b>	8
<b>CODE TYPE</b>	4
<b>PIXELS PER ELEMENT</b>	4
<b>DECODE DATA LENGTH</b>	4
<b>DECODE DATA STRING</b>	436

Total Size: 500 Bytes

Member Description

- **INFO BITS**  
*MXL/SLC Input Assembly (Instance ID: 102) on page A - 8 - Same structure as*
- **Device Status**  
*MXL/SLC Input Assembly (Instance ID: 102) on page A - 8 - Same structure as*
- **Error Code**  
*MXL/SLC Input Assembly (Instance ID: 102) on page A - 8 - Same structure as*
- **Counters**  
*MXL/SLC Input Assembly (Instance ID: 102) on page A - 8 - Same structure as*
- **Read Cycle Report**  
*MXL/SLC Input Assembly (Instance ID: 102) on page A - 8 - Same structure as*
- **Decode Cycle Report**  
*MXL/SLC Input Assembly (Instance ID: 102) on page A - 8 - Same structure as*
- **Decode Data Length**  
 Stores the number of characters in the Read string.
- **Decode Data String**  
 Stores the Read string. When additional information such as Print Quality Grading Standard is set, it is stored following the Read string.

**Assembly Memory Allocation**

	Member Name	Data Type	Bit Number	Data Length	Byte Offset
32 bit	<b>InfoBits</b>	<b>SINT</b>		<b>1 Byte</b>	<b>0</b>
	Bit Run Mode		0	1 bit	
	Bit Connection Faulted		1	1 bit	
	Reserved		2	1 bit	
	Reserved		3 - 7	5 bit	
	<b>Reserved</b>	<b>SINT</b>		<b>1 Byte</b>	<b>1</b>
	<b>Reserved</b>	<b>SINT</b>		<b>1 Byte</b>	<b>2</b>
	<b>Reserved</b>	-		<b>1 byte</b>	<b>3</b>

	Member Name	Data Type	Bit Number	Data Length	Byte Offset
32 bit	<b>DeviceStatus</b>	<b>DINT</b>		<b>4 Byte</b>	<b>4</b>
	Run Mode		0	1 bit	
	Trigger Acknowledged		1	1 bit	
	Exposure Done		2	1 bit	
	Decoding		3	1 bit	
	Data is Ready		4	1 bit	
	Read Cycle Pass		5	1 bit	
	Read Cycle Fail		6	1 bit	
	General Fault		7	1 bit	
	Matchcode Master Label Changed		8	1 bit	
	Matchcode Enabled		9	1 bit	
	Image Sensor Calibrating		10	1 bit	
	Image Sensor Calibration Complete		11	1 bit	
	Training		12	1 bit	
	Training Complete		13	1 bit	
	Optimizing		14	1 bit	
	Optimizing Complete		15	1 bit	
	Auto Image Photometry Enabled		16	1 bit	
	Auto Image Photometry Complete		17	1 bit	
	Output 1 Status		18	1 bit	
Output 2 Status		19	1 bit		
Output 3 Status		20	1 bit		
BufferOverflow		21	1 bit		
Reserved		22 - 31	10 bit		
32 bit	<b>Fault Code</b>	<b>DINT</b>		<b>4 Byte</b>	<b>8</b>
	Command Error Detected		0	1 bit	
	Communication Error		1	1 bit	
	Reserved		2	1 bit	
	Host Port Buffer Overflow		3	1 bit	
	Reserved		4 - 31	28 bit	
	<b>Counters</b>	<b>UDINT[6]</b>		<b>24 byte</b>	<b>12</b>
32 bit	No Read Read Cycle Counter		0 - 31	4 byte	
32 bit	Mismatch per Read Cycle Counter		0 - 31	4 byte	
32 bit	No Read Counter		0 - 31	4 byte	
32 bit	Trigger Counter		0 - 31	4 byte	
32 bit	Matchcode Counter		0 - 31	4 byte	
32 bit	Mismatch Counter		0 - 31	4 byte	
	<b>Read Cycle Report</b>	<b>UINT[4]</b>		<b>8 byte</b>	<b>36</b>
32 bit	Capture Time		0 - 15	2 byte	
	Total Decode Time		0 - 15	2 byte	
32 bit	Total Read Cycle Time		0 - 15	2 byte	
	Reserved		0 - 15	2 byte	
	<b>Decode Cycle Report</b>	<b>INT[4]</b>		<b>8 byte</b>	<b>44</b>



	Member Name	Data Type	Bit Number	Data Length	Byte Offset
32 bit	Decode Location Top		0 - 15	2 byte	
	Decode Location Left		0 - 15	2 byte	
32 bit	Decode Location Height		0 - 15	2 byte	
	Decode Location Width		0 - 15	2 byte	
32 bit	<b>Code Type</b>	<b>DINT</b>		<b>4 Byte</b>	<b>52</b>
	Aztec Code		0	1 bit	
	Micro QR Code		1	1 bit	
	Postal Code		2	1 bit	
	Code 39		3	1 bit	
	Codabar		4	1 bit	
	Interleaved 2 of 5		5	1 bit	
	UPC EAN		6	1 bit	
	Code 128 EAN 128		7	1 bit	
	Code 93		8	1 bit	
	PDF417		9	1 bit	
	Pharma Code		10	1 bit	
	DataMatrix		11	1 bit	
	QR Code		12	1 bit	
	BC412		13	1 bit	
	RSS14		14	1 bit	
	RSS14 LTD		15	1 bit	
	RSS14 EXP		16	1 bit	
	Micro PDF		17	1 bit	
	Composite		18	1 bit	
Dot Code		19	1 bit		
	Reserved		20 - 31	12 bit	
32 bit	<b>Pixels per Element</b>	<b>REAL</b>	0 - 31	<b>4 byte</b>	<b>56</b>
32 bit	<b>Decode Data Length</b>	<b>DINT</b>	0 - 31	<b>4 byte</b>	<b>60</b>
	<b>Decode Data String</b>	<b>SINT[436]</b>	0 - 3487	<b>436 byte</b>	<b>64</b>

## 4 Decode Input Assembly (Instance ID: 104)

4 Decode Input Assembly is designed to hold the Read result information of 4 symbols. The first Read result is stored in a 160 byte field. The remaining Read results are stored in a 72 byte field. Use this when you want to execute a multiple symbol Read for up to 4 symbols and query symbol information such as symbol position coordinates for each symbol.

### 4 Decode Input Assembly Member Structure

Member Name	Size (Bytes)
INFO BITS	1
RESERVED	1
RESERVED	1
RESERVED	1
DEVICE STATUS	4
FAULT CODE	4
COUNTERS	24
READ CYCLE REPORT	8

Member Name	Size (Bytes)
DECODE 1 CYCLE REPORT	16
DECODE 1 LENGTH	4
DECODE 1 DATA	160
DECODE 2 CYCLE REPORT	16
DECODE 2 LENGTH	4
DECODE 2 DATA	72
DECODE 3 CYCLE REPORT	16
DECODE 3 LENGTH	4
DECODE 3 DATA	72
DECODE 4 CYCLE REPORT	16
DECODE 4 LENGTH	4
DECODE 4 DATA	72

Total Size: 500 Bytes

#### Member Description

- **INFO BITS**

*MXL/SLC Input Assembly (Instance ID: 102)* on page A - 8 - Same structure as

- **Device Status**

*MXL/SLC Input Assembly (Instance ID: 102)* on page A - 8 - Same structure as

- **Error Code**

*MXL/SLC Input Assembly (Instance ID: 102)* on page A - 8 - Same structure as

- **Counters**

*MXL/SLC Input Assembly (Instance ID: 102)* on page A - 8 - Same structure as

- **Read Cycle Report**

*MXL/SLC Input Assembly (Instance ID: 102)* on page A - 8 - Same structure as

- **Decode 1 Cycle Report**

The information for the 1st symbol. *MXL/SLC Input Assembly (Instance ID: 102)* on page A - 8 - Same structure as

- **Decode 1 Length**

Stores the number of characters that comprise the 1st symbol.

- **Decode 1 Data**

Stores the Read string of the 1st symbol. When additional information such as Print Quality Grading Standard is set, it is stored following the Read string.

- **Decode 2 Cycle Report**

The information for the 2nd symbol. *MXL/SLC Input Assembly (Instance ID: 102)* on page A - 8 - Same structure as

- **Decode 2 Length**

Stores the number of characters that comprise the 2nd symbol.

- **Decode 2 Data**

Stores the Read string of the 2nd symbol. When additional information such as Print Quality Grading Standard is set, it is stored following the Read string.

- **Decode 3 Cycle Report**

The information for the 3rd symbol. *MXL/SLC Input Assembly (Instance ID: 102)* on page A - 8 - Same structure as

- **Decode 3 Length**

Stores the number of characters that comprise the 3rd symbol.

- **Decode 3 Data**  
Stores the Read string of the 3rd symbol. When additional information such as Print Quality Grading Standard is set, it is stored following the Read string.
- **Decode 4 Cycle Report**  
The information for the 4th symbol. *MXL/SLC Input Assembly (Instance ID: 102)* on page A - 8 - Same structure as
- **Decode 4 Length**  
Stores the number of characters that comprise the 4th symbol.
- **Decode 4 Data**  
Stores the Read string of the 4th symbol. When additional information such as Print Quality Grading Standard is set, it is stored following the Read string.

**Assembly Memory Allocation**

	Member Name	Data Type	Bit Number	Data Length	Byte Offset
32 bit	<b>InfoBits</b>	<b>SINT</b>		<b>1 Byte</b>	<b>0</b>
	Bit Run Mode		0	1 bit	
	Bit Connection Faulted		1	1 bit	
	Reserved		2	1 bit	
	Reserved		3 - 7	5 bit	
	<b>Reserved</b>	<b>SINT</b>		<b>1 Byte</b>	<b>1</b>
	<b>Reserved</b>	<b>SINT</b>		<b>1 Byte</b>	<b>2</b>
	<b>Reserved</b>	-		<b>1 byte</b>	<b>3</b>

	Member Name	Data Type	Bit Number	Data Length	Byte Offset
32 bit	<b>DeviceStatus</b>	<b>DINT</b>		<b>4 Byte</b>	<b>4</b>
	Run Mode		0	1 bit	
	Trigger Acknowledged		1	1 bit	
	Exposure Done		2	1 bit	
	Decoding		3	1 bit	
	Data is Ready		4	1 bit	
	Read Cycle Pass		5	1 bit	
	Read Cycle Fail		6	1 bit	
	General Fault		7	1 bit	
	Matchcode Master Label Changed		8	1 bit	
	Matchcode Enabled		9	1 bit	
	Image Sensor Calibrating		10	1 bit	
	Image Sensor Calibration Complete		11	1 bit	
	Training		12	1 bit	
	Training Complete		13	1 bit	
	Optimizing		14	1 bit	
	Optimizing Complete		15	1 bit	
	Auto Image Photometry Enabled		16	1 bit	
	Auto Image Photometry Complete		17	1 bit	
	Output 1 Status		18	1 bit	
	Output 2 Status		19	1 bit	
	Output 3 Status		20	1 bit	
	BufferOverflow		21	1 bit	
	Reserved		22 - 31	10 bit	
32 bit	<b>Fault Code</b>	<b>DINT</b>		<b>4 Byte</b>	<b>8</b>
	Command Error Detected		0	1 bit	
	Communication Error		1	1 bit	
	Reserved		2	1 bit	
	Host Port Buffer Overflow		3	1 bit	
	Reserved		4 - 31	28 bit	
	<b>Counters</b>	<b>UDINT[6]</b>		<b>24 byte</b>	<b>12</b>
32 bit	No Read Read Cycle Counter		0 - 31	4 byte	
32 bit	Mismatch per Read Cycle Counter		0 - 31	4 byte	
32 bit	No Read Counter		0 - 31	4 byte	
32 bit	Trigger Counter		0 - 31	4 byte	
32 bit	Matchcode Counter		0 - 31	4 byte	
32 bit	Mismatch Counter		0 - 31	4 byte	
	<b>Read Cycle Report</b>	<b>UINT[4]</b>		<b>8 byte</b>	<b>36</b>
32 bit	Capture Time		0 - 15	2 byte	
	Total Decode Time		0 - 15	2 byte	
32 bit	Total Read Cycle Time		0 - 15	2 byte	
	Reserved		0 - 15	2 byte	
	<b>Decode 1 Cycle Report</b>			<b>8 byte</b>	<b>44</b>

	Member Name	Data Type	Bit Number	Data Length	Byte Offset
32 bit	Decode Location Top		0 - 15	2 byte	
	Decode Location Left		0 - 15	2 byte	
32 bit	Decode Location Height		0 - 15	2 byte	
	Decode Location Width		0 - 15	2 byte	
32 bit	<b>Code Type</b>	<b>DINT</b>		<b>4 Byte</b>	<b>52</b>
	Aztec Code		0	1 bit	
	Micro QR Code		1	1 bit	
	Postal Code		2	1 bit	
	Code 39		3	1 bit	
	Codabar		4	1 bit	
	Interleaved 2 of 5		5	1 bit	
	UPC EAN		6	1 bit	
	Code 128 EAN 128		7	1 bit	
	Code 93		8	1 bit	
	PDF417		9	1 bit	
	Pharma Code		10	1 bit	
	DataMatrix		11	1 bit	
	QR Code		12	1 bit	
	BC412		13	1 bit	
	RSS14		14	1 bit	
	RSS14 LTD		15	1 bit	
	RSS14 EXP		16	1 bit	
	Micro PDF		17	1 bit	
	Composite		18	1 bit	
Dot Code		19	1 bit		
	Reserved		20 - 31	12 bit	
32 bit	<b>Pixels per Element</b>	<b>REAL</b>	0 - 31	<b>4 byte</b>	<b>56</b>
32 bit	<b>Decode 1 Length</b>	<b>DINT</b>	0 - 31	<b>4 byte</b>	<b>60</b>
	<b>Decode 1 Data</b>	<b>SINT[160]</b>	0 - 1280	<b>160 byte</b>	<b>64</b>
	<b>Decode 2 Cycle Report</b>	<b>INT[4]</b>		<b>8 byte</b>	<b>224</b>
32 bit	Decode Location Top		0 - 15	2 byte	
	Decode Location Left		0 - 15	2 byte	
32 bit	Decode Location Height		0 - 15	2 byte	
	Decode Location Width		0 - 15	2 byte	

	Member Name	Data Type	Bit Number	Data Length	Byte Offset
32 bit	<b>Code Type</b>	<b>DINT</b>		<b>4 Byte</b>	<b>232</b>
	Aztec Code		0	1 bit	
	Micro QR Code		1	1 bit	
	Postal Code		2	1 bit	
	Code 39		3	1 bit	
	Codabar		4	1 bit	
	Interleaved 2 of 5		5	1 bit	
	UPC EAN		6	1 bit	
	Code 128 EAN 128		7	1 bit	
	Code 93		8	1 bit	
	PDF417		9	1 bit	
	Pharma Code		10	1 bit	
	DataMatrix		11	1 bit	
	QR Code		12	1 bit	
	BC412		13	1 bit	
	RSS14		14	1 bit	
	RSS14 LTD		15	1 bit	
	RSS14 EXP		16	1 bit	
	Micro PDF		17	1 bit	
	Composite		18	1 bit	
	Dot Code		19	1 bit	
	Reserved		20 - 31	12 bit	
32 bit	<b>Pixels per Element</b>	<b>REAL</b>	0 - 31	<b>4 byte</b>	<b>236</b>
32 bit	<b>Decode 2 Length</b>	<b>DINT</b>	0 - 31	<b>4 byte</b>	<b>240</b>
	<b>Decode 2 Data</b>	<b>SINT[184]</b>	0 - 575	<b>72 byte</b>	<b>244</b>
	<b>Decode 3 Cycle Report</b>	<b>INT[4]</b>		<b>8 byte</b>	<b>316</b>
32 bit	Decode Location Top		0 - 15	2 byte	
	Decode Location Left		0 - 15	2 byte	
32 bit	Decode Location Height		0 - 15	2 byte	
	Decode Location Width		0 - 15	2 byte	



	<b>Member Name</b>	<b>Data Type</b>	<b>Bit Number</b>	<b>Data Length</b>	<b>Byte Offset</b>
32 bit	<b>Code Type</b>	<b>DINT</b>		<b>4 Byte</b>	<b>324</b>
	Aztec Code		0	1 bit	
	Micro QR Code		1	1 bit	
	Postal Code		2	1 bit	
	Code 39		3	1 bit	
	Codabar		4	1 bit	
	Interleaved 2 of 5		5	1 bit	
	UPC EAN		6	1 bit	
	Code 128 EAN 128		7	1 bit	
	Code 93		8	1 bit	
	PDF417		9	1 bit	
	Pharma Code		10	1 bit	
	DataMatrix		11	1 bit	
	QR Code		12	1 bit	
	BC412		13	1 bit	
	RSS14		14	1 bit	
	RSS14 LTD		15	1 bit	
	RSS14 EXP		16	1 bit	
	Micro PDF		17	1 bit	
	Composite		18	1 bit	
	Dot Code		19	1 bit	
	Reserved		20 - 31	12 bit	
32 bit	<b>Pixels per Element</b>	<b>REAL</b>	0 - 31	<b>4 byte</b>	<b>328</b>
32 bit	<b>Decode 3 Length</b>	<b>DINT</b>	0 - 31	<b>4 byte</b>	<b>332</b>
	<b>Decode 3 Data</b>	<b>SINT[72]</b>	0 - 575	<b>72 byte</b>	<b>336</b>
	<b>Decode 4 Cycle Report</b>	<b>INT[4]</b>		<b>8 byte</b>	<b>408</b>
32 bit	Decode Location Top		0 - 15	2 byte	
	Decode Location Left		0 - 15	2 byte	
32 bit	Decode Location Height		0 - 15	2 byte	
	Decode Location Width		0 - 15	2 byte	

	Member Name	Data Type	Bit Number	Data Length	Byte Offset
32 bit	<b>Code Type</b>	<b>DINT</b>		<b>4 Byte</b>	<b>416</b>
	Aztec Code		0	1 bit	
	Micro QR Code		1	1 bit	
	Postal Code		2	1 bit	
	Code 39		3	1 bit	
	Codabar		4	1 bit	
	Interleaved 2 of 5		5	1 bit	
	UPC EAN		6	1 bit	
	Code 128 EAN 128		7	1 bit	
	Code 93		8	1 bit	
	PDF417		9	1 bit	
	Pharma Code		10	1 bit	
	DataMatrix		11	1 bit	
	QR Code		12	1 bit	
	BC412		13	1 bit	
	RSS14		14	1 bit	
	RSS14 LTD		15	1 bit	
	RSS14 EXP		16	1 bit	
	Micro PDF		17	1 bit	
	Composite		18	1 bit	
	Dot Code		19	1 bit	
	Reserved		20 - 31	12 bit	
32 bit	<b>Pixels per Element</b>	<b>REAL</b>	0 - 31	<b>4 byte</b>	<b>328</b>
32 bit	<b>Decode 4 Length</b>	<b>DINT</b>	0 - 31	<b>4 byte</b>	<b>424</b>
	<b>Decode 4 Data</b>	<b>SINT[72]</b>	0 - 575	<b>72 byte</b>	<b>428</b>

## N Decode Input Assembly (Instance ID: 105)

N Decode Input Assembly supports any number of multiple symbol readings. Use this when you want to execute arbitrary number of multiple symbol readings and query symbol information such as symbol position coordinates for each symbol. Since the data structure of the Read result is a variable length up to a maximum of 456 bytes, the user needs to access the data such as the read character string by referencing the data offset value.

### N Decode Input Assembly Member Structure

Member Name	Size (Bytes)
INFO BITS	1
RESERVED	1
RESERVED	1
RESERVED	1
DEVICE STATUS	4
FAULT CODE	4
COUNTERS	24
READ CYCLE REPORT STATIC MEMBERS	8
RAW INPUT DATA	456

Total Size: 500 Bytes



Member Description

- **INFO BITS**

*MXL/SLC Input Assembly (Instance ID: 102) on page A - 8 - Same structure*

- **Device Status**

*MXL/SLC Input Assembly (Instance ID: 102) on page A - 8 - Same structure*

- **Error Code**

*MXL/SLC Input Assembly (Instance ID: 102) on page A - 8 - Same structure*

- **Counters**

*MXL/SLC Input Assembly (Instance ID: 102) on page A - 8 - Same structure*

- **Read Cycle Report**

Read Cycle Report	Size (Bytes)
Capture Time	2
Total Decode Time	2
Total Read Cycle Time	2
Number of Decodes in Read Cycle	1
Number of Decode Reports	1

- **Capture Time**

The time required for image capture. (milliseconds)

- **Total Decode Time**

The time required for decoding a symbol. (milliseconds)

- **Total Read Cycle Time**

The total time taken to read symbols. This encompasses the total time of image capture, decoding and overhead. (milliseconds)

- **Number of Decodes in Read Cycle**

The total number of detected symbols in the Read Cycle.

- **Number of Decode Reports**

The total number of Decode information data related to detected symbols.

Equal to the total number of detected symbols in the Read Cycle.

- **Raw Input Data**

Variable length Read data is stored.

Read Data Structure	Size (Bytes)	Offset
Offset of Report 1	4	
Offset of Report 2	4	
...	...	
Offset of Report N	4	
Decode Cycle Report 1	16	Offset 1
Decode Length 1	4	
Decode Data 1	Variable length	
Decode Cycle Report 2	16	Offset 2
Decode Length 2	4	
Decode Data 2	Variable length	
...	...	

Read Data Structure	Size (Bytes)	Offset
Decode Cycle Report N*1	16	Offset N
Decode Length N*1	4	
Decode Data N*1	Variable length	

\*1. N is the value output for Number of Decodes in Read Cycle.

- Offset of Report (n)

This is the offset value from the Start Address for Raw Input Data to the address where the nth Read result is stored.

- Decode Cycle Report (n)

Information of the nth Symbol. *MXL/SLC Input Assembly (Instance ID: 102)* on page A - 8 - Same structure

- Decode Length (n)

Stores the number of characters that comprise the nth symbol.

- Decode 4 Data (n)

Stores the Read string of the nth symbol.

#### Assembly Memory Allocation

	Member Name	Data Type	Bit Number	Data Length	Byte Offset	
32 bit	<b>InfoBits</b>	<b>SINT</b>		<b>1 Byte</b>	<b>0</b>	
	Bit Run Mode		0	1 bit		
	Bit Connection Faulted		1	1 bit		
	Reserved		2	1 bit		
	Reserved		3 - 7	5 bit		
	<b>Reserved</b>	<b>SINT</b>			<b>1 Byte</b>	<b>1</b>
	<b>Reserved</b>	<b>SINT</b>			<b>1 Byte</b>	<b>2</b>
	<b>Reserved</b>	-			<b>1 byte</b>	<b>3</b>

	Member Name	Data Type	Bit Number	Data Length	Byte Offset
32 bit	<b>DeviceStatus</b>	<b>DINT</b>		<b>4 Byte</b>	<b>4</b>
	Run Mode		0	1 bit	
	Trigger Acknowledged		1	1 bit	
	Exposure Done		2	1 bit	
	Decoding		3	1 bit	
	Data is Ready		4	1 bit	
	Read Cycle Pass		5	1 bit	
	Read Cycle Fail		6	1 bit	
	General Fault		7	1 bit	
	Matchcode Master Label Changed		8	1 bit	
	Matchcode Enabled		9	1 bit	
	Image Sensor Calibrating		10	1 bit	
	Image Sensor Calibration Complete		11	1 bit	
	Training		12	1 bit	
	Training Complete		13	1 bit	
	Optimizing		14	1 bit	
	Optimizing Complete		15	1 bit	
	Auto Image Photometry Enabled		16	1 bit	
	Auto Image Photometry Complete		17	1 bit	
	Output 1 Status		18	1 bit	
Output 2 Status		19	1 bit		
Output 3 Status		20	1 bit		
BufferOverflow		21	1 bit		
Reserved		22 - 31	10 bit		
32 bit	<b>Fault Code</b>	<b>DINT</b>		<b>4 Byte</b>	<b>8</b>
	Command Error Detected		0	1 bit	
	Communication Error		1	1 bit	
	Reserved		2	1 bit	
	Host Port Buffer Overflow		3	1 bit	
	Reserved		4 - 31	28 bit	
	<b>Counters</b>	<b>UDINT[6]</b>		<b>24 byte</b>	<b>12</b>
32 bit	No Read Read Cycle Counter		0 - 31	4 byte	
32 bit	Mismatch per Read Cycle Counter		0 - 31	4 byte	
32 bit	No Read Counter		0 - 31	4 byte	
32 bit	Trigger Counter		0 - 31	4 byte	
32 bit	Matchcode Counter		0 - 31	4 byte	
32 bit	Mismatch Counter		0 - 31	4 byte	
	<b>Read Cycle Report</b>	<b>INT[4]</b>		<b>8 byte</b>	<b>36</b>
32 bit	Capture Time		0 - 15	2 byte	
	Total Decode Time		0 - 15	2 byte	

	Member Name	Data Type	Bit Number	Data Length	Byte Offset
32 bit	Total Read Cycle Time		0 - 15	2 byte	
	Number of Decodes in Read Cycle		0 - 7	1 byte	
	Number of Decode Reports		0 - 7	1 byte	
	<b>RAW Input Data</b>			<b>16 byte</b>	<b>44 byte</b>

## Output Assembly (Instance ID: 197)

The Output Assembly can send several commands to the code reader. This assembly is used with MXL/SLC Input Assembly (ID: 102), 1 Decode Input Assembly (ID: 103), 4 Decode Input Assembly (ID: 104), N Decode Input Assembly (ID: 105).

### Output Assembly Member Structure

Member Name	Size (Bytes)
<b>COMMANDS</b>	4

Total Size: 4 Bytes

### Member Description

#### • Commands

An explanation of commands that can be sent to the code reader.

Bit	Command
0	Run Mode
1	Trigger
2	Enable Matchcode
3	Reset General Fault
4	Clear No Read Read Cycle Counter
5	Clear Mismatch Read Cycle Counter
6	Clear No Read Counter
7	Clear Trigger Counter
8	Clear Matchcode Counter
9	Clear Mismatch Counter
10	Output 1
11	Output 2
12	Output 3
13 - 31	Reserved

#### • Run Mode

Enables / Disables Read Cycle. Immediately after the code reader is started, Read Cycle will be enabled regardless of this command.

0 = Read Cycle Disabled. No trigger can be accepted. However, other commands can be executed. 1 = Enables Read Cycle.

#### • Trigger

Executes Read. The code reader recognizes this bit changing from 0 to 1 as the rising edge of the trigger and its change from 1 to 0 as the falling edge of the trigger.

#### • Enable Matchcode

Enable / Disable the Matchcode function. Immediately after the code reader is started, the previously saved setting is in effect regardless of this command.

0 = Disable Matchcode function.

1 = Enable Matchcode function.

- Reset General Fault

If an error occurs on the code reader, after resolving the error, this bit is used to reset the Fault Code Area of the Input Assembly.

- Clear No Read Read Cycle Counter

Resets the No Reads per Read Cycle counter to 0.

- Clear Mismatch Read Cycle Counter

Resets the Mismatch per Read Cycle counter to 0.

- Clear No Read Counter

Resets the No Reads counter to 0.

- Clear Trigger Counter

Resets the Trigger counter to 0.

- Clear Matchcode Counter

Resets the Matchcode counter to 0.

- Clear Mismatch Counter

Resets the Mismatch counter to 0.

- Output 1

Turns Parallel OUTPUT 1 Signal ON.

- Output 2

Turns Parallel OUTPUT 2 Signal ON.

- Output 3

Turns Parallel OUTPUT 3 Signal ON.

**Assembly Memory Allocation**

	Member Name	Data Type	Bit Number	Data Length	Byte Offset
32 bit	<b>Commands</b>	<b>DINT</b>		<b>4 Byte</b>	<b>0</b>
	Run Mode		0	1 bit	
	Trigger		1	1 bit	
	Enable Matchcode		2	1 bit	
	Reset General Fault		3	1 bit	
	Clear No Read Read Cycle Count		4	1 bit	
	Clear Mismatch Read Cycle Count		5	1 bit	
	Clear No Read Count		6	1 bit	
	Clear Trigger Count		7	1 bit	
	Clear Matchcode Count		8	1 bit	
	Clear Mismatch Count		9	1 bit	
	Output 1		10	1 bit	
	Output 2		11	1 bit	
	Output 3		12	1 bit	
	Reserved		12 - 31	19 bit	

**Output Assembly (Legacy) (Instance ID: 198)**

The Output Assembly (Legacy) can be used to send multiple commands and Command Echo for fixed data to the code reader. This assembly is used with the Small Input Assembly (ID: 100), Large Input Assembly (ID: 101).

**Output Assembly (Legacy) Member Structure**

Member Name	Size (Bytes)
<b>USER-DEFINED TAGS</b>	4
<b>COMMANDS</b>	4
<b>EXTERNAL OUTPUT</b>	4

Total Size: 12 Bytes

Member Description

• **User-Defined Tags**

Data set for this Member is echoed back to the USER-DEFINED TAG ECHO area of the Small Input Assembly or the Large Input Assembly. It is used when you want to uniquely identify multiple code readers.

• **Commands**

An explanation of commands that can be sent to the code reader.

Bit	Command
0	Trigger
1	New Master
2 - 7	Reserved
8	Disable Scanning
9 - 15	Reserved
16	Clear Read Cycle Report and Counters
17	Unlatch Outputs
18 - 31	Reserved

• Trigger

Executes Read. The code reader recognizes this bit changing from 0 to 1 as the rising edge of the trigger and its change from 1 to 0 as the falling edge of the trigger.

• New Master

When this bit is ON, the next Read result is registered as the Master Symbol.

• Disable Scanning

Enables / Disables Read Cycle.

0 = Read Cycle Enabled.

1 = Read Cycle Disabled. However, other commands can be executed.

• Clear Read Cycle Report and Counters

Reset the Counter area from the Small or Big Input Assembly to the Read character string area to 0.

• Unlatch Outputs

Turns OFF Parallel OUTPUT1, OUTPUT2, OUTPUT3 signals.

• External Output: External Output

Turns ON Parallel OUTPUT Signal.

Bit	Signal Name
0	Output 1
1	Output 2
2	Output 3
3 - 31	Reserved




**Assembly Memory Allocation**

	<b>Member Name</b>	<b>Data Type</b>	<b>Bit Number</b>	<b>Data Length</b>	<b>Byte Offset</b>
32 bit	<b>User Defined Tag</b>	<b>DINT</b>		<b>4 Byte</b>	<b>0</b>
	UserTag_1		0	1 bit	
	UserTag_2		1	1 bit	
	UserTag_3		2	1 bit	
	UserTag_4		3	1 bit	
	UserTag_5		4	1 bit	
	UserTag_6		5	1 bit	
	UserTag_7		6	1 bit	
	UserTag_8		7	1 bit	
	UserTag_9		8	1 bit	
	UserTag_10		9	1 bit	
	UserTag_11		10	1 bit	
	UserTag_12		11	1 bit	
	UserTag_13		12	1 bit	
	UserTag_14		13	1 bit	
	UserTag_15		14	1 bit	
	UserTag_16		15	1 bit	
	UserTag_17		16	1 bit	
	UserTag_18		17	1 bit	
	UserTag_19		18	1 bit	
	UserTag_20		19	1 bit	
	UserTag_21		20	1 bit	
	UserTag_22		21	1 bit	
	UserTag_23		22	1 bit	
	UserTag_24		23	1 bit	
	UserTag_25		24	1 bit	
	UserTag_26		25	1 bit	
	UserTag_27		26	1 bit	
	UserTag_28		27	1 bit	
	UserTag_29		28	1 bit	
	UserTag_30		29	1 bit	
	UserTag_31		30	1 bit	
	UserTag_32		31	1 bit	
32 bit	<b>Commands</b>	<b>DINT</b>		<b>4 Byte</b>	<b>4</b>
	Trigger		0	1 bit	
	New Master		1	1 bit	
	Reserved		2 - 7	6 bit	
	Disable Scanning		8	1 bit	
	Reserved		9 - 15	7 bit	
	Clear Read Cycle Report and Counters		16	1 bit	
	Unlatch Outputs		17	1 bit	
	Reserved		18 - 31	14 bit	

	Member Name	Data Type	Bit Number	Data Length	Byte Offset
32 bit	<b>External Output</b>	<b>DINT</b>		<b>4 Byte</b>	<b>8</b>
	Output 1		0	1 bit	
	Output 2		1	1 bit	
	Output 3		2	1 bit	
	Reserved		3 - 31	29 bit	





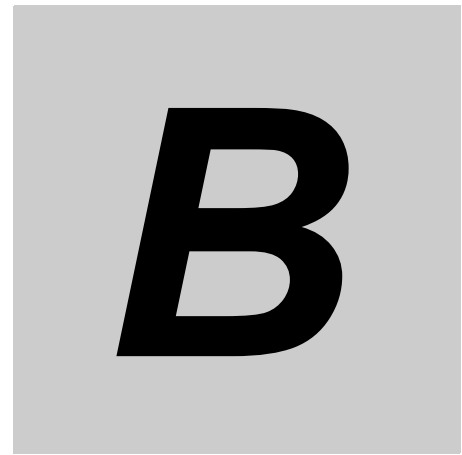

# Appendix

This section lists the commands you can use with the V430-F and the PROFINET industrial protocol.

---

<b>B-1 V430-F Input and Output Modules</b> .....	<b>B-2</b>
<b>B-2 V430-F Data Types</b> .....	<b>B-3</b>
<b>B-3 PROFINET Base Information</b> .....	<b>B-4</b>
<b>B-4 Timing Diagrams</b> .....	<b>B-5</b>

# B-1 V430 Input and Output Modules

## B-1-1 Module Types

There are 7 Input Modules and 2 Output Modules. The layout of each module and the definitions of the data in them will be shown in this appendix.

Model Item ID	Name	Total Size in Bytes	PNT21 Supported
100	Small Legacy Input Module	84	Yes
101	Big Legacy Input Module	176	Yes
102	MXL Input Module	248	Yes
103	1 Decode Input Module	500	No
104	4 Decode Input Module	500	No
105	N Decode Input Module	500	No
106	Omron Decode Input Module	442	Yes
197	Premier Output Module	4	Yes
198	Legacy Output Module	12	Yes



### Additional Information

The maximum Input CR size for the PNT21 is 450 bytes.

## Input/Output Modules

All Input/Output modules and module descriptions are the same as in Appendix A, except the following new addition: Omron Decode Input Module.

### ● Omron Decode Input ID:106

SHORT DESCRIPTION	SIZE (BYTES)
MODULE HEADER	(4)
INFO BITS	1
DIAGNOSTIC SEQUENCE COUNT	1
RESERVED	1
RESERVED	1
DEVICE STATUS	4
FAULT	4
COUNTERS	24
READ CYCLE REPORT	8
DECODE CYCLE REPORT	(398)
DECODE CYCLE REPORT TABLE	16
DECODE LENGTH	4
DECODE DATA	378

# B-2 V430-F Data Types

## B-2-1 User Data Types for Input/Output Modules Table

MODULE NAME	USER DATA TYPE NAME
SMALL LEGACY INPUT MODULE	<ul style="list-style-type: none"> <li>• Input_Legacy_Small</li> <li>• Legacy_UserTag_Echo</li> <li>• Legacy_Command_Echo</li> <li>• Legacy_External_Outputs_Echo</li> </ul>
BIG LEGACY INPUT MODULE	<ul style="list-style-type: none"> <li>• Input_Legacy_Big</li> <li>• Legacy_UserTag_Echo</li> <li>• Legacy_Command_Echo</li> <li>• Legacy_External_Outputs_Echo</li> <li>• Legacy_Input_Status</li> <li>• Legacy_Ext_Output_Status</li> <li>• Legacy_Device_Status</li> </ul>
MXL INPUT MODULE	<ul style="list-style-type: none"> <li>• Input_MXL_Decode</li> <li>• Input_Header</li> <li>• ReadCycle_Report</li> <li>• Input_MXL_Decode_Report</li> </ul>
1 DECODE INPUT MODULE	<ul style="list-style-type: none"> <li>• Input_1_Decode</li> <li>• Input_Header</li> <li>• ReadCycle_Report</li> <li>• Decode_Report_436Bytes</li> </ul>
4 DECODE INPUT MODULE	<ul style="list-style-type: none"> <li>• Input_4_Decode</li> <li>• Input_Header</li> <li>• ReadCycle_Report</li> <li>• Decode_Report_160Bytes</li> <li>• Decode_Report_72Bytes</li> </ul>
N DECODE INPUT MODULE	<ul style="list-style-type: none"> <li>• Input_N_Decode</li> <li>• Input_N_Header</li> <li>• Input_N_ReadCycle_Report</li> <li>• Decode_Report_436Bytes</li> </ul>
LEGACY OUTPUT MODULE	<ul style="list-style-type: none"> <li>• Ouput_Legacy</li> <li>• Legacy_User_Defined_Tags</li> <li>• Legacy_Cmds</li> <li>• Legacy_External_Outputs</li> </ul>
PREMIER OUTPUT MODULE	<ul style="list-style-type: none"> <li>• Premier_Cmds</li> </ul>

## B-3 PROFINET Base Information

### B-3-1 Device Identity

The V430-F PROFINET device identity information is as follows:

#### Vendor ID

The **Vendor ID** is **0x0257**.

#### Device ID

Refer to the **PROFINET Files by Firmware Version** table below to determine the correct **Device ID**.

#### Vendor Name

The **Vendor Name** is **OMRON MICROSCAN SYSTEMS, INC.**

#### Device Function

The **Device Function** is:

MainFamily = **Ident Systems**

ProductFamily = **V430-F**

### B-3-2 GSDML File

Refer to the **PROFINET Files by Firmware Version** table below to determine the correct GSDML file for your device.

### B-3-3 PROFINET Files by Firmware Version

Product	Firmware Version	GSDML File	Version	Device ID
ID-40	1.3.1.xxxx	GSDML-V2.33-Microscan-MicroHawkID40-20180208.xml	V2.33	0x3410
	2.0.0.xxxx	GSDML-V2.33-Microscan-MicroHawkID40-20180208.xml	V2.33	0x3410
	2.1.0.xxxx	GSDML-V2.34-OmronMicroscanSystemsInc-MicroHawk-ID-20200826.xml	V2.34	0x3410
V430	2.0.0.xxxx	GSDML-V2.33-Omron Microscan Systems Inc-V430-20190314.xml	V2.33	0x3411
	2.1.0.xxxx	GSDML-V2.34-OmronMicroscanSystemsInc-MicroHawk-ID-20200826.xml	V2.34	0x3410
V330	2.1.0.xxxx	GSDML-V2.34-OmronMicroscanSystemsInc-MicroHawk-ID-20200826.xml	V2.34	0x3410

### B-3-4 Connection Properties: RT Cyclic Messaging


**Cycle Time:** 4 ms

**Definition:** The GSD file contains element MinDeviceInterval, which is 128. Multiply this by 31.25  $\mu$ s. This is the cycle time. See the PROFINET GSDML specification for more information.

# B-4 Timing Diagrams



## B-4-1 Big Legacy Input Module

As the Legacy Input modules have very little user feedback, timing is limited.

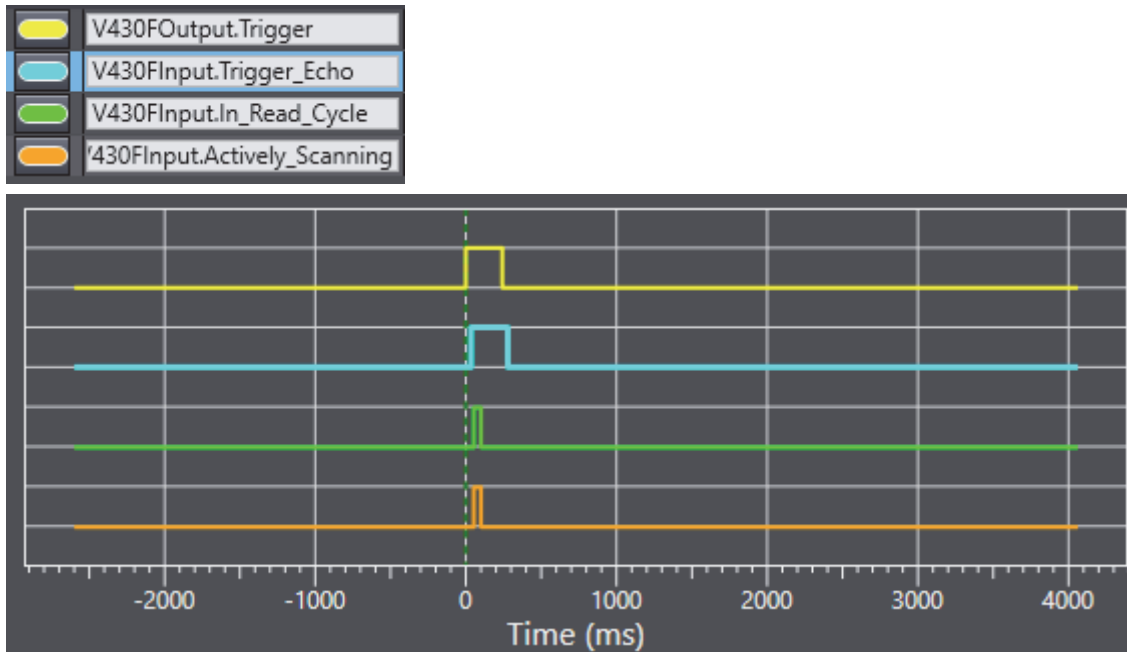

## B-4-2 Omron Decode Input Module

- In this example, the trigger is set high for 513 ms.
- The trigger was acknowledged 35 ms after trigger high and stays high 35 ms after trigger low.
- Decoding is completed and data is ready 277 ms after trigger start.

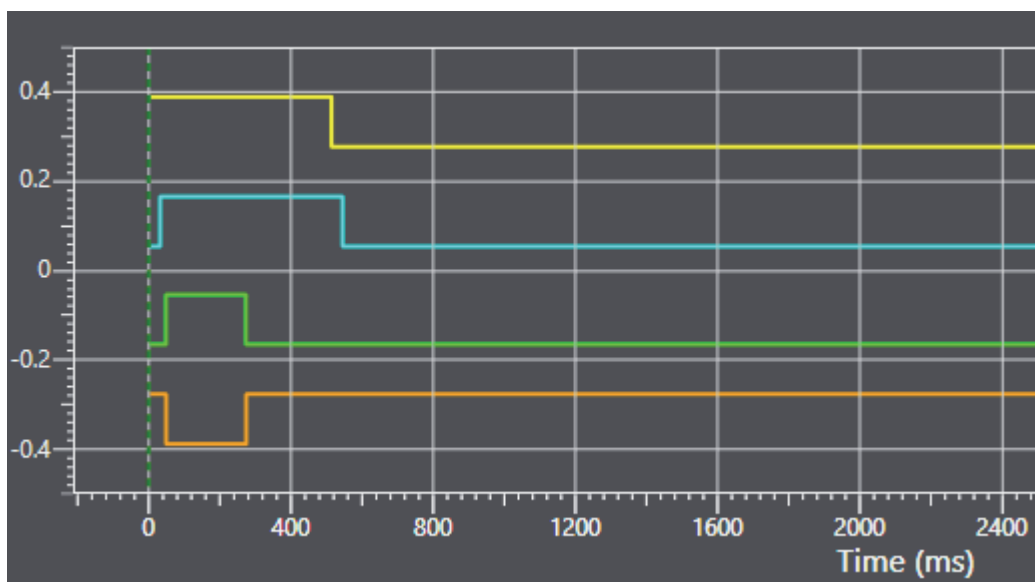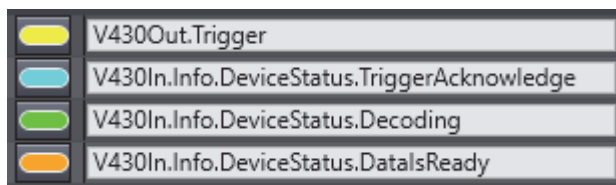



**OMRON Corporation** Industrial Automation Company  
Kyoto, JAPAN

Contact: [www.ia.omron.com](http://www.ia.omron.com)

*Regional Headquarters*

**OMRON EUROPE B.V.**

Wegalaan 67-69, 2132 JD Hoofddorp  
The Netherlands  
Tel: (31)2356-81-300/Fax: (31)2356-81-388

**OMRON ELECTRONICS LLC**

2895 Greenspoint Parkway, Suite 200  
Hoffman Estates, IL 60169 U.S.A.  
Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

**OMRON ASIA PACIFIC PTE. LTD.**

No. 438A Alexandra Road # 05-05/08 (Lobby 2),  
Alexandra Technopark,  
Singapore 119967  
Tel: (65) 6835-3011/Fax: (65) 6835-2711

**OMRON (CHINA) CO., LTD.**

Room 2211, Bank of China Tower,  
200 Yin Cheng Zhong Road,  
PuDong New Area, Shanghai, 200120, China  
Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

Authorized Distributor:

© OMRON Corporation 2020 All Rights Reserved.  
In the interest of product improvement,  
specifications are subject to change without notice.

Cat. No. **Z407-E1-03 (84-9350024-02-B)**

1020 (0719)